

Owner's Madulal RX 456 P RX 350 / RX 270 Not Fot

TABLE OF CONTENTS

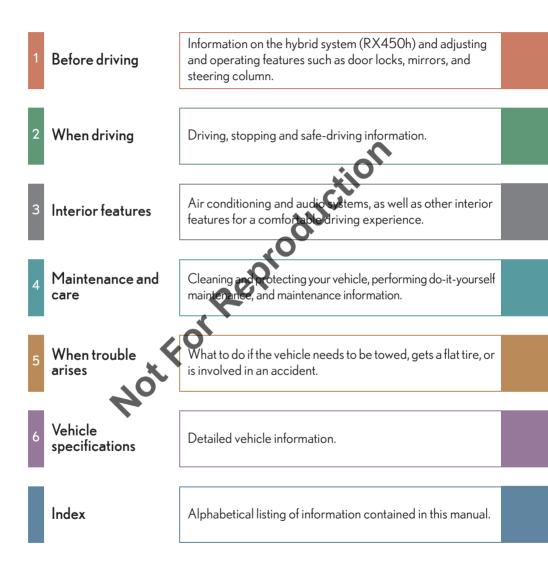


TABLE OF CONTENTS Index

For vehicles with a navigation system, refer to the "Navigation System Owner's Manual" for information regarding the equipment listed below.

- Navigation system
- Air conditioning
- Windshield wiper de-icer
- Lexus parking assist-monitor

Before driving

1-1. Hybrid system

Hybrid system	
Hybrid system precautions	
Energy monitor/consumption screen	
Hybrid vehicle driving tips	6
Key information Keys	
	1-5

1-2. Key information

Keys

1-3. Opening, closing and locking the doors Smart entry & start system 49 Audio/video system

. .

 Rear window and outside rear view mirror defogging

1-4.	Adjustable components	
	(seats, mirrors,	
	steering wheel)	
	Front seats	
	Rear seats	
	Driving position memory	
	Head restraints	95
.0	Seat belts	97
	Steering wheel	104
	Anti-glare inside rear view	
	mirror	108
	Outside rear view mirrors	111

1-5. Opening and closing the windows and moon roof

Power windows	. 114
Moon roof	. 119
Electronic sunshade	123

1-6. Refueling

Opening the fuel tank cap...... 125

1-7. Theft deterrent system

Engine immobilizer system	. 131
Immobilizer system	133
Double locking system	135
Alarm	137

1-8. Safety information

Correct driving posture	145
SRS airbags	147
Child restraint systems	158
Installing child restraints	166

When driving 2

2-1. Driving procedures

Driving procedures	~0	X
Driving the vehicle	180	2
Engine (ignition) switch	. 193	-
Power (ignition) switch	199	
EV drive mode	205	
Automatic transmission	208	
Hybrid transmission	215	
Turn signal lever	222	
Parking brake	223	
Horn	224	

2-2. Instrument cluster

Gauges and meters	225
Indicators and warning	
lights	230
Multi-information display	236
Head-up display	249

2-3.	Operating the lights and	
	windshield wipers	
	Headlight switch	254
	Fog light switch	258
	Windshield wipers and	
	washer	259
	Rear window wiper and	
$\langle \cdot \rangle$	washer	263
	Headlight cleaner switch	265

2-4. Using other driving systems

Cruise control 266
Dynamic radar cruise
control
Lexus parking assist-sensor 285
Rear view monitor system 294
Driving assist systems
All-wheel drive lock switch 309
Hill-start assist control
PCS (Pre-Crash Safety
system)

TABLE OF CONTENTS

Index

2-5. Driving information

Utility vehicle precautions (RX270/RX350)	319
Utility vehicle precautions (RX450h)	324
Cargo and luggage	
Winter driving tips	. 331
Trailer towing	334

3 Interior features

3-1. Using the air conditioning system and defogger

Automatic air conditioning	
system	344
Rear window defogger	000
switch	352
Windshield wiper de-icer	353

3-2. Using the audio system

Audio system	354
Using the radio	357
Using the CD player	360
Playing MP3 and WMA	
discs	368
Operating an iPod	376
Operating a USB memory	385
$Bluetooth^{\mathbb{R}}$ audio system	394
Using the Bluetooth [®]	
audio system	397

	Operating a Bluetooth $^{\mathbb{R}}$	
	enabled portable player	400
	Setting up a Bluetooth [®]	
	enabled portable player	403
	$Bluetooth^{ extsf{R}}$ audio system	
	setup	407
	Optimal use of the audio	
	system	408
	Using the AUX port	410
	Using the steering wheel	
	audio switches	412
	Hands-free system for	
	mobile phones	415
	Using the hands-free system	
C	(for mobile phones)	420
~	Making a phone call	426
N.	Setting a mobile phone	430
	Security and system setup	434
	Using the phone book	440

3-3. Using the interior lights

	Interior lights list	446
,	Interior lights	447
,	• Personal lights	447

3-4. Using the storage features

List of storage features	449
• Glove box	450
 Bottle holders/ 	
door pockets	451
• Cup holders	452
Console box	455
• Coin holder	.457
• Auxiliary box	457
• Under tray	458

3-5. Other interior features

Sun visors 459
Vanity mirrors
Clock 461
Outside temperature display
Multi-display light control
Power outlets 464
Heated steering wheel
Seat heaters and ventilators 468
Armrest
Coat hooks 471
Assist grips
Floor mat 473
Luggage compartment features

4 Maintenance and care

4-1. Maintenance and care

Cleaning and protecting the vehicle exterior	82
Cleaning and protecting the vehicle interior	85

4-2. Maintenance

Maintenance requirements.... 488

4-3.	Do-it-yourself maintenance	
<u>ر</u> ۲	Do-it-yourself service precautions	490
2	Hood	494
•	Positioning a floor jack	495
	Engine compartment	497
	12-volt battery	. 519
	Tires	526
	Tire inflation pressure	529
	Wheels	. 531
	Air conditioning filter	533
	Electronic key battery	536
	Checking and replacing fuses (RX270/RX350)	538
	Checking and replacing fuses (RX450h)	550
	Light bulbs	567

Index

When trouble arises

5-1. Essential information

Emergency flashers	586
If your vehicle needs to be towed	587
If you think something is	
wrong	594
Fuel pump shut off system	595

5-2. Steps to take in an

emergency

lf a warning light turns on or a warning buzzer	
sounds	596
If a warning message is displayed	602
If you have a flat tire	627
If the engine will not start	640
If the hybrid system will not start	642
If the shift lever cannot be shifted from P	644
If you lose your keys	645
If the electronic key does not operate properly	646
If the vehicle 12-volt battery is discharged (RX270/RX350)	650
、 · · · · · · · · · · · · · · · · · · ·	

If the vehicle 12-volt battery is discharged (RX450h)	
lf your vehicle overheats (RX270/RX350)	660
lf your vehicle overheats (RX450h)	663
If the vehicle becomes stuck	668
If your vehicle has to be stopped in an emergency.	670
<u> </u>	

6 Vehicle specifications 6-1 Specifications

Maintenance data	
(fuel, oil level, etc.)	674
Fuel information	694


6-2. Customization

Customizable features	695
Items to initialize	708

Index


Abbreviation list	710
Alphabetical index	711
What to do if	725


NotforReproduction

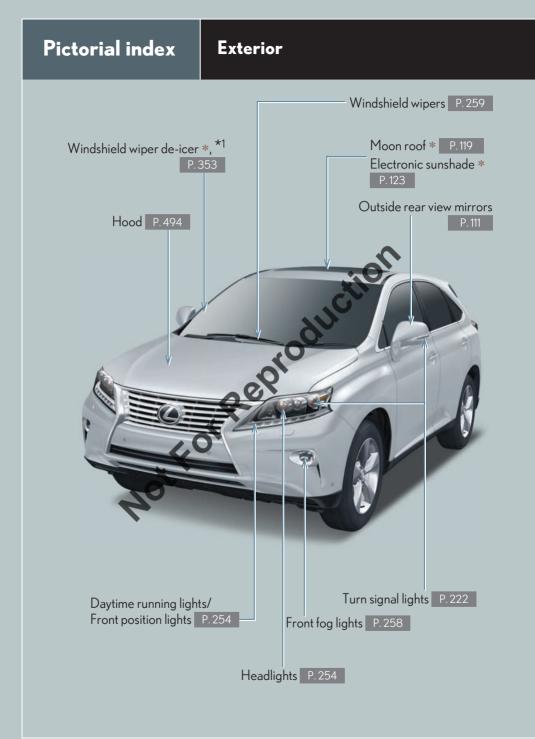





*: If equipped *1: For vehicles with a navigation system, refer to the "Navigation System Owner's Manual".

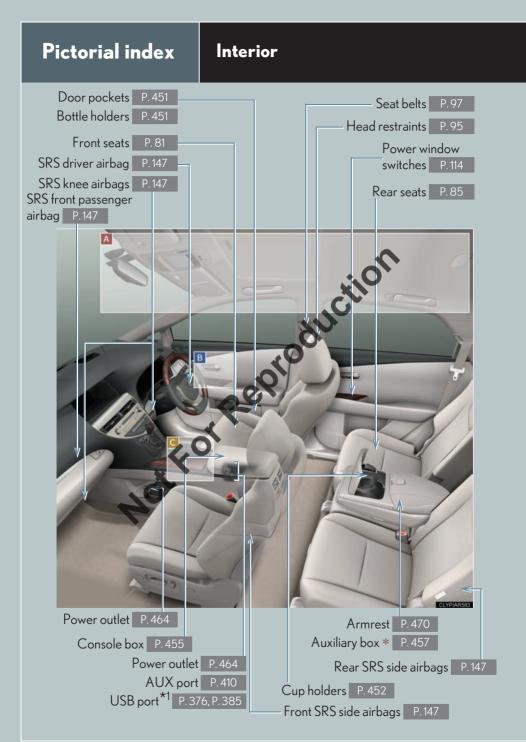

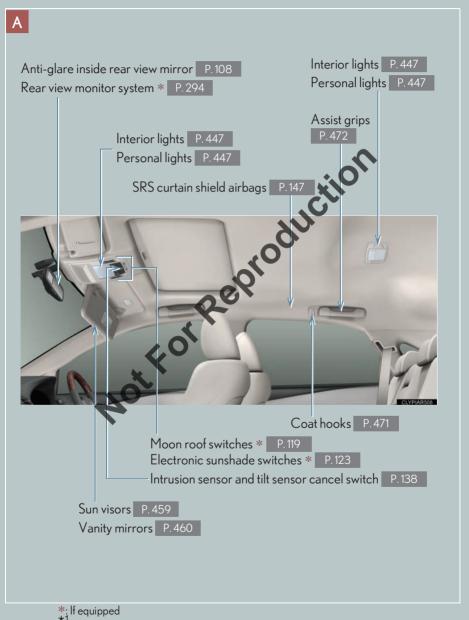


*1: For vehicles with a navigation system, refer to the "Navigation System Owner's Manual".

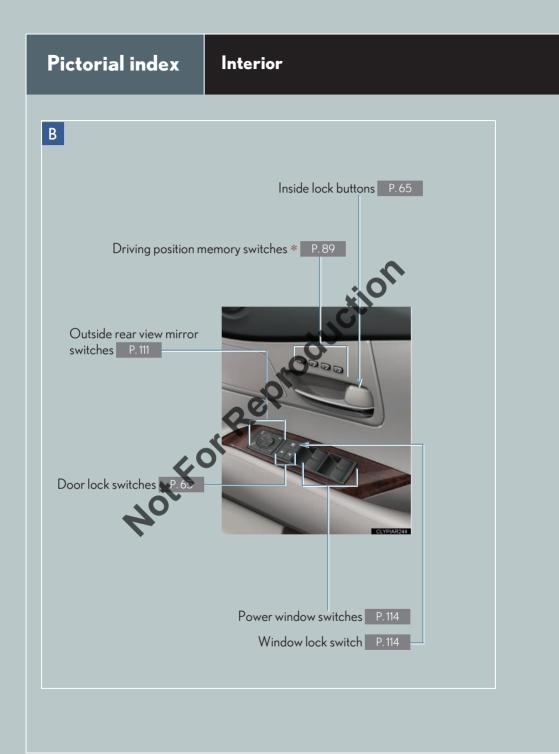

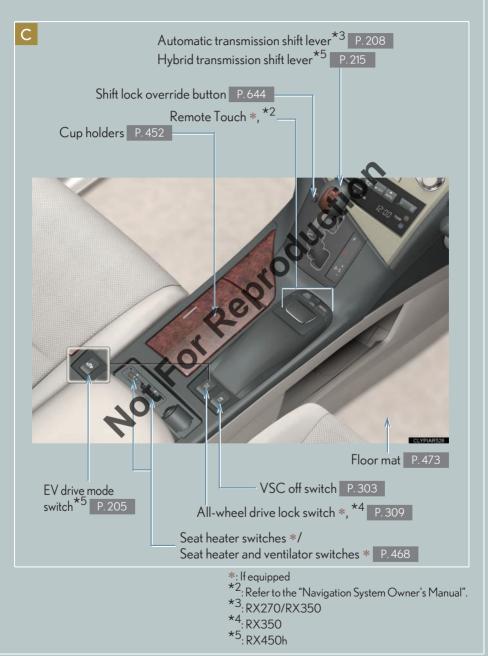

Pictorial index	Instrument panel
Glove box P.450 Power back door m P.71	Horn P.224
Tilt and te	Headlight switch P. 254 Hescopic steering I switch P. 104 Headlight switch P. 254 Turn signal lever P. 222 Fog light switch P. 258

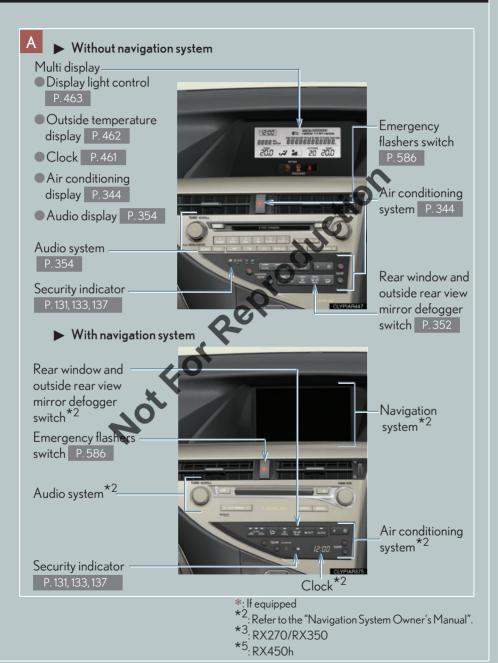


Pictorial index

Instrument panel





- *: If equipped *1: For vehicles with a navigation system, refer to the "Navigation System Owner's Manual".
- *2: Refer to the "Navigation System Owner's Manual". *4: RX350

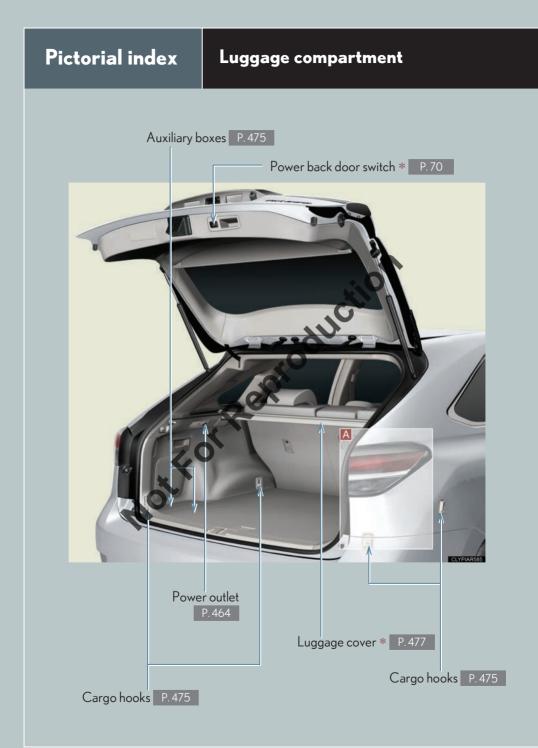



For your information

Main Owner's Manual

Please note that this manual covers all models and all equipment, including options. Therefore, you may find some explanations for equipment not installed on your vehicle.

All specifications provided in this manual are current at the time of printing. However, because of the Lexus policy of continual product improvement, we reserve the right to make changes at any time without notice.

Depending on specifications, the vehicle shown in the illustrations may differ from your vehicle in terms of color and equipment.

Accessories, spare parts and modification of your Lexus

A wide variety of non-genuine spare parts and accessories for Lexus vehicles are currently available in the market. Using these spare parts and accessories which are not genuine Lexus produces may adversely affect the safety of your vehicle, even though these parts may be approved by certain authorities in your country. Toyota Motor Corporation therefore cannot accept any liability or guarantee spare parts and accessories which are not genuine Lexus products, nor for replacement or installation involving such parts.

This vehicle should not be modified with non-genuine Lexus products. Modification with non-genuine Lexus products may affect performance, safety or durability, and may even violate governmental regulations. In addition, damage or performance problems resulting from the modification may not be covered under warranty.

Installation of a mobile two-way radio system

The installation of a mobile two-way radio system in your vehicle could affect electronic systems such as:

- Hybrid system (RX450h)
- Multiport fuel injection system/sequential multiport fuel injection system
- Cruise control system
- Dynamic radar cruise control system
- Anti-lock brake system
- SRS airbag system
- Seat belt pretensioner system

Be sure to check with your Lexus dealer for precautionary measures or special instructions regarding installation of a mobile two-way radio system.

RX450h: High voltage parts and cables on the world vehicles emit approximately the same amount of electromagnetic waves as the conventional gasoline powered vehicles or home electronic appliances despite of their electromagnetic shielding.

RX450h: Unwanted noise may occurrent the reception of the mobile two-way radio.

NotFork

Vehicle data recordings

Your Lexus is equipped with several sophisticated computers that will record certain data, such as:

- Engine speed
- Electric motor speed (traction motor speed) (RX450h)
- Accelerator status
- Brake status
- Vehicle speed
- Shift position
- Hybrid battery (traction battery) status (RX450h)

The recorded data varies according to the vehicle grade level and options with which it is equipped. Furthermore, these computers do not record conversations, sounds or pictures.

• Data usage

Lexus may use the data recorded in these computers to diagnose malfunctions, conduct research and development, and improve quality.

Lexus will not disclose the recorded data to a third party except:

- With the consent of the vehicle owner or with the consent of the lessee if the vehicle is leased
- In response to an official request by the police, a court of law or a government agency
- For use by Lexus in a law suit
- For research purposes where the data is not tied to a specific vehicle or vehicle owner

Event data recorder

This vehicle is equipped with an event data recorder (EDR). The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an air bag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less.

The EDR in this vehicle is designed to record such data as:

- · How various systems in your vehicle were operating;
- How far (if at all) the driver was depressing the accelerator and/or brake pedal; and,
- How fast the vehicle was traveling.

These data can help provide a better understanding of the circumstances in which crashes and injuries occur.

NOTE: EDR data are recorded by your vehicle only if a non-trivial crash situation occurs; no data are recorded by the EDR under normal driving conditions and no personal data (e.g., name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement, could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed in addition to the vehicle manufacturer, other parties, such as law enforcement, the have the special equipment, can read the information if they have access to the vehicle or the EDR.



Disclosure of the EDR data

Lexus will not disclose the data recorded in an EDR to a third party except when:

- An agreement from the vehicle's owner (or the lessee for a leased vehicle) is obtained
- In response to an official request by the police, a court of law or a government agency
- For use by Lexus in a law suit

However, if necessary, Lexus may:

- Use the data for research on vehicle safety performance
- Disclose the data to a third party for research purposes without disclosing information about the specific vehicle or vehicle owner

Scrapping of your Lexus

The SRS airbag and seat belt pretensioner devices in your Lexus contain explosive chemicals. If the vehicle is scrapped with the airbags and seat belt pretensioners left as they are, this may cause an accident such as irre. Be sure to have the systems of the SRS airbag and seat belt pretensioner removed and disposed of by a qualified service shop or by your Lexus dealer before you scrap your vehicle.

General precautions while driving

Driving under the influence: Never drive your vehicle when under the influence of alcohol or drugs that have impaired your ability to operate your vehicle. Alcohol and certain drugs delay reaction time, impair judgment and reduce coordination, which could lead to an accident that could result in death or serious injury.

Defensive driving: Always drive defensively. Anticipate mistakes that other drivers or pedestrians might make and be ready to avoid accidents.

Driver distraction: Always give your full attention to driving. Anything that distracts the driver, such as adjusting controls, talking on a cellular phone or reading can result in a collision with resulting death or serious injury to you, your occupants or others.

General precaution regarding children's safety

Never leave children unattended in the vehicle, and never allow children to have or use the key.

Children may be able to start the vehicle or shift the vehicle into neutral. There is also a danger that children may injure themselves by playing with the windows, the moon roof, or other features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

Hybrid battery (traction battery) (RX450h)

Never resell, handover or modify the hybrid battery. To prevent accidents, hybrid batteries that have been removed from a disposed vehicle are collected through Lexus dealers. Do not dispose of the battery yourself.

Unless the battery is properly collected, the following may occur, resulting in death or serious injury:

- The hybrid battery may be illegally disposed of or dumped, and someone may touch a high voltage part, resulting in an electric shock.
- The hybrid battery is intended to be used exclusively with your hybrid vehicle. If the hybrid battery is used outside of your vehicle or modified in any way, accidents such as electric shock, heat generation, smoke generation, an explosion and electrolyte leakage may occur.

When reselling or handing over your vehicle, the possibility of an accident is extremely high because the person receiving the vehicle may not be aware of these dangers.

Disposal of the hybrid battery (traction battery) (RX450h)

If your vehicle is disposed of without the hybrid battery having been removed, there is a danger of serious electric shock if high voltage parts, cables and their connectors are touched. In the event that your vehicle must be disposed of, the hybrid battery must be disposed of by your Lexus dealer or a qualified service shop. If the hybrid battery is not disposed of properly, it may cause electric shock that can result in death or serious injury.

Symbols used throughout this manual

Cautions & Notices

A CAUTION

This is a warning against something which, if ignored, may cause injury to people. You are informed about what you must or must not do in order to reduce the risk of injury to vourself and others.

NOTICE

ction This is a warning against something which, if ignored, may cause damage to the vehicle or its equipment. You are informed about what you must or must not do in order to avoid or reduce the risk of damage to your Lexus and its equipment.

Symbols used in illustrations



Safety symbol

The symbol of a circle with a slash through it means "Do not", do this", or "Do not let this happen".



Arrows indicating operations

- Indicates the action (pushing, turning, etc.) used to operate switches and other devices.
- \Box Indicates the outcome of an operation (e.g. a lid opens).

1-1. Hybrid system

Hybrid system	28
Hybrid system precautions	31
Energy monitor/consumption	
screen	37
Hybrid vehicle driving tips	42

1-2. Key information

Keys	Δ	4
1 x y 3		

1-3. Opening, closing and locking the doors

Smart entry & start system	49
Wireless remote control	. 61
Side doors	65
Back door	68

1-4. Adjustatic components (seats, mirrors,

steering wheel)

Front seats	. 81
Rear seats	85
Driving position memory	89
Head restraints	95
Seat belts	. 97
Steering wheel	104

Anti-glare inside rear view	
mirror	108
Outside rear view mirrors	111

1-5. Opening and closing the windows and moon roof Power wind way 114

Moon rock	19
Electronic sunshade	23

6 Refueling

Opening the fuel tank cap.... 125

1-7. Theft deterrent system

Engine immobilizer	
system	131
Immobilizer system	133
Double locking system	135
Alarm	137


1-8. Safety information

Correct driving posture	145
SRS airbags	147
Child restraint systems	158
Installing child restraints	166


1-1. Hybrid system Hybrid system (RX450h)

Your vehicle is a hybrid vehicle. It has characteristics different from conventional vehicles. Be sure you are closely familiar with the characteristics of your vehicle, and operate with care.

The hybrid system combines the use of a gasoline engine and an electric motor (traction motor) according to driving conditions, improving fuel efficiency and reducing exhaust emissions.

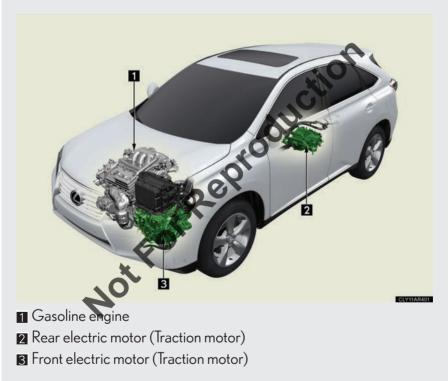

Before driving

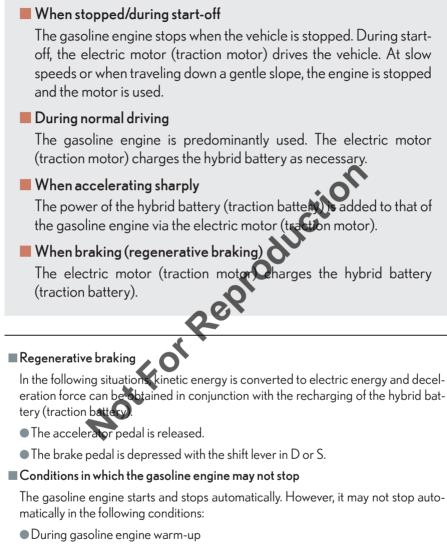

- During hybrid battery (traction battery) charging
- When the temperature of the hybrid battery (traction battery) is high or low
- When the heater is switched on

Charging the hybrid battery (traction battery)

• As the gasoline engine charges the hybrid battery (traction battery), the battery does not need to be charged from an outside source. However, if the vehicle is left parked for a long time the hybrid battery will slowly discharge. For this reason, be sure to drive the vehicle at least once every few months for at least 30 minutes. If the hybrid battery becomes fully discharged and you are unable to jump-start the vehicle with the 12-volt battery, contact your Lexus dealer.

 If the shift lever is in N, the hybrid battery (traction battery) will not be charged. Always put the shift lever in P when the vehicle is stopped. When driving in heavy traffic, operate the vehicle with the shift lever in D or S to avoid discharging the battery.

After the 12-volt battery has discharged or has been changed or removed

The gasoline engine may not stop even if the vehicle is running on the hybrid battery (traction battery). If this continues for a few days, contact your Lexus dealer.

Sounds and vibrations specific to a hybrid vehice

There may be no engine sounds or vibration even though the vehicle is able to move. Always shift the shift lever to P when parked.

The following sounds or vibrations may cour when the hybrid system is operating, and are not a malfunction:


- Motor sounds may be heard from the engine compartment.
- Sounds may be heard from the hybrid battery (traction battery) under the rear seat when the hybrid system starts or stops.
- Sounds from the h brid system may be heard when the back door is open.
- Sounds may be heard from the hybrid transmission when the engine is started or stopped, or while the engine is idling.
- Engine sounds may be heard when accelerating sharply.
- Sounds may be heard due to regenerative braking when the brake pedal is depressed and accelerator is loosened.
- Vibration may be felt when the gasoline engine starts or stops.
- Cooling fan sounds may be heard from the air intake vents under the rear seat.

Maintenance, repair, recycling, and disposal

Contact your Lexus dealer regarding maintenance, repair, recycling and disposal. Do not dispose of the vehicle yourself.

1-1. Hybrid system Hybrid system precautions (RX450h)

Take care when handling the hybrid system, as it contains a high voltage system (about 650V at maximum) as well as parts that become extremely hot when the hybrid system is operating. Obey the caution labels attached to the vehicle.

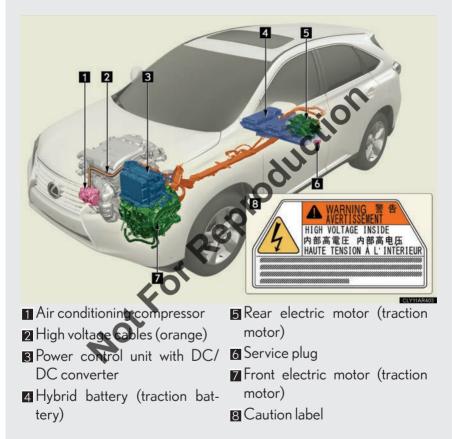

Hybrid battery air vents



There are air intake vents under the rear seats for the purpose of cooling the hybrid battery (traction battery). If the vents become blocked, the hybrid battery may overheat, leading to a reduction in hybrid battery output.

Emergency shut off system

When a certain level of impact is detected by the impact sensor, the emergency shut off system blocks off the high voltage current and stops the fuel pump to minimize the risk of electrocution and fuel leakage. If the emergency shut off system activates, your vehicle will not restart. To restart the hybrid system, contact your Lexus dealer.

Notfort

Hybrid warning message

A message is automatically displayed when a malfunction occurs in the hybrid system or an improper operation is attempted.



If a warning message is shown on the multi-information display, read the message and follow the instructions. (\rightarrow P. 602)



If a warning light comes on or a warning message is displayed, or the 12-volt battery is disconnected

The hybrid system may not start. In that case, try to start the system again. If the "READY" indicator does not come on contact your Lexus dealer.

Electromagnetic waves

- High voltage parts and cables on the hybrid vehicles incorporate electromagnetic shielding, and therefore emit approximately the same amount of electromagnetic waves as conventional gasoline powered vehicles or home electronic appliances.
- Your vehicle may cause sound interference in some third party-produced radio parts.

Running out of fuel

When the vehicle has run out of fuel and the hybrid system cannot be started, refuel the vehicle with at least enough gasoline to make the low fuel level warning light $(\rightarrow P. 599)$ go off. If there is only a small amount of fuel, the hybrid system may not be able to start. (The minimum amount of fuel to add to make the low fuel level warning light go out is about 10.1 L [2.7 gal. 2.2 Imp. gal], when the vehicle is on a level surface. This value may vary when the vehicle is on a slope.)

Hybrid battery (traction battery)

The hybrid battery (traction battery) has a limited service life. The lifespan of the hybrid battery (traction battery) can change in accordance with driving style and driving conditions.

 High voltage and high temperature precaution
 The vehicle has high voltage DC and AC and AC high voltage is very shock that to be a shock th The vehicle has high voltage DC and AC systems as well as a 12-volt system. DC and AC high voltage is very dangerous and can cause severe burns and electric

- Never touch, disassemble, remove or replace the high voltage parts, cables and their connectors.
- The hybrid system will become hot after starting as the system uses high voltage. Be careful of both the high voltage and the high temperature, and always obey the caution labels attached to the vehicle.



Never try to open the service plug access hole located under the rear seat. The service plug is used only when the vehicle is serviced and is subject to high voltage.

CAUTION

Road accident cautions

Observe the following precautions to reduce the risk of death or serious injury:

- Pull your vehicle off the road, shift the shift lever to P, apply the parking brake, and turn the hybrid system off.
- Do not touch the high voltage parts, cables and connectors.
- If electric wires are exposed inside or outside your vehicle, an electric shock may occur. Never touch exposed electric wires.
- If a fluid leak occurs, do not touch it as it may be strong alkaline electrolyte from the hybrid battery (traction battery). If it comes into contact with your skin or eyes, wash it off immediately with a large amount of water or, if possible, boric acid solution. Seek immediate medical attention.
- If a fire occurs in the hybrid vehicle, leave the relucte as soon as possible. Never use a fire extinguisher that is not meant for electric fires. Using even a small amount of water may be dangerous.
- Carefully inspect the ground under the vehicle. If you find that liquid has leaked onto the ground, the fuel system may have been damaged. Leave the vehicle as soon as possible

Nickel-metal hydride battery

Your vehicle contains a sealed nickel-metal hydride battery. If disposed of improperly, it is hazardous to the environment and there is a risk of severe burns and electrical shock that may result in death or serious injury.

Emergency shut off system

Carefully check to see if there are exposed high voltage parts or cables. Never touch the parts or cables. (\rightarrow P. 31)

NOTICE


Hybrid battery air vents

- Do not put foreign objects over the air vents. The hybrid battery (traction battery) may overheat or lose power and be damaged.
- Clean the air vents regularly to prevent the hybrid battery (traction battery) from overheating.
- Do not wet or allow foreign substances to enter the air vents as this may cause a short circuit and damage the hybrid battery (traction battery).
- Do not carry large amount of water such as an aquarium into the vehicle. If water spills onto the hybrid battery (traction battery), the batter) may be damaged. Have the vehicle inspected by your Lexus dealer.


36

1-1. Hybrid system Energy monitor/consumption screen (RX450h)

You can view the status of your hybrid system on the multi-information display and the navigation system screen.

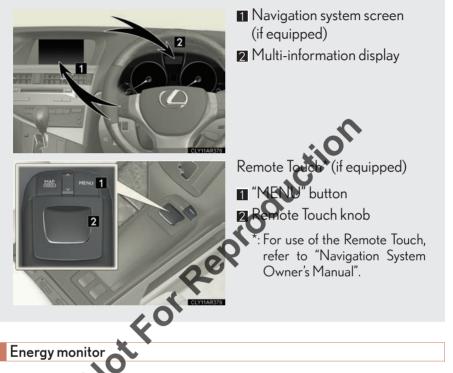

► Navigation system screen (if equipped)

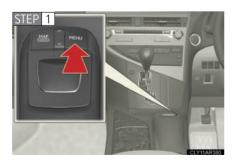

Press the "MENU" button on the Remote Touch.

Before driving




Select "Info".

If the "Trip information" or "Past record" screen is displayed, select "Energy".

► Multi-information display



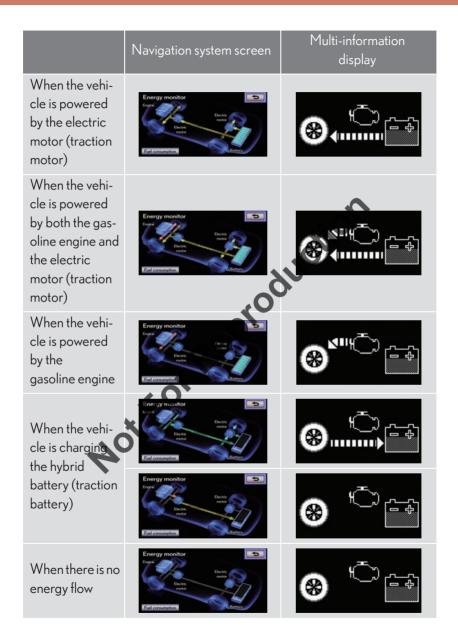

	Navigation system screen		Multi-information display		
Hybrid battery	Low	Full	Low		Full
(traction battery) status	$\bigwedge \rightarrow$			\leftrightarrow	- +


These images are examples only, and may vary slightly from actual conditions.

Consumption (vehicles with a navigation system)

Trip information

Press the "MENU" button on the Remote Touchand select "Info".

If the "Trip information" screen does not appear, select "Fuel consumption" on the "Energy monitor" screen or "Trip information" on the "Past record" screen.

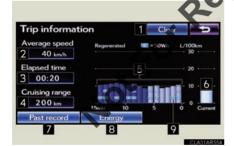

- Reset the trip information data
- 2 Average vehicle speed
- 3 Elapsed time
- 4 Cruising range
- Previous fuel consumption per minute
- 6 Current fuel consumption
- "Past record" screen appears
- E "Energy monitor" screen appears
- Regenerated energy


E: One symbol indicates 50 Wh.

The image is example only, and may vary slightly from actual conditions.

Past record

Press the "MENU" button on the Remote Touch and select "Info".

If the "Past record" screen does not appear, select "Fuel consumption" on the "Energy monitor" screen or "Past record" on the "Trip information" screen.

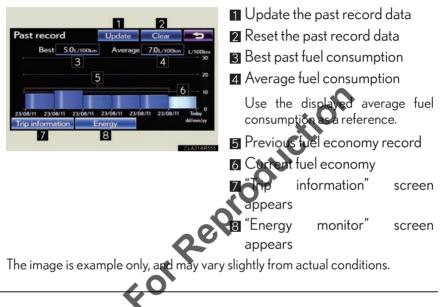

Updating the past record data

Selecting "Update on the "Past record" screen will update the past record data. Also, the average fuel consumption displayed in the multi-information display will be reset at the same time.

1-1. Hybrid system Hybrid vehicle driving tips (RX450h)

For economical and ecological driving, pay attention to the following points:

Use of Hybrid System Indicator

More Eco-friendly driving is possible by keeping Hybrid System Indicator within Eco area.

When braking the vehicle

Make sure to operate the brakes gently and in good time. A greater amount of electrical energy can be retained when slowing down.

Delays

Repeated acceleration and deceleration, as well as long waits at traffic lights, will lead to bad fuel consumption. Check traffic reports before leaving and avoid delays as much as possible. When encountering a delay, gently release the brake pedal to allow the vehicle to move forward slightly while avoiding overuse of the accelerator pedal. Doing so can help control excessive gasoline consumption.

Highway driving

Control your speed and keep at a constant speed. Also, before stopping at a toll booth or similar, allow plenty of time to release the accelerator and gently apply the brakes. A greater amount of electrical energy can be retained when slowing down.

Air conditioning

Use the air conditioning only when necessary. Doing so can help control excessive gasoline consumption.

In summer: In high temperatures, use the recirculated air mode. Doing so will help to reduce the burden on the air conditioning and reduce fuel consumption as well.

In winter: Because the gasoline engine will not automatically cut out until the gasoline engine and the interior of the vehicle are warm, it will consume fuel. Also, fuel consumption can be improved by avoiding overuse of the heater.

Checking tire inflation pressure

Make sure to check the tire inflation pressure frequently. Improper tire inflation pressure can cause poor fuel consumption. Also, as snow tires can cause large amounts of friction, their use on dry roads can lead to poor fuel consumption. Use a tire that is appropriate for the season.

Luggage

Carrying heavy luggage can lead to poor fuel consumption. Avoid carrying unnecessary luggage. Installing a large roof rack can also cause poor fuel consumption.

Warming up before driving


Since the gasoline engine starts up and cuts out automatically when cold, warming up the engine is unnecessary. Moreover, frequently driving short distances will cause the engine to repeated warm up, which can lead to poor fuel consumption.

1-2. Key information **Keys**

The following keys are provided with the vehicle.



Using the mechanical key

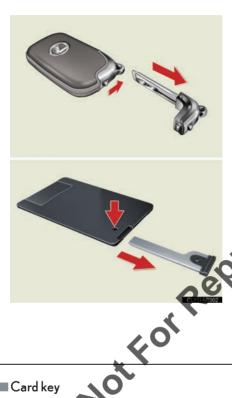

To take out the mechanical key:

Electronic keys: Slide the release lever and take the key out.

Card key: Press the lock release button and take the key out.

If the key cannot be inserted in a lock cylinder, turn it over and reattempt to insert it. Mechanical keys with grooves on one side can be inserted in one direction only.

ter using the mechanical key, store it in the electronic key. Carry the mechanical key together with the electronic key. If the electronic key battery is depleted or the entry function does not operate properly, you will need the mechanical key. $(\rightarrow P. 646)$

Card key

- The mechanical key that is stored inside the card key should be used only if a problem arises, such as when the key does not operate properly.
- If it is difficult to take out the mechanical key, press down the lock release button using a pen tip etc. If it is still difficult to pull it out, use a coin etc.



To store the mechanical key in the card key, insert it while pressing the lock release button.



 If the battery cover is not installed and the battery falls out or if the battery was removed because the key got wet, reinstall the battery with the positive terminal facing the Lexus emblem.

The card key is not waterproof.

When required to leave the vehicle's key with a parking attendant

Lock the glove box as circumstances demand. (\rightarrow P. 450) Remove the mechanical key for your own use and provide the attendant with the electronic key only.

Key number plate

Keep the plate in a safe place such as your wallet not in the vehicle. In the event that a mechanical key is lost, a new key can be made at your Lexus dealer using the key number plate. (\rightarrow P. 645)

When riding in an aircraft

When bringing an electronic key onto an aircraft, make sure you do not press any buttons on the electronic key while inside the aircraft cabin. If you are carrying an electronic key in your bag etc ensure that the buttons are not likely to be pressed accidentally. Pressing a button may cause the electronic key to emit radio waves that could interfere with the operation of the aircraft.



🕂 NOTICE

To prevent key damage

Observe the following:

- Do not drop the keys, subject them to strong shocks or bend them.
- Do not expose the keys to high temperatures for a long period of time.
- Do not get the keys wet or wash them in an ultrasonic washer etc.
- Do not attach metallic or magnetic materials to the keys or place the keys close to such materials.
- Do not disassemble the keys.
- Do not attach a sticker or anything else to the surface of the electronic key.
- Do not place the keys near objects that produce magnetic fields, such as TVs, audio systems, glass top ranges, or medical electrical equipment, such as low-frequency therapy equipment.
- Carrying the electronic key on your person

Carry the electronic key 10 cm (3.9 in) or more away from electric appliances that are turned on. Radio waves emitted from electric appliances within 10 cm (3.9 in.) of the electronic key may interfere with the key, causing the key to not function properly.

In case of a smart entry & start system malfunction or other key-related problems

Take your vehicle with all the electronic keys provided with your vehicle, including the card key, to your lexus dealer.

When a vehicle key is lost

If the key remains lost, the risk of vehicle theft increases significantly. Visit your Lexus dealer immediately with all remaining electronic keys and the card key that was provided with your vehicle.

NOTICE

Precautions for handling the card key

- Do not apply excess force when inserting the mechanical key into the card key. Doing so may damage the card key.
- If the battery or card key terminals get wet, the battery may corrode and the card key may stop working.

If the key is dropped into water, or if drinking water etc. is spilled on the key, immediately remove the battery cover and wipe the battery and terminals. (To remove the battery cover, lightly grasp and pull it.) If the battery is corroded, have your Lexus dealer replace the battery.

- Do not crush the battery cover or use a screwdriver to remove the battery cover. Forcibly removing the battery cover may bend or damage the key.
- If the battery cover is frequently removed, the battery cover may become loose.
- When installing the battery, make sure to check the direction of the battery. Installing the battery in the wrong direction may cause the battery to deplete rapidly.

• The surface of the card key man be damaged, or its coating may peel off in the following situations:

- The card key is carried together with hard objects, such as coins and keys.
- The card key is scraped with a sharp object, such as the tip of a mechanical pencil.
- The surface of the card key is wiped with thinner or benzene.

1-3. Opening, closing and locking the doors Smart entry & start system


The following operations can be performed simply by carrying the electronic key (including the card key) on your person, for example in your pocket.

(The driver should always carry the electronic key.)



RX450h: Starts the hybrid system (\rightarrow P. 199)


Unlocking and locking the side doors (front door handles only)

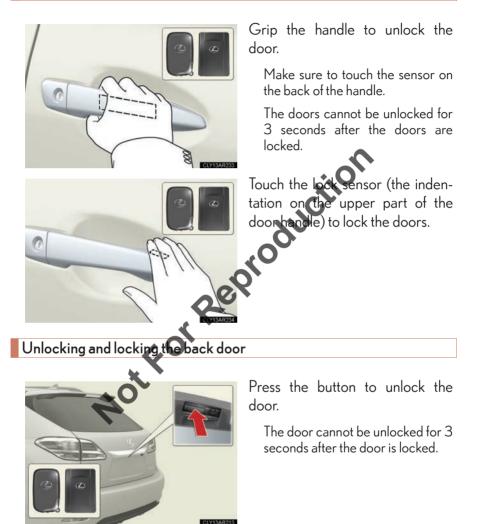



Press the button to lock the door.

Antenna location and effective range

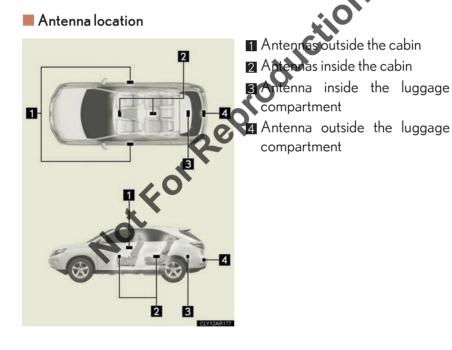

51

Effective range (areas within which the electronic key is detected)



When locking or unlocking the doors

The system can be operated when the electronic key is within about 0.7 m (2.3 ft.) of an outside door handle. (Only the doors detecting the key can be operated.)

RX270/RX350: When starting the engine or "ENGINE changing STOP" switch NotforRepro modes RX450h: When starting the hybrid system or chang-


"POWER" ina switch modes

The system can be operated when the electronic key is inside the vehicle.

Operation signals

A buzzer sounds and the emergency flashers flash to indicate that the doors have been locked/unlocked. (Locked: Once; Unlocked: Twice)

When the door cannot be locked by the lock sensor on the upper part of the door handle

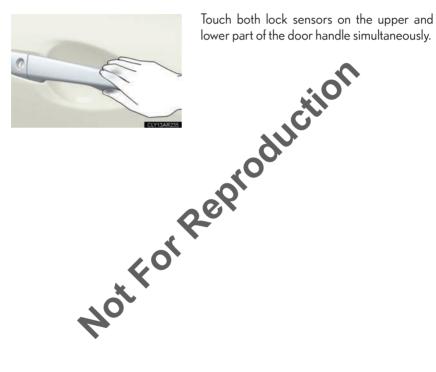

Alarms and warning indicators

A combination of exterior and interior alarms as well as warning messages shown on the multi-information display is used to prevent theft of the vehicle and accidents resulting from erroneous operation. Take appropriate measures in response to any warning message on the multi-information display. (\rightarrow P. 602)

The following table describes circumstances and correction procedures when only alarms are sounded.

Alarm	Situation	Correction procedure
Exterior alarm sounds once for 5 seconds.	An attempt was made to lock the vehicle while a door was open.	Close all of the doors and lock the doors again.
Interior alarm pings repeatedly	 RX270/RX350 The "ENGINE START STOP" switch was turned to ACCESSORY mode while the driver's door is open (The driver's door was opened when the 'ENGINE START STOP' switch is in ACCES- SORY mode.) RX450h The "POWER" switch was turned to ACCESSORY mode while the driver's door is open. (The driver's door was opened when the "POWER" switch is in ACCESSORY mode.) 	Close the driver's door.

► RX270/RX350 The "ENGINE START	Alarm	Situation	Correction procedure
Interior alarm pings repeatedly STOP" switch was turned off while the driver's door is open. ► RX450h The "POWER" switch was turned off while the driver's door is open.		The "ENGINE START STOP" switch was turned off while the driver's door is open. ▶ RX450h The "POWER" switch was turned off while the driver's	Close the driver's door.

Security feature

If a door is not opened within approximately 30 seconds after the vehicle is unlocked, the security feature automatically locks the vehicle again.

Battery-saving function

If the vehicle is parked for a long period of time, the battery-saving function is activated in order to prevent the vehicle 12 out battery from being discharged and the electronic key battery from being depleted.

- In the following circumstances, unlocking the vehicle using the entry function may take longer than usual
 - When the entry function has not been used for 5 days or more
 - When the electronic key has been left within approximately 2 m (6 ft.) of the vehicle for 10 minutes or more
- If the entry function has not been used for 14 days or more, the vehicle cannot be unlocked by a door other than the driver's door. To unlock the vehicle, grip the driver's door handle or use the wireless remote control or the mechanical key.

The system will resume operation when:

- The vehicle is locked using the lock sensor.
- The vehicle is locked/unlocked using the wireless remote control function. $(\rightarrow P. 61)$
- The vehicle is locked/unlocked using the mechanical key. (\rightarrow P. 646)

Conditions affecting operation

The smart entry & start system uses weak radio waves. In the following situations, the communication between the electronic key and the vehicle may be affected. preventing the smart entry & start system, wireless remote control and immobilizer system from operating properly. (Ways of coping: \rightarrow P. 646)

- When the electronic key battery is depleted
- Near a TV tower, electric power plant, gas station, radio station, large display. airport or other facility that generates strong radio waves or electrical noise
- When carrying a portable radio, cellular phone, cordless phone or other wireless communication devices

When the electronic key is in contact with, or is covered by the following metallic objects
Cards to which aluminum foil is attached
Cigarette boxes that have aluminum foil inside
Metallic wallets or bags

- pro
- Coins
- Hand warmers made of metal
- Media such as CDs and DVDs
- When multiple electronic keys are in the vicinity
- When another wireless key (that emits radio waves) is being used nearby
- When carrying the electronic key together with the following devices that emit radio waves
 - Another vehices electronic key or a wireless key that emits radio waves
 - Personal computers or personal digital assistants (PDAs)
 - Digital audio players
 - Portable game systems
- If window tint with a metallic content or metallic objects are attached to the rear window

Note for the entry function

- Even when the electronic key is within the effective range (detection areas), the system may not operate properly in the following cases:
 - The electronic key is too close to the window or outside door handle, near the ground, or in a high place when the doors are locked or unlocked.
 - The electronic key is on the instrument panel, luggage cover or floor or in the glove box.
- Do not leave the electronic key on top of the instrument panel or near the door pockets when exiting the vehicle. Depending on the radio wave reception conditions, it may be detected by the antenna outside the cabin and the door will become lockable from the outside, possibly trapping the electronic key inside the vehicle.
- As long as the electronic key is within the effective range, the doors may be locked or unlocked by anyone. However, only the doors detecting the electronic key can be used to unlock the vehicle.
- The doors may lock or unlock if the electronic key is within the effective range and a large amount of water splashes on the door handle, such as in the rain or in a car wash. The doors will automatically be locked after approximately 30 seconds if a door is not opened and closed.
- If the wireless remote control is used to lock the doors when the electronic key is near the vehicle, there is a possibility that the door may not be unlocked by the entry function. (Use the wireless remote control to unlock the doors.)



Notes for locking the doors

- Touching the door lock sensor while wearing gloves may delay or prevent lock operation. Remove the gloves and touch the lock sensor again.
- If the door handle becomes wet while the electronic key is within the effective range, the door may lock and unlock repeatedly. Place the key in a position 2 m (6 ft.) or more separate from the vehicle while the vehicle is being washed. (Take care to ensure that the key is not stolen.)
- If the electronic key is inside the vehicle and a door handle becomes wet during a car wash, a message may be shown on the multi-information display and a buzzer will sound outside the vehicle. To turn off the alarm, lock all the doors.
- The lock sensor may not work properly if it comes into contact with ice, snow, mud, etc. Clean the lock sensor and attempt to operate it again, or use the lock sensor on the lower part of the door handle.
- Fingernails may scrape against the door during operation of the door handle. Be careful not to injure fingernails or damage the surface of the door.

Notes for the unlocking function

- Gripping the door handle when wearing glove may not unlock the door.
- A sudden approach to the effective range or door handle may prevent the doors from being unlocked. In this case, return the door handle to the original position and check that the doors unlock before pulling the door handle again.
- If there is another electronic key in the detection area, it may take slightly longer to unlock the doors after the door handle is gripped.

When the vehicle shot driven for extended periods

- To prevent their of the vehicle, do not leave the electronic key within 2 m (6 ft.) of the vehicle.
- The smart entry & start system can be deactivated in advance. $(\rightarrow P. 695)$

To operate the system properly

Make sure to carry the electronic key when operating the system. Do not get the electronic key too close to the vehicle when operating the system from the outside of the vehicle.

Depending on the position and holding condition of the electronic key, the key may not be detected correctly and the system may not operate properly. (The alarm may go off accidentally, or the door lock prevention function may not operate.)

■ If the smart entry & start system does not operate properly

- Locking and unlocking the doors: Use the mechanical key. $(\rightarrow P. 646)$
- RX270/RX350: Starting the engine: →P. 647
- RX450h: Starting the hybrid system: \rightarrow P. 648

Electronic key battery depletion

- The standard battery life is 1 to 2 years. (The card key battery life is about a year and a half.)
- RX270/RX350: If the battery becomes low, an alarm will sound in the cabin when the engine stops. (→P. 615)
- RX450h: If the battery becomes low, an alarm will sound in the cabin when the hybrid system stops. (\rightarrow P. 615)
- As the electronic key always receives radio waves the battery will become depleted even if the electronic key is not used. The following symptoms indicate that the electronic key battery may be depleted. Deplace the battery when necessary. (→P. 536)
 - The smart entry & start system or the vareless remote control does not operate.
 - The detection area becomes smaller.
 - The LED indicator on the key surface does not turn on.
- To avoid serious deterioration, do not leave the electronic key within 1 m (3 ft.) of the following electrical appliances that produce a magnetic field:
 - TVs
 - Personal computers
 - Cellular phones, cordless phones and battery chargers
 - · Recharging cellular phones or cordless phones
 - Glass top ranges
 - Table lamps

When the electronic key battery is fully depleted

→P. 536

Customization

Settings (e.g. smart entry & start system) can be changed. (Customizable features \rightarrow P. 695)

CAUTION

Caution regarding interference with electronic devices

People with implanted pacemakers or cardiac defibrillators should maintain a reasonable distance between themselves and the smart entry & start system antennas. (\rightarrow P. 52)

The radio waves may affect the operation of such devices. If necessary, the entry function can be disabled. Ask your Lexus dealer for details, such as the frequency of radio waves and timing of emitting the radio waves. Then, consult your doctor to see if you should disable the entry function.

•User of any electrical medical device other than implanted bacemakers and implanted cardiac defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.

Ask your Lexus dealer for details for disabling the entry function.



1-3. Opening, closing and locking the doors Wireless remote control

The wireless remote control can be used to lock and unlock the vehicle. It also opens and closes the back door.

► Vehicles without a power back door




- Locks all the doors
- Closes the windows and moon roof (press and hold)*
- B Unlocks all the doors

Pressing the button unlocks the driver's door. Pressing the but-ton again within 3 seconds unlocks the other doors.

4 Opens the windows and moon roof (press and hold)* NotForRep 5 Sounds the alarm (press and hold) (\rightarrow P. 63)

This setting must be customized at your Lexus dealer.

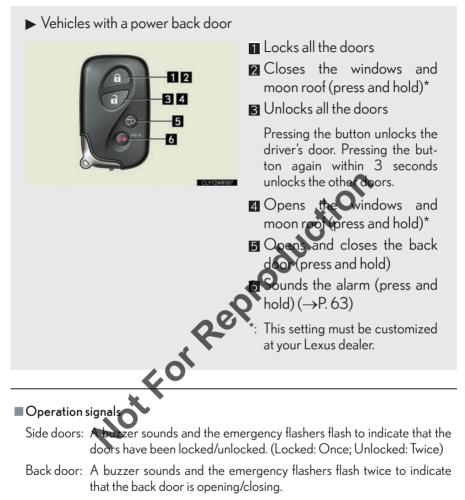

Windows and moon roof: A buzzer sounds to indicate that the windows and moon roof are operating.

Door lock buzzer

If an attempt to lock the doors is made when a door is not fully closed, a buzzer sounds continuously. Fully close the door to stop the buzzer, and lock the vehicle once more.

Security feature

→P. 55

Panic mode



When ((1) is pressed for longer than about one second, an alarm will sound intermittently and the vehicle lights will flash to deter any person from trying to break into or damage your vehicle.

To stop the alarm, press any button on the electronic key.

Back door operation

The back door can be opened even if it blocked. Lock the back door again when you leave the vehicle. The back door will not lock automatically after it has been opened and then closed.

Alarm

Using the wireless remote control to lock the doors will set the alarm system. (\rightarrow P. 137)

Reversing the operation of the power back door

Pressing the wreless remote control switch again while the power back door is operating will cause the operation to reverse.

Conditions affecting operation

→P. 56

Before driving

If the wireless remote control does not operate properly

Locking and unlocking the doors: Use the mechanical key. $(\rightarrow P. 646)$

Electronic key battery depletion

 $\rightarrow P.59$

When the electronic key battery is fully depleted

 $\rightarrow P.536$

Customization

Settings (e.g. door unlocking function) can be changed. ritor (Customizable features \rightarrow P. 695)

A CAUTION

When closing the windows or moon roof using whereas remote control

Observe the following precautions. Failing to do so may result in death or serious injury.

• Check to make sure that all passengers do not have any part of their body in a position where it could be caugh when a window or moon roof is being operated.

windows and moon roof operation, never let a To prevent inadvertent small child have and use the wireless remote control.

Jam protection function

• Never try jamming any part of your body to activate the jam protection function intentionally.

The jam protection function may not work if something gets caught just before the window or moon roof fully closes.

1-3. Opening, closing and locking the doors **Side doors**

The vehicle can be locked and unlocked using the entry function, wireless remote control or door lock switches.



Locking the front doors from the outside without a key

STEP 1 Move the inside lock button to the lock position.

STEP 2 Close the door while pulling the door handle.

▶ RX270/RX350

The door cannot be locked if the "ENGINE START STOP" switch is in ACCESSORY or IGNITION ON mode, or the electronic key is left inside the vehicle.

The key may not be detected correctly and the door may be ocked.

▶ RX450h

The door cannot be locked if the "POWER" switch is in ACCESSORY or ON mode, or the electronic key is left inside the vehicle.


The key may not be detected correctly a the door may be locked.

Rear door child-protector lock




The door cannot be opened from inside the vehicle when the lock is set.

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

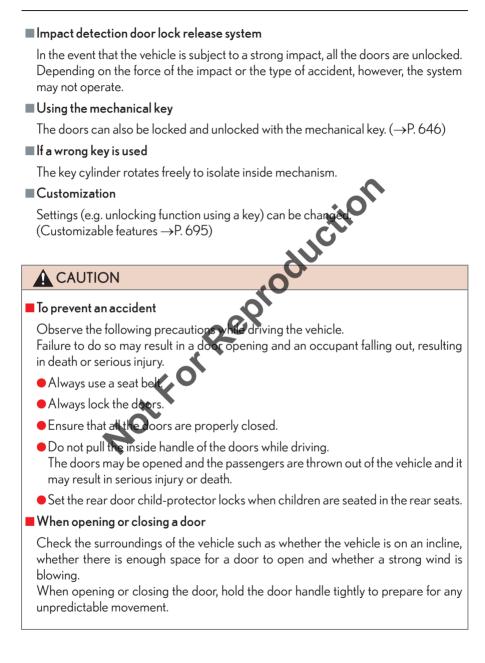

1-3. Opening, closing and locking the doors Back door

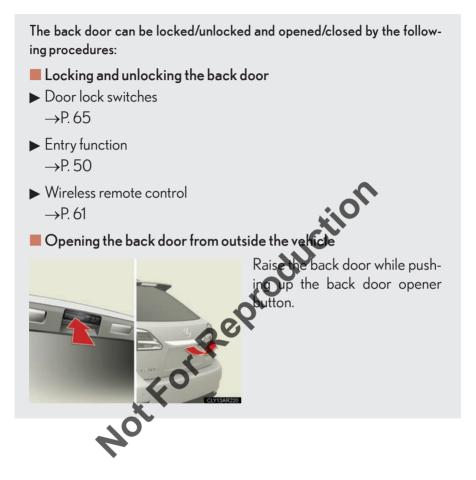

Opening the back door from outside the vehicle (vehicles with a power back door)


▶ Using the back door opener button*



When the back door is unlocked: Press the back door opener button.

When the back door is locked: While carrying the electronic key on your person, press and hold the back door opener button or press it twice.

- *: This setting must be customized at your Lexus dealer.
- ► Using the wireless remote control →P. 61
- Opening the back door from inside the vehicle (vehicles with a power back door)

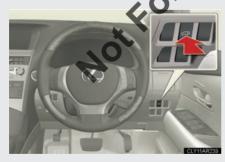

Press and hold the switch to open/close the back door.

Pressing the switch again while the power back door is operating will cause the operation to reverse.

Power back door switch (vehicles with a power back door)



Press the switch to close the back door.

Pressing the switch again while the power back door is closing will cause it to open again.

However, the reverse operation cannot be performed for the first second after automatic operation starts even if the switch is pressed again.


When closing the back door



Lower the back door using the back door handle, and make sure to push the back door down from the outside to close it.

Canceling the power back door system (vehicles with a power back door)

Turn off the main switch in the glove box to disable the power back door system.

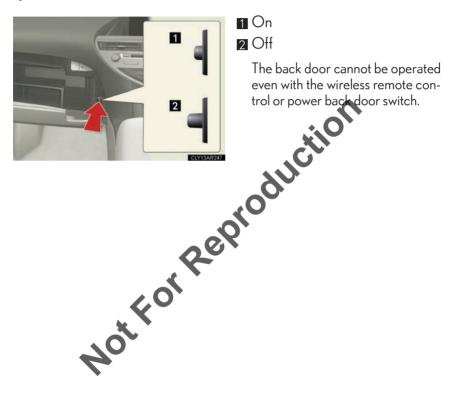

The power back door can be operated when (vehicles with a power back door)

- The back door is unlocked. (Except for using the back door opener button* or wireless remote control, when the power back door can be operated even if it is locked.)
- The power back door main switch is on.
- ▶ RX270/RX350
- To open the power back door when the "ENGINE START STOP" switch is in IGNITION ON mode, the power back door main switch must be on, the vehicle speed must be lower than 3 km/h (1 mph) and the shift lawer must be in P. (When using the back door opener button only)
- The "ENGINE START STOP" switch is turned off. (When using the wireless remote control only)
- ▶ RX450h
- To open the power back door when the "POWER" switch is in ON mode, the power back door main switch must be on the vehicle speed must be lower than 3 km/h (1 mph) and the shift lever miss be in P. (When using the back door opener button only)
- The "POWER" switch is turned off. (When using the wireless remote control only)
- *: This setting must be customized at your Lexus dealer.
- Luggage compartment lights



The luggage compartment lights turn on when the back door is opened with the luggage compartment light switch on.

When the "ENGINE START STOP" switch (RX270/RX350) or the "POWER" switch (RX450h) is turned off, the lights will go off automatically after 20 minutes.

Back door closer (vehicles with a power back door)

In the event that the back door is left slightly open, the back door closer will automatically close it to the fully closed position.

- RX270/RX350: The back door closer will operate regardless of the "ENGINE START STOP" switch mode.
- RX450h: The back door closer will operate regardless of "POWER" switch mode.
- The back door can be opened while the back door closer is operating by pressing the back door opener button.

Power back door operation (vehicles with a power back door)

- A buzzer sounds and the emergency flashers flash twice to indicate that the back door is opening/closing.
- The back door can still be opened and closed manually, even when the power back door main switch is off.
- Pressing the back door opener button while the power back door system is operating will cause the back door to switch to manual operation.
- If anything obstructs the power back door while it is closing/opening, a buzzer will sound and the back door will automatically operate in the opposite direction.
- If two or more successive attempts are made to close the back door, a buzzer will sound and the back door will switch to manual operation.

Jam protection function (vehicles with a power back door)




Sensors are attached to the left and right sides of the power back door. If these sensors detect an obstruction while the power back door is closing, the jam protection function will return the door to the fully open position.

After the back door has been opened and then closed

Lock the back door as the back door will not lock automatically.

■ If the back door opener is inoperative

The back door can be opened from the inside.

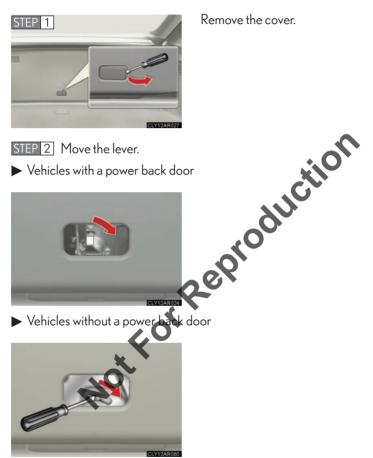

When reconnecting the 12-volt battery or changing a fuse while the back door is open:

To enable the power back door to operate properly, initialize the system by completely closing the back door manually. If the 12-volt battery is reconnected or a fuse is changed while the back door is closed, initializing the system is not necessary.

Caution while driving

• Keep the back door closed while driving.

If the back door is left open, it may hit nearby objects while driving or luggage may be unexpectedly thrown out, causing an accident.

In addition, exhaust gases may enter the vehicle, causing death or a serious health hazard. Make sure to close the back door before driving.

• Before driving the vehicle, make sure that the back door is fully closed. If the back door is not fully closed, it may open unexpectedly while driving causing an accident.

• Never let anyone sit in the luggage compartment. In the event of sudden braking or a collision, they are susceptible to death or serious injury.

When children are in the vehicle

Observe the following precautions. Failure to do so may result in death or serious hidry

• Do not leave children alone in the luggage compartment.

If a child is accidentally locked in the upgage compartment, they could have heat exhaustion.

• Do not allow a child to open or close the back door.

Doing so may cause the back door to move unexpectedly, or cause the child's hands, head, or neck to be caught by the closing back door, which may result in death or serious inverse of the child.

Operating the back door

Observe the following precautions.

Failure to do so may cause parts of the body to be caught, resulting in death or serious injury.

- Remove any heavy loads, such as snow and ice, from the back door before opening it. Failure to do so may cause the back door to fall closed again after it is opened.
- When opening or closing the back door, thoroughly check to make sure the surrounding area is safe.
- If anyone is in the vicinity, make sure they are safe and let them know that the back door is about to open or close.

• Use caution when opening or closing the back door in windy weather as it may move abruptly in strong wind.



- The back door may fall if it is not opened fully. It is more difficult to open or close the back door on an incline than on a level surface, so beware of the back door unexpectedly opening or closing by itself. Make sure that the back door is fully open and secure before using the luggage compartment.
- When closing the back door, take extra care to prevent four fingers etc. from being caught.

• When closing the back door, make sure to press toghtly on its outer surface. If the back door handle is used to fully close the back door, it may result in hands or arms being caught.

• Do not pull on the back door damper stay to close the back door, and do not hang on the back door damper stay.

Doing so may cause hands to be caught or the back door damper stay to break, causing an accident

• If a bicycle carrier or similar heavy object is attached to the back door, it may fall closed again after being opened, causing someone's hands, head or neck to be caught and injured. When installing an accessory part to the back door, using a genuine Lexus part is recommended.

CAUTION

Back door closer



In the event that the back door is left slightly open, the back door closer will automatically close it to the fully closed position. It takes several seconds before the back door closer begins to operate. Be careful not to catch fingers or anything else in the back door, as this may cause bone fractures or other serious inturies.

• Use caution when using the back door closer as it still operates when the power back door system is cancelled.

Power back door

Observe the following precautions when operating the power back door. Failure to do so may cause death or serious miury.

- Check the safety of the surrounding area to make sure there are no obstacles or anything that could cause any or our belongings to get caught.
- If anyone is in the vicinity, make sure they are safe and let them know that the back door is about to open or close.
- If the power back door system is turned off with the main switch while the back door is operating automatically, the automatic operation is stopped. The back door then has to be operated manually. Take extra care when on an incline, as the back door may open or close unexpectedly.
- If the operating conditions of the power back door are no longer met, a buzzer may sound and the back door may stop opening or closing. The back door then has to be operated manually. Take extra care when on an incline, as the back door may open or close abruptly.
- On an incline, the back door may fall after it opens. Make sure the back door is fully open and secure.

- In the following situations, the power back door may detect an abnormality and automatic operation may be stopped. In this case, the back door has to be operated manually. Take extra care when on an incline, as the back door may open or close abruptly.
 - When the back door contacts an obstacle
 - RX270/RX350: When the 12-volt battery voltage suddenly drops, such as when the "ENGINE START STOP" switch is turned to IGNITION ON mode or the engine is started during automatic operation
 - RX450h: When the 12-volt battery voltage suddenly drops, such as when the "POWER" switch is turned to ON mode or the hybrid system is started during automatic operation
- If a bicycle carrier or similar heavy object is attached to the back door, the power back door may not operate, causing itself to malturction, or the back door may fall closed again after being opened, causing someone's hands, head or neck to be caught and injured. When installing an accessory part to the back door, using a genuine Lexus part is recommended

Jam protection function

Observe the following precautions.

Failure to do so may cause death or serious injury.

- Be careful while the jam protection function is operating. Being hit by the back door may result in an injury.
- Although the back door stops closing when the jam protection function detects an object, take extra care as you may still be injured if part of your body is already caught.
- If anything obstructs the power back door while it is closing, the jam protection function will cause the back door to automatically operate in the opposite direction. However, be careful not to jam body parts in the doorframe, as an injury may result.
- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets caught just before the back door fully closes. Be careful not to catch fingers or anything else.

- The jam protection function may not work depending on the shape of the object that is caught. Be careful not to catch fingers or anything else.
- The sensors located on the right and left sides of the power back door detect obstructions and prevent them from becoming jammed in the door. Some objects may not be detected depending on their shape or how they are jammed. Be careful not to get fingers or other body parts caught in the back door while it is operating as this may result in a serious injury.

<u> NOTICE</u>

Back door damper stays

The back door is equipped with damper stays that hold the back door in place.

Observe the following precautions.

Failure to do so may cause damage to the back door damper stay, resulting in malfunction.



Do not attach any foreign objects, such as stickers, plastic sheets, or adhesives to the damper stay rod.

ction

- Do not touch the damper stay rod with gloves or other fabric items.
- Do not attach any accessories other than genuine Lexus parts to the back door.
- Do not place your hand on the damper stay or apply lateral forces to it.


To prevent back door closer malfunction

- Do not apply excessive force to the back door while the back door closer is operating.
- If the back door is opened and closed repeatedly in a short amount of time, the back door closer may stop operating. In this case, manually open the back door once and wait for a while before attempting to close it again.


NOTICE

To prevent damage to the power back door

- Make sure that there is no ice between the back door and frame that would prevent movement of the back door. Operating the power back door when excessive load is present on the back door may cause a malfunction.
- Do not apply excessive force to the back door while the power back door is operating.
- Take care not to damage the sensors (installed on the right and left edges of the power back door) with a knife or other sharp object. If the sensor is disconnected, the power back door will not operate in automatic operation
- When manually closing the back door immediately after the power back door

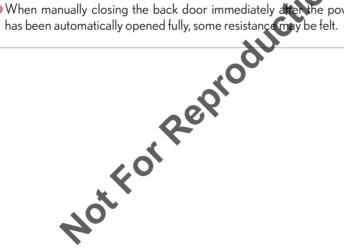

1-4. Adjustable components (seats, mirrors, steering wheel) Front seats

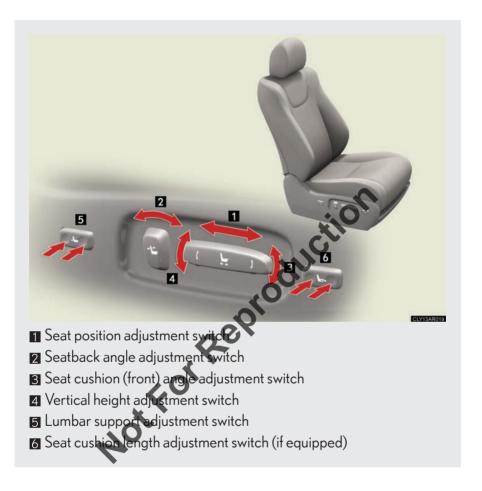


Flattening the front seatbacks

Before flattening the front seatbacks

Slide the rear seats as far back as possible. $(\rightarrow P. 85)$

Flattening the front seatbacks

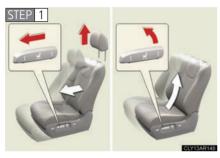

Move the front seat forward, raise the seat, and remove the head restraint. $(\rightarrow P. 95)$

After returning the seat to its original position, make sure to replace the head restraint.

Move the seatback angle adjustment switch backward to flatten the seatback.



Active head restraints




When the occupant's lower back presses against the seatback during a rear-end collision, the head restraint moves slightly forward and upward to help reduce the risk of whiplash to the seat occupant.

tion.

Active head restraints


Even small forces applied to the seatback may cause the head restraint to move. Pushing up a locked head restraint forcibly may oppear the head restraint inner structure. These do not indicate problems.

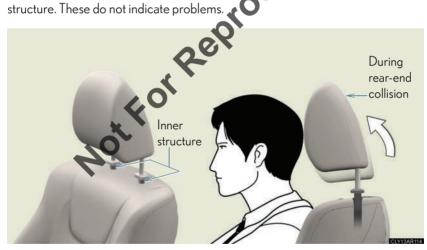

CAUTION Seat adjustment • To reduce the risk of sliding under the lap belt during a collision, do not recline the seat more than necessary. If the seat is too reclined, the lap belt may slide past the hips and apply restraint forces directly to the abdomen, or your neck may contact the shoulder belt, increasing the risk of death or serious injury in the event of an accident. • Adjustments should not be made while driving as the seat may unexpectedly move and cause the driver to lose control of the vehicle. Do not allow passengers to ride on the flattened seat.

While driving


1-4. Adjustable components (seats, mirrors, steering wheel) **Rear seats**

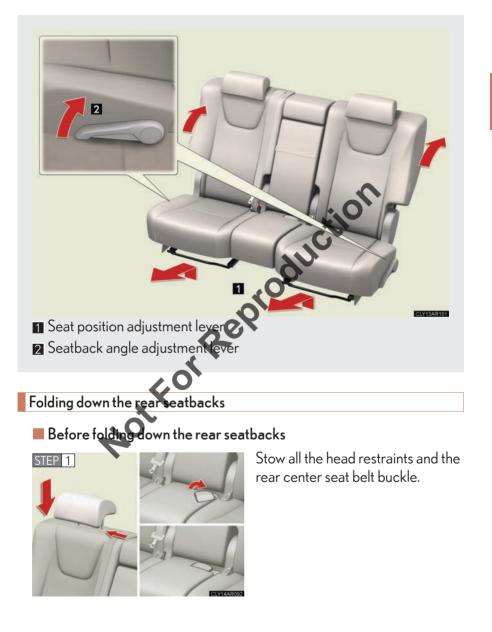



Stow the seat belts inside the rear seat side pockets.

When not in use, the seat belts should be stored inside the rear seat side pockets at all times.

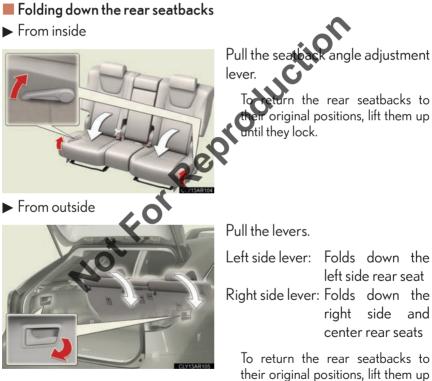

until they lock.

Folding down the rear center seatback



Pull the center seatback angle lever behind the seatback and fold the seatback down.

To return the rear center seatback to its original position, lift it up until it locks.

When folding the rear seatbacks down

- Ubserve the following precautions. Failure to do so may result in death or serious injuty Do not fold the seatbacks down while driven Do not fold seatbacks down the seats. • Do not fold seatbacks down while passengers are seated or luggage is placed on
- Stop the vehicle on level ground set the parking brake and shift the shift lever to Ρ.
- After folding the seatback, lightly move the seat back and forth to lock it in place.
- Do not allow anyone to sit on a folded seatback or in the luggage compartment while driving

• Do not allow children to enter the luggage compartment.

Seat adjustment

• To reduce the risk of sliding under the lap belt during a collision, do not recline the seat more than necessary.

If the seat is too reclined, the lap belt may slide past the hips and apply restraint forces directly to the abdomen, or your neck may contact the shoulder belt. increasing the risk of death or serious injury in the event of an accident.

• Adjustments should not be made while driving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.

CAUTION

After returning the rear seatback to the upright position

Observe the following precautions.

Failure to do so may result in death or serious injury.

- Make sure the seatback is securely locked by pushing it forward and rearward on the top.
- Check that the seat belts are not twisted or caught in the seatback.

Stowing the center seat belt buckle

Stowing the center seat belt buckle Before folding down the rear seatbacks, stow the center seat belt buckle to prevent it from becoming caught in the seatbacks.

1-4. Adjustable components (seats, mirrors, steering wheel) **Driving position memory***

Your preferred driving position (the position of the driver's seat, steering wheel and outside rear view mirrors) can be memorized and recalled with the touch of a button. It is also possible to set this function to activate automatically when the doors are unlocked.

Three different driving positions can be entered into memory.


On some models, the same buttons are found on the front passenger's side, allowing the position of the front passenger's seat to be memorized.

Entering a position to memory

STEP 1 RX270/RX350: Turn the "ENGINE START STOP" switch to IGNITION ON mode.

RX450h: Turn the "POWER" switch to Mmode.

STEP 2 Adjust the driver's seat, steering where and outside rear view mirrors to the desired positions.

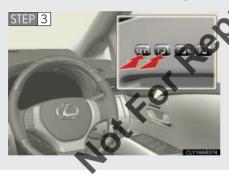

Press the "SET" button, then within 3 seconds press button "1", "2" or "3" until the signal beeps.

If the selected button has already been preset, the previously recorded position will be overwritten. Before driving



Linking driving position memory with door unlock operation (driver's side only)

Record your driving position to button "1", "2" or "3" before performing the following:

Carry only the key (including the card key) to which you want to link the driving position. If 2 or more keys are in the vehicle, the driving position cannot be linked properly.

STEP 1 RX270/RX350: Shift the shift lever to P and close the driver's door. Turn the "ENGINE START STOP" switch to IGNITION ON mode.

RX450h: Shift the shift lever to P and close the driver's door. Turn the "POWER" switch to ON mode.




Press the desired button ("1", "2" or "30) to recall the position. Then, while keep pressing the button, press the driver's door lock switches (either lock or unlock) until the signal beeps.

The driving position is recalled when the driver's door is unlocked using the entry function or wireless remote control and the driver's door is opened. Before driving

Power easy access system (driver's side only)

When the driver enters and exits the vehicle, the driver's seat and steering wheel will automatically perform the following operations:

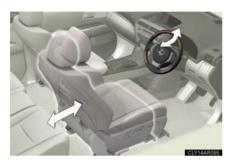

NotForRei

Exiting the vehicle: When all of the following actions have been performed, the steering wheel will move up and back to the point farthest away from the driver and the seat will move backward (auto away function).

- The shift lever has been shifted to P
- The "ENGINE START STOP" witch (RX270/RX350) or "POWER" switch (RX450h) has been turned off
 - The driver's seat belt has been unfastened

Entering the vehicle: When either of the following actions has been performed, the steering wheel will move toward the driver and seat will move forward (auto return function):

- The "ENGINE START STOP" switch (RX270/RX350) or "POWER" switch (RX450h) has been turned to ACCESSORY mode
- The driver's seat belt has been fastened

When driving position memory is linked with door unlock operation

▶ RX270/RX350

If the driver's door is opened, the driver's seat will move toward the memorized position but stop slightly beforehand to allow easy access to the vehicle.

Turning the "ENGINE START STOP" switch to ACCESSORY mode or fastening the driver's seat belt moves the seat fully into the memorized position.

▶ RX450h

If the driver's door is opened, the driver's seat will move toward the memorized position but stop slightly beforehand to allow easy access to the vehicle.

Turning the "POWER" switch to ACCESSORY mode or fastening the driver's seat belt moves the seat fully into the memorized position.

Canceling the linked door unlock operation

STEP 1 RX270/RX350: Turn the "ENGINE STARTSTOP" switch to IGNITION ON mode and close the driver's door

RX450h: Turn the "POWER" switch to ON mode and close the driver's door.

- STEP 2 While pressing the "SET betton, press the driver's door lock switches (either lock or unlock) until the signal beeps.
- Operating the driving position memory after turning the "ENGINE START STOP" switch off (RX270/RX350)

Memorized positions (except for the steering wheel position) can be activated up to 180 seconds after the driver's door is opened and another 60 seconds after it is closed again, even after turning the "ENGINE START STOP" switch off.

Operating the driving position memory after turning the "POWER" switch off (RX450h)

Memorized positions (except for the steering wheel position) can be activated up to 180 seconds after the driver's door is opened and another 60 seconds after it is closed again, even after turning the "POWER" switch off.

Stopping seat position operation part-way through

Perform any of the following operations:

- Press the "SET" button.
- Press button "1", "2", or "3".
- Adjust the seat using the switches (only cancels seat position recall).
- Adjust the steering wheel using the tilt and telescopic steering control switch (only cancels steering wheel position recall).

Correct seat position

When the seat is in the most forward or most backward position, and the seat is being moved in those directions, the system may not correctly recognize the current position and the memorized position will not be correctly recalled.

The auto away function for exiting the driver seat

If the seat is already close to the rearmost position the auto away function may not operate when the driver exits the vehicle.

Customization


The distance that the driver's seat moves backward during the auto away function can be changed. (Customizable features \rightarrow P. 695)

CAUTION

Seat adjustment caution

Take care during seat adjustment so that the seat does not strike the rear passenger or squeeze your body against the steering wheel.

1-4. Adjustable components (seats, mirrors, steering wheel) Head restraints

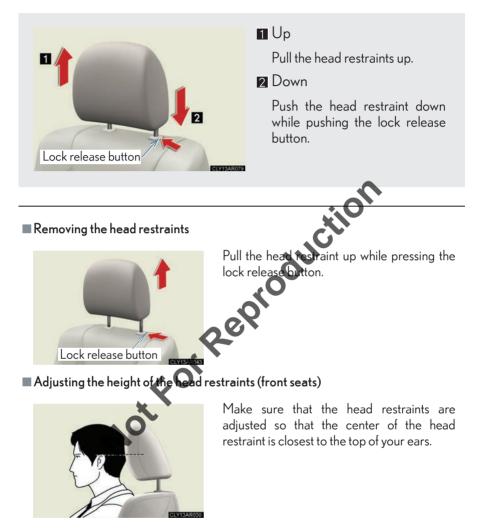

Adjusting the rear seat head restraints

Always raise the head restraints to the uppermost lock position during use.

Before driving

CAUTION

Head restraint precautions

Observe the following precautions regarding the head restraints. Failure to do so may result in death or serious injury.

- Use the head restraints designed for each respective seat.
- Adjust the head restraints to the correct position at all times.
- After adjusting the head restraints, push down on them and make sure they are locked in position.

Do not drive with the head restraints removed.

Imak Anothor Reproductions

1-4. Adjustable components (seats, mirrors, steering wheel) Seat belts

Make sure that all occupants are wearing their seat belts before driving the vehicle.

Correct use of the seat belts



• Extend the shoulder belt so that it comes fully over the shoulder, but does not come into contact with the neck or slide off the shoulder.

 Position the ap belt as low as possible over the hips.

Adjust the position of the seatback. Sit up straight and well back in the seat.

Do not twist the seat belt.

Fastening and releasing the seat belt



- To fasten the seat belt, push the plate into the buckle until a click sound is heard.
- **2** To release the seat belt, press the release button.

Before driving

Adjusting the seat belt shoulder anchor height (front seats)



- Push the seat belt shoulder anchor down while pressing the release button.
- Push the seat belt shoulder anchor up.


Move the height adjuster up and down as needed until you hear a click.

Seat belt comfort guide (outside rear seats)

If the shoulder belt sits close to a person neck, use the seat belt comfort guide.



Pull the comfort guide from the pocket.

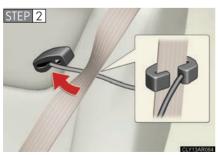

Slide the belt past the slot of the guide.

The elastic cord must be behind the seat belt.



Buckle the seat belt and position it comfortably.

Seat belt pretensioners (front and outside rear seats)



The pretensioner helps the seat belt to quickly restrain the occupant by retracting the seat belt when the vehicle is subjected to sertain types of severe frontal collision.

The pretensioner may not activate in the event of a minor frontal impact, a side impact or a rear impact.

Pre-crash seat beits (front seats of vehicles with a pre-crash safety system)

If the pre-crash sensor detects that a collision is unavoidable, the precrash system will retract the seat belt, thus enhancing the effectiveness of the seat belt pretensioner in a crash.

The same will happen if the driver makes an emergency braking or loses control of the vehicle. (\rightarrow P. 312)

Emergency locking retractor (ELR)

The retractor will lock the belt during a sudden stop or on impact. It may also lock if you lean forward too quickly. To allow the belt to extend, retract the belt and then pull it slowly.

Automatic locking retractor (ALR)

When a rear passenger's shoulder belt is completely extended and then retracted even slightly, the belt is locked in that position and cannot be extended. This feature is used to hold the child restraint system (CRS) firmly. To free the belt again, press the buckle release button and fully retract the seat belt. (\rightarrow P. 166).

Child seat belt usage

The seat belts of your vehicle were principally designed for persons of adult size.

- Use a child restraint system appropriate for the child until the child becomes large enough to properly wear the vehicle's sea bell. (→P. 158)
- When the child becomes large enough to properly wear the vehicle's seat belt, follow the instructions on P. 97 regarding seat belt usage.

Replacing the belt after the pretensioner has been activated

If the vehicle is involved in multiple collisions, the pretensioner will activate for the first collision, but will not activate for the second or subsequent collisions.

Seat belt regulations

 If seat belt regulations exist in the country where you reside, please contact your Lexus dealer for seat belt replacement or installation.


Observe the following precautions to reduce the risk of injury in the event of sudden braking, sudden swerving or an accident.

Failing to do so may cause death or serious injury.

Wearing a seat belt

- Ensure that all passengers wear a seat belt.
- Always wear a seat belt properly.
- Each seat belt should be used by one person only. Do not use a seat belt for more than one person at once, including children.
- Lexus recommends that children be seated in the rear seat and always use a seat belt and/or an appropriate child restraint system.
- To achieve a proper seating position, do not recline the seat more than necessary. The seat belt is most effective when the occupants are sitting up straight and well back in the seats.
- Do not wear the shoulder belt under your ar
- Always wear your seat belt low and snug across your hips.

Pregnant women

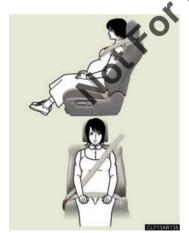

Obtain medical advice and wear the seat belt in the proper way. $(\rightarrow P. 97)$

Women who are pregnant should position the lap belt as low as possible over the hips in the same manner as other occupants. Extend the shoulder belt completely over the shoulder and position the belt across the chest. Avoid belt contact over the round part of the abdominal area.

If the seat belt is not worn properly, not only the pregnant woman, but also the fetus could suffer death or serious injury as a result of sudden braking or a collision.

People suffering illness

Obtain medical advice and wear the seat belt in the proper way.

When children are in the vehicle

Do not allow children to play with the seat belt. If the seat belt becomes twisted around a child's neck, it may lead to choking or other serious injuries that could result in death.

If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt.

Seat belt pretensioners

If the pretensioner has activated, the SRS warning light will come on. In that case, the seat belt cannot be used again and must be replaced at your bexus dealer.

Seat belt damage and wear

• Do not damage the seat belts by allowing the belt, place, or buckle to be jammed in the door.

 Inspect the seat belt system periodically. Check for cuts, fraying, and loose parts. Do not use a damaged seat belt until it is replaced. Damaged seat belts cannot protect an occupant from death or serious injury.

• Ensure that the belt and tab are locked and the belt is not twisted. If the seat belt does not function correctly, immediately contact your Lexus dealer.

• Replace the seat assembly, including the belts, if your vehicle has been involved in a serious accident, even if there is no obvious damage.

• Do not attempt to install, remove, modify, disassemble or dispose of the seat belts. Have any necessary repairs carried out by your Lexus dealer. Inappropriate handling of the pretensioner may prevent it from operating properly, resulting in death or serious injury.

CAUTION

Using a seat belt comfort guide


Failure to observe the following precautions could reduce the effectiveness of the seat belt in an accident, causing death or serious injury.

- Make sure the belt is not twisted and that it lies flat. The elastic cord must be behind the belt and the guide must be on the front.
- To reduce the chance of injury in case of a sudden stop, sudden swerve or accident while driving, remove and store the comfort guide in its pocket when it is not in use.
- Always make sure the shoulder belt is positioned across the enter of the shoulder.
 Always make sure the should be kept away from the neck, and should not fall off the shoulder.

1-4. Adjustable components (seats, mirrors, steering wheel) Steering wheel

The steering wheel can be adjusted to a comfortable position.

Operating the switch moves the steering wheel in the following directions:

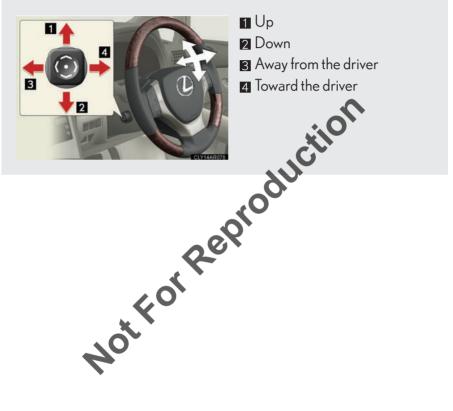

Auto tilt away

▶ RX270/RX350



When the "ENGINE START STOP" switch is turned off, the steering wheel returns to its stowed position by moving up and away to enable easier driver entry and exit.

Turning the **CENGINE** START STOP" switch to ACCESSORY or IGNITION ON mode will return the steering wheel to the original position.

▶ RX450h



When the "POWER" switch is turned off, the steering wheel returns to its stowed position by moving up and away to enable easier driver entry and exit.

Turning the "POWER" switch to ACCESSORY or ON mode will return the steering wheel to the original position. Before driving

The steering wheel can be adjusted when

▶ RX270/RX350

The "ENGINE START STOP" switch is in ACCESSORY or IGNITION ON mode*.

*: Vehicles with driving position memory: If the driver's seat belt is fastened, the steering wheel can be adjusted regardless of "ENGINE START STOP" switch mode.

▶ RX450h

The "POWER" switch is in ACCESSORY or ON mode*.

- *: Vehicles with driving position memory: If the driver's sealelt is fastened, the steering wheel can be adjusted regardless of "POWER" switch mode.
- Automatic adjustment of the steering position (vehicles with driving position memory)

A desired steering position can be entered to memory and recalled automatically by the driving position memory. (\rightarrow P. 89)

Notes for the auto tilt away function which driving position memory)

▶ RX270/RX350

The auto tilt away function can only operate when the "ENGINE START STOP" switch has been turned off, the driver seat belt has been unfastened and the driver's seat movement (\rightarrow P, 695) is in a setting other than off.

When the driver fastens the seat belt again, the steering wheel will return to the original position (>P. 92)

▶ RX450h

The auto tilt away function can only operate when the "POWER" switch has been turned off, the driver seat belt has been unfastened and the driver's seat movement (\rightarrow P. 695) is in a setting other than off.

When the driver fastens the seat belt again, the steering wheel will return to the original position. (\rightarrow P. 92)

CAUTION

Caution while driving


Do not adjust the steering wheel while driving.

Doing so may cause the driver to mishandle the vehicle and cause an accident, resulting in death or serious injury.



1-4. Adjustable components (seats, mirrors, steering wheel) Anti-glare inside rear view mirror

The rear view mirror's position can be adjusted to enable sufficient confirmation of the rear view in accordance with the driver's seating posture.

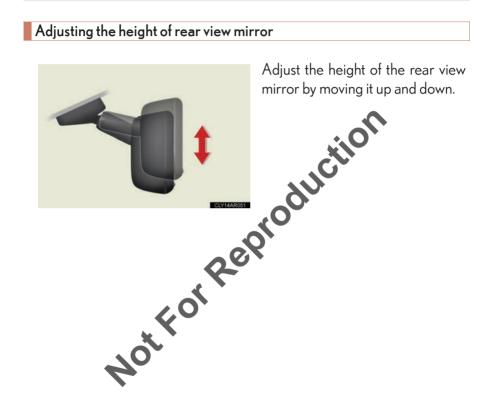

Automatic anti-glare function

Responding to the level of brightness of the headlights of vehicles behind, the reflected light is automatically reduced.





Changing automatic anti-glare function mode ON/OFF

When the automatic anti-glare function is in ON mode, the indicator illuminates

RX270/RX350:

The function will set to ON mode each time the "ENGINE START STOP" switch is turned to IGNI-DON ON mode.


Pressing the button turns the function to OFF mode. (The indicator also turns off.)

RX450h:

The function will set to ON mode each time the "POWER" switch is turned to ON mode.

Pressing the button turns the function to OFF mode. (The indicator also turns off.)

To prevent sensor error

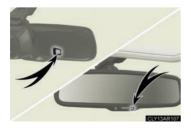

To ensure that the sensors operate properly, do not touch or cover them.

CAUTION


Caution while driving

Do not adjust the position of the mirror while driving. Doing so may lead to mishandling of the vehicle and cause an accident, resulting in death or serious injury.



1-4. Adjustable components (seats, mirrors, steering wheel) Outside rear view mirrors

Mirror angle can be adjusted using the switch.

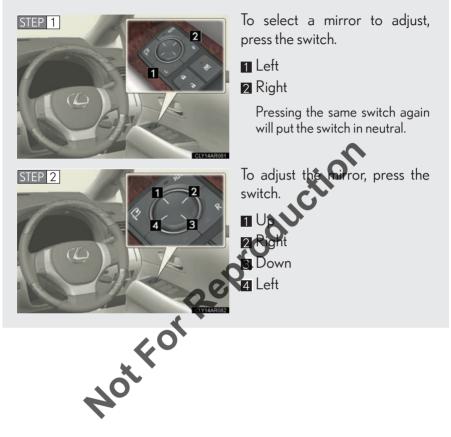

Before driving

Folding and extending the mirrors

Using the switch



Setting automatic mode



Press the switch to fold the mirrors.

Press it again to return them.



Automatic mode allows the folding or extending of the mirrors to be inked to locking/unlocking of the doors.

Press the "AUTO" switch to set automatic mode.

The indicator will come on.

Mirror angle can be adjusted when

► RX270/RX350

The "ENGINE START STOP" switch is in ACCESSORY or IGNITION ON mode.

▶ RX450h

The "POWER" switch is in ACCESSORY or ON mode.

Linked mirror function when reversing

When the mirror select switch is in the "L" or "R" position, the outside rear view mirrors will automatically angle downwards when the vehicle is reversing in order to give a better view of the ground. To disable this function, move the mirror select switch to the neutral position (between "L" and "R").

When the mirrors are fogged up

The outside rear view mirrors can be cleared using the mirror defoggers. Turn on the rear window defogger to turn on the outside rear view mirror defoggers. $(\rightarrow P. 352)$

Automatic adjustment of the mirror angle (vehicles with driving position memory)

A desired mirror face angle can be entered to memory and recalled automatically by the driving position memory. (\rightarrow P. 89)

Auto anti-glare function

When the anti-glare inside rear view mirror is set to automatic mode, the outside rear view mirrors will activate in conjunction with the anti-glaren side rear view mirroduct ror to reduce reflected light. (\rightarrow P. 108)

CAUTION

When driving the vehicle

Observe the following precautions while driving. Failing to do so may result in loss of control of the vehicle and cause an accident, resulting in death or serious injury.

Do not adjust the mirrors while driving.

• Do not drive with the mirrors folded.

•Both the driver and passenger side mirrors must be extended and properly adjusted before driving.

When a mirror is moving

To avoid personal injury and mirror malfunction, be careful not to get your hand caught by the moving mirror.

When the mirror defoggers are operating

Do not touch the rear view mirror surfaces, as they can become very hot and burn you.

1-5. Opening and closing the windows and moon roof **Power windows**

The power windows can be opened and closed using the switches. Operating the switch moves the windows as follows:



opened and closed using the power window switches on the driver's side even if the lock switch is on.

The power windows can be operated when

▶ RX270/RX350

The "ENGINE START STOP" switch is in IGNITION ON mode.

▶ RX450h

The "POWER" switch is in ON mode.

Operating the power windows after turning the engine off (RX270/RX350)

The power windows can be operated for approximately 45 seconds even after the "ENGINE START STOP" switch is turned to ACCESSORY mode or turned off. They cannot, however, be operated once either front door is opened.

Operating the power windows after turning the hybrid system off (RX450h)

The power windows can be operated for approximatel (4) b seconds even after the "POWER" switch is turned to ACCESSORY mode or turned off. They cannot, however, be operated once either front door is opened.

Jam protection function

If an object becomes caught between the vindow and the window frame, window travel is stopped and the window is opened slightly.

Notforr

When the power window does not close normally

If the jam protection function is operating abnormally and a window cannot be closed, perform the following operations using the power window switch on the relevant door.

- RX270/RX350: After stopping the vehicle, the window can be closed by holding the power window switch in the one-touch closing position while the "ENGINE START STOP" switch is turned to IGNITION ON mode.
- RX450h: After stopping the vehicle, the window can be closed by holding the power window switch in the one-touch closing position while the "POWER" switch is turned to ON mode.

• If the window still cannot be closed even by carrying out the operation explained above, initialize the function by performing the following procedure.

- STEP 1 Hold the power window switch in the one-truth closing position. Continue holding the switch for a further 6 seconds after the window has closed.
- STEP 2 Hold the power window switch in the one-touch opening position. Continue holding the switch for a further 2 seconds after the window has opened completely.
- STEP 3 Hold the power window switch in the one-touch closing position once again. Continue holding the switch for a further 2 seconds after the window has closed

If you release the switch while the window is moving, start again from the beginning. If the window continues to close but then re-open slightly even after performing the above procedure correctly, have the vehicle inspected by your Lexus dealer.

Door lock linked window operation

- \bullet The power windows can be opened and closed using the mechanical key. (${\rightarrow} P.\,646)$
- The power windows can be opened and closed using the wireless remote control if customized at your Lexus dealer. (→P. 61)

Window close suggestion mode

▶ RX270/RX350

If the "ENGINE START STOP" switch is turned off with the windows open, a suggestion to close all the windows is shown on the multi-information display. (\rightarrow P. 244)

▶ RX450h

If the "POWER" switch is turned off with the windows open, a suggestion to close all the windows is shown on the multi-information display. \rightarrow P. 244)

When the 12-volt battery is disconnected

The window lock switch is disabled. If necessary, press the window lock switch after reconnecting the battery.

Customization

Settings (e.g. linked door lock operation) can be changed. (Customizable features →P 695) 1

CAUTION

Closing the windows

Observe the following precautions.

Failing to do so may result in death or serious injury.

- Check to make sure that all passengers do not have any part of their body in a position where it could be caught when a window is being operated.
- Do not allow children to operate the power windows.
 Closing a power window on someone can cause serious injury, and in some instances, even death.

Jam protection function


- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets caught just before the window fully closes. Also, the jam protection does not operate when the power window switch is pulled up continually to close the windows.

1-5. Opening and closing the windows and moon roof ${\color{black}{Moon \ roof}^{*}}$

Use the overhead switches to open and close the moon roof and tilt it up and down.

Opening and closing

Tilting up and down

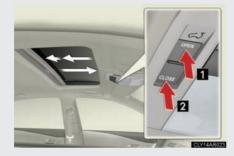

1 Opens the moon roof*

The moon roof stops slightly before the fully open position to reduce wind noise.

Press the switch again to fully open the moon root.

- 2 Closes the moon roof*
- *: Lightly press either of the moon roof switches to stop the moon roof partway.
- 1 Tilts the moon roof up*
- 2 Tilts the moon roof down*
- *: Lightly press either of the moon roof switches to stop the moon roof partway.

*: If equipped

The moon roof can be operated when

▶ RX270/RX350

The "ENGINE START STOP" switch is in IGNITION ON mode.

▶ RX450h

The "POWER" switch is in ON mode.

Operating the moon roof after turning the engine off (RX270/RX350)

The moon roof can be operated for approximately 45 seconds even after the "ENGINE START STOP" switch is turned to ACCESSORY mode or turned off. It cannot, however, be operated once either front door is opened

Operating the moon roof after turning the hybrid system of (RX450h)

The moon roof can be operated for approximately 45 seconds even after the "POWER" switch is turned to ACCESSORY mode of turned off. It cannot, however, be operated once either front door is opened.

Jam protection function

If an object is detected between the moon roof and the frame while the moon roof is closing or tilting down, travel is stopped and the moon roof opens slightly.

Sunshade

The sunshade can be opened and closed manually. However, the sunshade will open automatically when the moon roof is opened.

Door lock linked moon roof operation

• The moon root can be opened and closed using the mechanical key. (\rightarrow P. 646)

- The moon roof can be opened and closed using the wireless remote control if customized at your Lexus dealer. * (→P. 61)
 - *: This function cannot be customized unless power window operation using the wireless remote control is enabled.

When the moon roof does not close normally

Perform the following procedure:

- If the moon roof closes but then re-opens slightly
- STEP 1 Stop the vehicle.
- STEP 2 Press and hold the "CLOSE" switch.*1

The moon roof will close, reopen and pause for approximately 10 seconds.^{*2} Then it will close again, tilt up and pause for approximately 1 second. Finally, it will tilt down, open and close.

STEP 3 Check to make sure that the moon roof is completely closed and then release the switch.

• If the moon roof tilts down but then tilts back up

- STEP 1 Stop the vehicle.
- STEP 2 Press and hold the "UP" switch^{*1} until the moon roof moves into the tilt up position and stops.
- STEP 3 Release the "UP" switch once and then press and hold the "UP" switch again.*1


The moon roof will pause for approximately 10 seconds in the tilt up position.*² Then it will adjust dightly and pause for approximately 1 second. Finally, it will tilt downropen and close.

- STEP 4 Check to make sure that the moon roof is completely closed and then release the switch.
- *1: If the switch is released at the incorrect time, the procedure will have to be performed again from the beginning.
- *2: If the switch is released after the above mentioned 10 second pause, automatic operation will be disabled. In that case, press and hold the "CLOSE" or "UP" switch, and the moon roof will tilt up and pause for approximately 1 second. Then it will tilt down, open and close. Check to make sure that the moon roof is completely closed and then release the switch.

If the moon roof does not fully close even after performing the above procedure correctly, have the vehicle inspected by your Lexus dealer.

Customization

Settings (e.g. linked door lock operation) can be changed. (Customizable features \rightarrow P. 695)

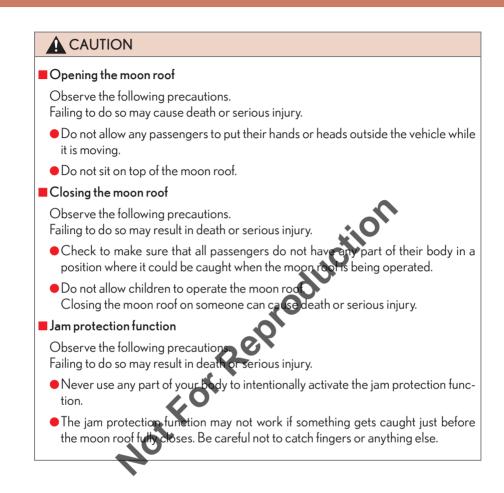

1-5. Opening and closing the windows and moon roof Electronic sunshade^{*}

Use the overhead switches to open and close the electronic sunshade.

Opening and closing



- 1 Opens the electronic sunshade*
- Closes the electronic sunshade*
- *: Lightly press either of the switches to stop the electronic sunshade partwa

VITION ON mode.

▶ RX450h

The "POWER" switch is in ON mode

Jam protection function

If an object is detected between the electronic sunshade and the frame while closing, travel is stopped and the electronic sunshade opens slightly.

*: If equipped

CAUTION

Closing the electronic sunshade

Observe the following precautions.

Failing to do so may result in death or serious injury.

- Check to make sure that all passengers do not have any part of their body in a
 position where it could be caught when the electronic sunshade is being operated.
- Do not allow children to operate the electronic sunshade. Closing the electronic sunshade on someone can cause deather serious injury.

Jam protection function


- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets caught just before the electronic sunshade fully closes.



1-6. Refueling Opening the fuel tank cap

Perform the following steps to open the fuel tank cap: Before refueling the vehicle ● RX270/RX350: Turn the "ENGINE START STOP" switch off and ensure that all the doors and windows are closed. • RX450h: Turn the "POWER" switch off and close all the doors and windows. • Confirm the type of fuel. (\rightarrow P. 128) Press the or fuel filler door. Opening the fuel tank cap to open the STEP 1 (\square) FOI Turn the fuel tank cap slowly to open.

Before driving

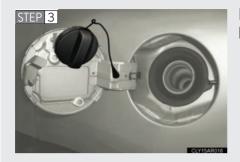

Hang the fuel tank cap on the back of the fuel filler door.

Closing the fuel tank cap



After refueling, turn the fuel tank cap until you hear a click. Once the cap is released, it will turn slightly in the opposite direction.

tion

▶ RX270/RX350 STEP 1 Open the back door and lift the deck board up. $(\rightarrow P. 629)$ With a compact spare tire only: EP 2 Remove the spare tire cover. Remove the auxiliary box. STEP 3 1 2 Pull the lever. STEP 4 Install the auxiliary box using the clips. STEP 5 1 2 3

When the fuel filler door cannot be opened by pressing the inside switch

- ▶ RX450h
- STEP 1 Open the back door and lift the deck board up. $(\rightarrow P. 519)$
- STEP 2 With a compact spare tire only:

Remove the spare tire cover. (\rightarrow P. 519)



STEP 3 Remove the 12-volt battery cover. (\rightarrow P. 519)



Pull the lever.

ction

STEP 5 Install the 12-volt battery cover using the clips. , (→P. 522)

- Fuel types
 - ► RX270

Unleaded gasoline (Research Octane Rumber 91 or higher)

RX350/RX450h

Unleaded gasoline (Resear Cartane Number 95 or higher)

Use of ethanol blended gasoline in a gasoline engine

Lexus allows the use of ethanol blended gasoline where the ethanol content is up to 10%. Make sure that the ethanol blended gasoline to be used has a Research Octane Number that follows the above.

When refueling the vehicle

Observe the following precautions while refueling the vehicle. Failure to do so may result in death or serious injury.

- After exiting the vehicle and before opening the fuel door, touch an unpainted metal surface to discharge any static electricity. It is important to discharge static electricity before refueling because sparks resulting from static electricity can cause fuel vapors to ignite while refueling.
- Always hold the grips on the fuel tank cap and turn it slowly to remove it. A whooshing sound may be heard when the fuel tank cap is loosened. Wait until the sound cannot be heard before fully removing the cap the hot weather, pressurized fuel may spray out of the filler neck and cause injury.
- Do not allow anyone that has not discharged static electricity from their body to come close to an open fuel tank.
- Do not inhale vaporized fuel. Fuel contains substances that are harmful inhaled.
- Do not smoke while refueling the vehicle.
 Doing so may cause the fuel to unite and cause a fire.
- Do not return to the vehice or touch any person or object that is statically charged.

This may cause static electricity to build up, resulting in a possible ignition hazard.

When refueling

Observe the following precautions to prevent fuel overflowing from the fuel tank:

- Securely insert the fuel nozzle into the fuel filler neck
- Stop filling the tank after the fuel nozzle automatically clicks off
- Do not top off the fuel tank

When replacing the fuel cap

Do not use anything but a genuine Lexus fuel tank cap designed for your vehicle. Doing so may cause a fire or other incident which may result in death or serious injury.

\Lambda NOTICE

Refueling

Do not spill fuel during refueling.

Doing so may damage the vehicle, such as causing the emission control system to operate abnormally or damaging fuel system components or the vehicle's painted surface.

NotforReproduction

The vehicle's keys have built-in transponder chips that prevent the engine from starting if the key has not been previously registered in the vehicle's on-board computer.

Never leave the keys inside the vehicle when you leave the vehicle.

Vehicles with a navigation system



The indicator light flashes after the "ENGINE START STOP" switch has been turned off to indicate that the system is operating.

The indicator light stops flashing after the "ENGINE START STOP switch has been turned to ACCESSORY or IGNITION ON mode to indicate that the system has been canceled.

► Vehicles without a navigation system



The indicator light flashes after the "ENGINE START STOP" switch has been turned off to indicate that the system is operating.

The indicator light stops flashing after the "ENGINE START STOP" switch has been turned to ACCESSORY or IGNITION ON mode to indicate that the system has been canceled.

System maintenance

The vehicle has a maintenance-free type engine immobilizer system.

- Conditions that may cause the system to malfunction
 - If the grip portion of the key is in contact with a metallic object
 - If the key is in close proximity to or touching a key to the security system (key with a built-in transponder chip) of another vehicle

NOTICE

To ensure the system operates correctly

Io ensure the system operates correctly Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.

The vehicle's keys have built-in transponder chips that prevent the hybrid system from starting if the key has not been previously registered in the vehicle's on-board computer.

Never leave the keys inside the vehicle when you leave the vehicle.

Vehicles with a navigation system



The indicator light flashes after the "POWER" switch has been turned OFF to indicate that the system is operating

The indicator light stops flashing after the POWER" switch has been turned to ACCESSORY or ON mode to indicate that the system has been canceled.

Vehicles without a navigation system

The indicator light flashes after the "POWER" switch has been turned OFF to indicate that the system is operating.

The indicator light stops flashing after the "POWER" switch has been turned to ACCESSORY or ON mode to indicate that the system has been canceled. Before driving

System maintenance

The vehicle has a maintenance-free type immobilizer system.

Conditions affecting operation

Depending on surrounding environment and conditions, the immobilizer system may not operate properly. This may prevent the hybrid system from starting. $(\rightarrow P. 56)$

NOTICE To ensure the system operates correctly Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.

1-7. Theft deterrent system **Double locking system**

Unauthorized access to the vehicle is prevented by disabling the door unlocking function from both the interior and exterior of the vehicle.



Vehicles employing this system have labels on the window glass of both front doors.

Setting the double locking system

- duction • RX270/RX350: Turn the "ENGINE START STOP" switch off, have all the passengers exit the vehicle and insure that all the doors are closed.
- RX450h: Turn the "POWER" switch off, have all the passengers exit the vehicle and ensure that all the doors are closed.

 Using the entry function. Touch the lock sensor on the outside door handle twice within 5 seconds. Using the wireless remote control:

Press

twice within 5 seconds.

Canceling the double locking system

Using the entry function: Hold the outside door handle or press the back door opener button. (\rightarrow P. 50)


Using the wireless remote control: Press \mathbf{A} or press and hold \mathbf{T} .



CAUTION

Double locking system precaution

Never activate the double locking system when there are people in the vehicle because all the doors cannot be opened from inside the vehicle.

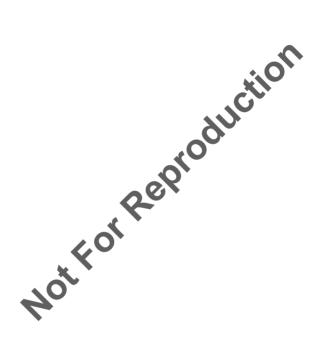

1-7. Theft deterrent system **Alarm**

The system sounds the alarm and flashes the lights when forcible entry is detected. Triggering of the alarm The alarm is triggered in the following situations when the alarm is set: • A locked door is unlocked or opened in any way other than using the entry function, wireless remote control or mechanical key. (The doors will lock again automatically.) • The hood is opened. • The intrusion sensor detects something moving inside the vehicle. (An intruder gets in the vehicle.) • The tilt sensor detects a change of vehicle inclination. Setting the alarm system Vehicles with a navigation system Close the doors and hood, and lock all the doors. The system will be set automatically after 30 seconds. The indicator light changes from

The indicator light changes from being on to flashing when the system is set. Before driving





Close the doors and hood, and lock all the doors.

The system will be set automatically after 30 seconds.

The indicator light changes from being on to flashing when the system is set.

Deactivating or stopping the alarm Do one of the following to deactivate or stop the alarms:

• Unlock the doors.

- RX270/RX350: Turn the "ENGINE START STOP" switch to ACCESSORY or IGNITION ON mode, or start the engine. (The alarm will be deactivated or stopped after a few seconds.)
- RX450h: Turn the "POWER" switch to ACCESSORY or ON mode, or start the hybrid system. (The alarm will be deactivated or stopped after a few seconds.)

Intrusion sensor and tilt sensor


• The intrusion sensor detects an intruder or movement in the vehicle.

• The tilt sensor detects changes in vehicle inclination, such as when the vehicle is towed away.

This system is designed to deter and prevent vehicle theft but does not guarantee absolute security against all intrusions.

The intrusion sensor and tilt sensor can be canceled using the cancel switch.

Canceling the intrusion sensor and tilt sensor

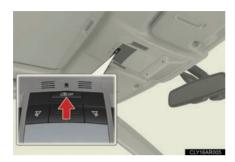

► RX270/RX350

Turn the "ENGINE START STOP" switch off and press the intrusion sensor and tilt sensor cancel switch.

A message will be shown on the multi-information display in the instrument cluster.

The intrusion sensor and tilt sensor TX I STOP" switch i: a to IGNITION ON mode. TX450h Turn the "POWER" switch off and press the intrusion sensor and tilt sensor cancel switch. A message multi will revert to on each time the

will revert to on each time the "POWER" switch is turned to ON mode.

System maintenance

The vehicle has a maintenance-free type alarm system.

Items to check before locking the vehicle


To prevent unexpected triggering of the alarm and vehicle theft, make sure of the following:

- Nobody is in the vehicle.
- The windows and moon roof are closed before the alarm is set.

• No valuables or other personal items are left in the vehicle. jon

Triggering of the alarm

The alarm may be triggered in the following situations: (Stopping the alarm deactivates the alarm system.)

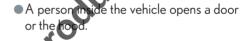



• The 12-volt battery is recharged or replaced when the vehicle is locked.

Alarm-operated door lock

- When the alarm is operating, the doors are locked automatically to prevent intruders.
- Do not leave the key inside the vehicle when the alarm is operating, and make sure the key is not inside the vehicle when recharging or replacing the 12-volt battery.

Canceling and automatic re-enabling of the intrusion sensor and tilt sensor

- The alarm will still be set even when the intrusion sensor and tilt sensor are canceled.
- RX270/RX350: After the intrusion sensor and tilt sensor are canceled, pressing the "ENGINE START STOP" switch or unlocking the doors using the entry function, wireless remote control or mechanical key will re-enable the intrusion sensor and tilt sensor.
- RX450h: After the intrusion sensor and tilt sensor are canceled, pressing the "POWER" switch or unlocking the doors using the entry function, wireless remote control or mechanical key will re-enable the intrusion sensor and tilt sensor.

sensor. • When the alarm system is set again, the intrusion sensationed tilt sensor will be set. Reprodutive sets of the set of th

Intrusion sensor considerations

The sensor may trigger the alarm in the following situations:





• A window or the moon rook is open.

Persons or pets are in the vehicle.

- In this case, the senser may detect the following:
- Wind or the movement of objects such as leaves and insects inside the vehicle
- Ultrasonic waves emitted from devices such as the intrusion sensors of other vehicles
- The movement of people outside the vehicle
- Unstable items, such as dangling accessories or clothes hanging on the coat hooks, are in the vehicle.



- The vehicle is parked in a place where extreme vibrations or noises occur, such as in a parking garage.



- Ice or snow is removed from the vehicle, causing the vehicle to receive repeated impacts or vibrations.
- The vehicle is inside an automatic or high-pressure car wash.
- The vehicle experiences impacts, such as hail, lightning strikes, and other kinds of repeated impacts or vibrations.

Tilt sensor detection considerations

The sensor may trigger the alarm in the following situation

- The vehicle is transported by a ferry, trailer, train, etc
- The vehicle is parked in a parking garage.
- The vehicle is inside a car wash that moves the vehicle.
- Any of the tires loses air pressure.
- The vehicle is jacked up.
- An earthquake occurs or the road caves in.
- Cargo is loaded onto or unbaded from a roof luggage carrier.





Drive in a good posture as follows:


- Sit upright and well back in the seat. $(\rightarrow P. 81)$
- Adjust the position of the seat forward or backward to ensure the pedals can be reached and easily depressed to the extent required. $(\rightarrow P.81)$
- Adjust the seatback so that the controls are easily opera-
- Adjust the tilt and telescopic positions of the steering wheel downward so the airbag is facing your chest. $(\rightarrow P.104)$
- **5** Lock the head restraint in place with the center of the head restraint closest to the top of your ears. (\rightarrow P. 95)
- NotForRer 6 Wear the seat belt correctly. $(\rightarrow P.97)$

Before driving

CAUTION While driving Do not adjust the position of the driver's seat. Doing so could cause the driver to lose control of the vehicle. • Do not place a cushion between the driver or passenger and the seatback. A cushion may prevent correct posture from being achieved, and reduce the effectiveness of the seat belt and head restraint, increasing the risk of death or serious injury to the driver or passenger. Do not place anything under the front seats. Objects placed under the front seats may become jammed in the seat tracks and stop the seat from locking in place. This may lead to an accident, resulting in death or serious injury. The adjustment mechanism may also be damaged. Adjusting the seat position • Take care when adjusting the seat position to sure that other passengers are not injured by the moving seat. • Do not put your hands under the seat the moving parts to avoid injury. Fingers or hands may become jammed in the seat mechanism. Notfor

1-8. Safety information **SRS** airbags

The SRS airbags inflate when the vehicle is subjected to certain types of severe impacts that may cause significant injury to the occupants. They work together with the seat belts to help reduce the risk of death or serious injury.

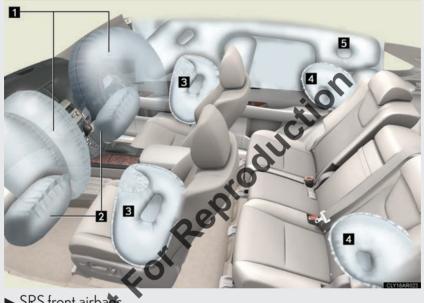

► SRS front airbags

SRS driver airbag/front passenger airbag Can help protect the head and chest of the driver and front passenger from impact with interior components

2 SRS knee airbags Can help provide driver and front passenger protection


SRS side and curtain shield airbags

Front SRS side airbags

Can help protect the torso of the front seat occupants

- 4 Rear SRS side airbags Can help protect the torso of occupants in the rear outer seats
- **5** SRS curtain shield airbags Can help protect primarily the head of occupants in the outer seats

SRS airbag system components

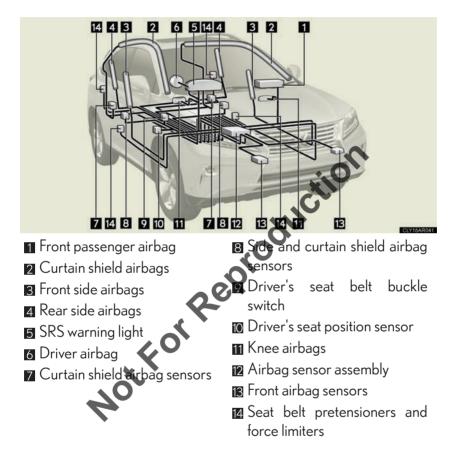

The main SRS airbag system components are shown above. The SRS airbag system is controlled by the airbag sensor assembly. As the airbags deploy, a chemical reaction in the inflators quickly fills the airbags with non-toxic gas to help restrain the motion of the occupants.

■ If the SRS airbags deploy (inflate)

- Bruising and slight abrasions may result from contact with a deploying (inflating) SRS airbag.
- A loud noise and white powder will be emitted.
- Parts of the airbag module (steering wheel hub, airbag cover and inflator) as well as the seats, parts of the front and rear pillars, and roof side rails, may be hot for several minutes. The airbag itself may also be hot.
- The windshield may crack.

SRS airbag deployment conditions (SRS front airbags)

The SRS front airbags will deploy in the event of an impact that exceeds the set threshold level (the level of force corresponding to an approximately 20 - 30 km/h [12 - 18 mph] frontal collision with a fixed wall that does not move or deform).

However, this threshold velocity will be considerably higher in the following situations:


- If the vehicle strikes an object, such as a parked vehicle or sigh pole, which can move or deform on impact
- If the vehicle is involved in an underride collision, such as a collision in which the front of the vehicle "underrides", or goes under, the bed of a truck
- Depending on the type of collision, it is possible that only the seat belt pretensioners will activate.

SRS airbag deployment conditions (SRS side airbags and curtain shield airbags)

The SRS side airbags and SRS curtain shield airbags will deploy in the event of an impact that exceeds the set threshold level (the level of force corresponding to the impact force produced by an approximately 1500 kg [3300 lb.] vehicle colliding with the vehicle cabin from a direction perpendicular to the vehicle orientation at an approximate speed of 20 - 30 km/h [12 - 18 mph]).

Conditions under which the SRS airbags may deploy (inflate), other than a collision (SRS front airbags)

The SRS front airbags may also deploy if a serious impact occurs to the underside of your vehicle. Some examples are shown in the illustration.

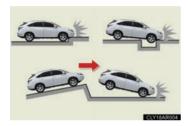

- Hitting a curb, edge of pavement or hard surface
- Falling into or jumping over a deep hole
- Landing hard or vehicle falling

■ Types of collisions that may not deploy the SRS airbags (SRS front airbags)


The SRS front airbags are generally not designed to inflate if the vehicle is involved in a side or rear collision, if it rolls over, or if it is involved in a low-speed frontal collision. But, whenever a collision of any type causes sufficient forward deceleration of the vehicle, deployment of the SRS front airbags may occur.



- Collision from the side
- Collision from the rear
- Vehicle rollover

Types of collisions that may not deploy the SRS airbags (SRS side airbags and curtain shield airbags)

The SRS side airbag and curtain shield airbag system may not activate if the vehicle is subjected to a collision from the side at certain angles, or a collision to the side of the vehicle body other than the passenger compartment.

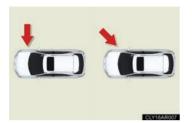

- Collision from the side to the vehicle body other than the passenger compartment
- Collision from the side at an angle

The SRS side airbags and curtain shield airbags are not generally designed to inflate if the vehicle is involved in a frontal or real collision, if it rolls over, or if it is involved in a low-speed side collision.





When to contact your Lexus dealer

In the following cases, the vehicle will require inspection and/or repair. Contact your Lexus dealer as soon as possible.

• Any of the SRS airbags has been inflated.



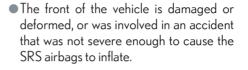

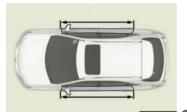

• A portion of the cloors is damaged or deformed, or the vehicle was involved in an accident that was not severe enough to cause the SRS side airbags and curtain shield airbags to inflate.



The pad section of the steering wheel, dashboard near the front passenger airbag or lower portion of the instrument panel is scratched, cracked, or otherwise damaged.



 The surface of the seats with the side airbag is scratched, cracked, or otherwise damaged.



 The portion of the front pillars, rear pillars or roof side rail garnishes (padding) containing the curtain shield airbags inside is scratched, cracked, or otherwise damaged.

SRS airbag precautions

Observe the following precautions regarding the SRS arroads. Failure to do so may cause death or serious injury.

- The driver and all passengers in the vehicle must wear their seat belts properly. The SRS airbags are supplemental devices (a) e used with the seat belts.
- The SRS driver airbag deploys with considerable force, and can cause death or serious injury especially if the driver is very close to the airbag.

Since the risk zone for driver's atroag is the first 50 - 75 mm(2 - 3 in.) of inflation, placing yourself 250 mm (10 in.) from your driver airbag provides you with a clear margin of safety. This listance is measured from the center of the steering wheel to your breastbane. If you sit less than 250 mm (10 in.) away now, you can change your driving position in several ways:

- Move your seat to the rear as far as you can while still reaching the pedals comfortably.
- Slightly recline the back of the seat. Although vehicle designs vary, many drivers can achieve the 250 mm (10 in.) distance, even with the driver seat all the way forward, simply by reclining the back of the seat somewhat. If reclining the back of your seat makes it hard to see the road, raise yourself by using a firm, non-slippery cushion, or raise the seat if your vehicle has that feature.
- If your steering wheel is adjustable, tilt it downward. This points the airbag toward your chest instead of your head and neck.

The seat should be adjusted as recommended above, while still maintaining control of the foot pedals, steering wheel, and your view of the instrument panel controls.

SRS airbag precautions

- The SRS front passenger airbag also deploys with considerable force, and can cause death or serious injury especially if the front passenger is very close to the airbag. The front passenger seat should be as far from the airbag as possible with the seatback adjusted, so the front passenger sits upright.
- Improperly seated and/or restrained infants and children can be killed or seriously injured by a deploying airbag. An infant or child who is too small to use a seat belt should be properly secured using a child restraint system. Lexus strongly recommends that all infants and children be placed in the rear yeats of the vehicle and properly restrained. The rear seats are safer for infants and children than the front passenger seat. (→P. 158)



• Do not sit on the edge of the seat or lean against the dashboard.

- Do not allow a child to stand in front of the SRS front passenger airbag unit or sit on the knees of a front passenger.
- Do not allow the front seat occupants to hold items on their knees.
- Do not lean against the door, the roof side rail or the front, side and rear pillars.

SRS airbag precautions







- Do not allow anyone to kneel on the passenger seats toward the door or put their head or hands outside the vehicle.
- Do not attach anything to or lean anything against areas such as the dashboard, steering wheel pad or lower portion of the instrument panel.

These items can become projectiles when SRS driver, front passenger and knee airbags deploy.

- door, windshield glass, side door glass, front and rear pillars, roof side rail or assist grip.
- Do not hang coat hangers or other hard objects on the coat hooks. All of these items could become projectiles and may cause death or serious injury, should the SRS curtain shield airbags deploy.

SRS airbag precautions

- If a vinyl cover is put on the area where the SRS knee airbags will deploy, be sure to remove it.
- Do not use seat accessories which cover the parts where the SRS side airbags inflate as they may interfere with inflation of the airbags. Such accessories may prevent the side airbags from activating correctly, disable the system or cause the side airbags to inflate accidentally, resulting in death or serious injury.
- Do not strike or apply significant levels of force to the area of the SRS airbag components. Doing so can cause the SRS airbags to malfunction.
- Do not touch any of the component parts immediately after the SRS airbags have deployed (inflated) as they may be hot.
- If breathing becomes difficult after the SRS airbags have deployed, open a door or window to allow fresh air in, or leave the vehicle if it is safe to do so. Wash off any residue as soon as possible to prevent skirvirritation.
- If the areas where the SRS airbags are stored, such as the steering wheel pad and front and rear pillar garnishes, are tarnaged or cracked, have them replaced by your Lexus dealer.

156

CAUTION Modification and disposal of SRS airbag system components Do not dispose of your vehicle or perform any of the following modifications without consulting your Lexus dealer. The SRS airbags may malfunction or deploy (inflate) accidentally, causing death or serious injury.

- Installation, removal, disassembly and repair of the SRS airbags
- Repairs, modifications, removal or replacement of the steering wheel, instrument panel, dashboard, seats or seat upholstery, front, side and rear pillars or roof side rails.
- Repairs or modifications of the front fender, front bumper, or side of the occupant compartment
- Installation of snow plows, winches, etc. to the from grille (bull bars or kangaroo bar etc.)
- Modifications to the vehicle's suspension syst

Notfor

- Installation of electronic devices such as mobile two-way radios and CD players
- Modifications to your vehicle for a person with a physical disability

Lexus strongly urges the use of child restraint systems.

Points to remember

Studies have shown that installing a child restraint on a rear seat is much safer than installing one to the front passenger seat.

- Choose a child restraint system that suits your vehicle and is appropriate to the age and size of the child.
- For installation details, follow the instructions provided with the child restraint system.

General installation instructions are provided withis manual. (\rightarrow P. 166)

- If child restraint system regulations exist in the country where you reside, please contact your Lexus dealer for the child restraint system installation.
- Lexus recommends that you use a child restraint system which conforms to the regulation ECENo.44.

Types of child restraints

Child restraint systems are classified into the following 5 groups according to the regulation ECE No.44:

Group 0: Up to 10 kg (22 lb.) (0 - 9 months)

Group 0⁺: Up to 13 kg (28 lb.) (0 - 2 years)

Group I: 9 to 18 kg (20 to 39 lb.) (9 months - 4 years)

Group II: 15 to 25 kg (34 to 55 lb.) (4 years - 7 years)

Group III: 22 to 36 kg (49 to 79 lb.) (6 years - 12 years)

In this owner's manual, the following popular 3 types of child restraint systems that can be secured with the seat belts are explained:



Child restraint system suitability for various seating positions

Information provided in the table shows your child restraint system suitability for various seating positions.

Seating position	Front seat	Rear	seat
Mass groups	Passenger seat	Outboard	Center
0 Up to 10 kg (22 lb.) (0 - 9 months)	X Never put		L1
0+ Up to 13 kg (28 lb.) (0 - 2 years)	X Never put		L1
l 9 to 18 kg (20 to 39 lb.) (9 months - 4 years)	Rear facing Never put Korward facing — UF	U	L2
II, III 15 to 36 kg (34 to 79 lb.) (4 - 12 years)	UF	U	L3

Key of letters inserted in the above table:

- U: Suitable for "universal" category restraint system approved for the use in this mass group
- UF: Suitable for forward-facing "universal" category restraint system approved for the use in this mass group
- L1: Suitable for "LEXUS BABY-SAFE (0 to 13 kg [0 to 28 lb.])" approved for the use in this mass group
- L2: Suitable for "LEXUS DUO+ (without ISOFIX, 9 to 18 kg [20 to 39 lb.])" approved for the use in this mass group
- L3: Suitable for "LEXUS KID (15 to 36 kg [34 to 79 lb])" approved for the use in this mass group
- X: Not suitable seat position for children in this mass group

The child restraint systems mentioned in the table may not be available outside of the EU area.

Other child restraint systems different from the systems mentioned in the table can be used, but the suitability of the systems must be carefully checked with the child restraint system manufacturer and retailer.

Before driving

Child restraint system suitability for various seating positions (with ISOFIX rigid anchors)

Information provided in the table shows your child restraint system suitability for various seating positions.

Mass groups	Size class	Fixture	Vehicle ISOFIX positions
			Rear seat
	F	ISO/L1	×
Carrycot	G	ISO/L2	X
		(1)	Х
0	E	ISO/RI	Х
Up to 10 kg (22 lb.) (0 - 9 months)			Х
	0	ISO/R1	Х
0 ⁺ Up to 13 kg (28 lb.) (0 - 2 years)	D	ISO/R2	Х
	OC	ISO/R3	Х
×		(1)	Х
4	D	ISO/R2	Х
 9 to 18 kg (20 to 39 lb.) (9 months - 4 years)	С	ISO/R3	Х
	В	ISO/F2	IUF
	B1	ISO/F2X	IUF
	А	ISO/F3	IUF
		(1)	Х
II, III 15 to 36 kg (34 to 79 lb.) (4 - 12 years)		(1)	Х

 For the CRS which do not carry the ISO/XX size class identification (A to G) for the applicable mass group, the car manufacturer shall indicate the vehicle specific ISOFIX child restraint system(s) recommended for each position.

Key of letters inserted in the above table:

- IUF: Suitable for ISOFIX forward-facing child restraint systems of universal category approved the use in this mass group.
- X: ISOFIX position not suitable for ISOFIX child restraint systems in this mass group and/or size class.

The child restraint systems mentioned in the table may not be available outside of the EU area.

Other child restraint systems different from the systems mentioned in the table can be used, but the suitability of the systems must be carefully checked with the child restraint system maturacturer and retailer.

When installing the child restraint system on the front passenger seat



When you have to use a child restraint system in the front passenger seat, adjust the seatback to the most upright position and adjust the seat to the fully rearward and uppermost position.

Selecting an appropriate child restraint system

- Use a child restraint system appropriate for the child until the child becomes large enough to properly wear the vehicle's seat belt.
- If the child is too large for a child restraint system, sit the child on a rear seat and use the vehicle's seat belt. (→P. 97)

Using a child restraint system

The use of a child restraint system not suitable for the vehicle may not properly secure the infant or child. It may result in death or serious injury (in the event of sudden braking or an accident).

Child restraint precautions

- For effective protection in automobile accidents and sudden stops, a child must be properly restrained, using a seat belt or child restraint system depending on the age and size of the child. Holding a child in your arms is not a substitute for a child restraint system. In an accident, the child can be crushed against the windshield, or between you and the vehicle's interior. This may cause death or serious injury to the child in the event of a sudden stop or an accident.
- Lexus strongly urges the use of a proper childrestraint system that conforms to the size of the child, installed on the rear seat. According to accident statistics, the child is safer when properly restrained in the rear seat than in the front seat.
- Never install a rear-facing child restrain system on the front passenger seat. In the event of an accident, the force of the rapid inflation of the front passenger airbag can cause death or serious injury to the child if a rear-facing child restraint system is installed on the front passenger seat.
- A forward-facing child restraint system may be allowed to be installed on the front passenger seat only when it is unavoidable. A child restraint system that requires a top tether strap should not be used in the front passenger seat since there is no top tether strap anchor for the front passenger seat. Adjust the seat-back as uprefit as possible and always move the seat as far back as possible because the front passenger airbag could inflate with considerable speed and force. Otherwise, the child may be killed or seriously injured.
- Do not allow the child to lean his/her head or any part of his/her body against the door or the area of the seat, front and rear pillars or roof side rails from which the SRS side airbags or SRS curtain shield airbags deploy even if the child is seated in the child restraint system. It is dangerous if the side airbags and curtain shield airbags inflate, and the impact could cause death or serious injury to the child.
- Make sure you have complied with all installation instructions provided by the child restraint manufacturer and that the system is properly secured. If it is not secured properly, it may cause death or serious injury to the child in the event of a sudden stop, sudden swerve or an accident.

When children are in the vehicle

Do not allow children to play with the seat belt. If the seat belt becomes twisted around a child's neck, it may lead to choking or other serious injuries that could result in death.

If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt.

When the child restraint system is not in use

- Keep the child restraint system properly secured on the seat even if it is not in use.
 Do not store the child restraint system unsecured in the passenger compartment.
- If it is necessary to detach the child restraint system, remove it from the vehicle or store it securely in the luggage compartment. This will prevent it from injuring passengers in the event of a sudden stop, suddent werve or accident.

1-8. Safety information Installing child restraints

Follow the child restraint system manufacturer's instructions. Firmly secure child restraints to the seats using a seat belt or ISOFIX rigid anchors. Attach the upper anchor strap when installing a child restraint.







Seat belts equipped with a child restraint locking mechanism (ALR/ELR belts on the rear seats)

ISOFIX rigid anchors (ISOFIX child restraint system)

Lower anchors are provided for the outer rear seats. (Buttons displaying the location of the anchors are attached to the seats.)

Child restraint anchor fitting

An anchor fitting is provided for each rear seat.

Installing child restraints using a seat belt (child restraint lock function belt)

Rear-facing — Baby (infant) seat/child (convertible) seat

STEP 1

STEP 2

STEP 3

Fold the seatback while pulling the seatback angle adjustment lever. Return the seatback and secure it at the first lock position. (\rightarrow P.85)




Place the child restraint system on the rear seat facing the rear of the vehicle.

Run the seat belt through the child restraint system and insert the plate into the buckle. Make sure that the belt is not twisted.



Fully extend the shoulder belt and allow it to retract to put it in lock mode. In lock mode, the belt cannot be extended.

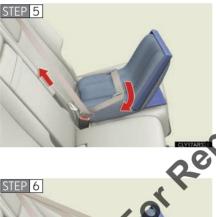

While pushing the child restraint system down into the rear seat, allow the shoulder belt to retract until the child restraint system is securely p place.

other the shoulder belt has retracted to a point where there is no slack in the belt, pull the belt to check that it cannot be extended.

Latch the attaching clip of the upper anchorage strap onto the anchor fitting. (\rightarrow P. 172)

Make sure the seat belt is tightly secured, and that there is no slack in the belt.

Forward-facing — Child seat (convertible seat)

STEP 1

Fold the seatback while pulling the seatback angle adjustment lever. Return the seatback and secure it at the first lock position. (\rightarrow P.85)

STEP 2

STEP 3

STEP 4

Place the child restraint system on the seat facing the front of the vehicle.


Run the seat belt through the child restraint system and insert the plate into the buckle. Make sure that the belt is not twisted.

Fully extend the shoulder belt and allow it to retract to put it in lock mode. In lock mode, the belt cannot be extended.



While pushing the child restraint system into the rear seat, allow the shoulder belt to retract until the child restraint system is securely in place.

After the shoulder belt has retracted to a point where there is no slack in the belt, pull the belt to check that it cannot be extended.

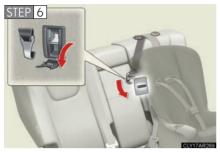

Junior seat (booster seat)

Latch the attaching clip of the upper anchorage strap onto the anchor fitting. $(\rightarrow P. 172)$

Make sure the seat belt is tightly secured, and that there is no slack in the belt.



Fold the seatback while pulling the seatback angle adjustment lever. Return the seatback and secure it at the first lock position. (\rightarrow P. 85)

Place the child restraint system on the seat facing the front of the vehicle.





Sit the child in the child restraint system. Fit the seat belt to the child restraint system according to the manufacturer's instructions and insert the plate into the buckle. Make sure that the belt is not twisted

Check that the shoulder belt is correctly positioned over the child's shoulder, and that the lap belt is as low as possible. \rightarrow P. 97)

Removing a child restraint installed with a seat be

For Report of the seat belt. the buckle release button

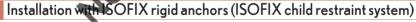

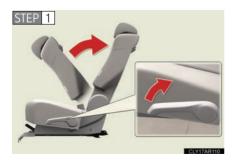

Fold the seatback while pulling the seatback angle adjustment lever. Return the seatback and secure it at the first lock position. $(\rightarrow P. 85)$





Secure the child restraint system using a seat belt or ISOFIX rigid anchors, and remove the head

Before driving



When installing a child restraint system in the front passenger's seat

You need a locking clip to install the child restraint system in the front seat. Follow the instructions provided by the manufacturer of the system. If your child restraint system does not provide a locking clip, you can purchase the following item from your Lexus dealer.

Locking clip for child restraint system (Part No. 73119-22010)

When installing a junior (booster) seat

To prevent the belt from going into ALR lock mode, do not fully extend the shoulder belt. ALR mode causes the belt to tighten only. This could cause injury or discomfort to the child. (\rightarrow P. 100)

When installing a child restraint system

Follow the directions given in the child restraint system installation manual and fix the child restraint system securely in place.

If the child restraint system is not correctly fixed in place, the child or other passengers may be seriously injured or even killed in the event of sudden braking, sudden swerving or an accident.



• If the driver's seat interferes with the child restraint sisten and prevents it from being attached correctly, attach the child restraint system to the left-hand rear seat.

A diust the front passenger seat so that it does not interfere with the child restraint system.

 Only put a forward-facing child restraint system on the front seat when unavoidable.
 When installing a forward-facing child restraint system on the front passenger seat, move the seat as far back as possible.
 Failure to do so may result in death or serious injury if the airbags deploy (inflate).

• When installing a child restraint system in the rear center seat, adjust both seat cushions to the same position and align both seatbacks at the same angle. The seatbacks must be adjusted to the same angle. Otherwise, the child restraint system cannot be securely restrained and this may cause death or serious injuries in the event of sudden braking, sudden swerving or an accident.

When installing a child restraint system





 Extreme Hazard! Do not use a rearward facing child restraint on a seat protected by an airbag in front of it! This is because the force of the rapid inflation of the front passenger airbag can cause death or serious injury to the child.

There is a sticker on the passenger side of the instrument panel and/a label on both sides of the passenger side sun visor, both indicating that it is forbidden to attach a rearward facing child restraint to the front passenger seat.

Details the label on the passenger side survisor are shown in the illustration below.

the label includes information written in the language of your country.

GDO NOT place a rear facing child seat on the front seat unless the passenger Bairbag is deactivated, DEATH OR SERIOUS INJURY can occur. See owner's manual.
NE JAMAIS placer un siège enfant positionne dos a la route sur le siège avant, Fisaut a tarbag passager est désactivé. Risque de MORT OU BLESSURE GRAVE. Von le manuel du propriétaire.
REINEN rückwärtsgerichteten Kindersitz auf dem Vordersitz verwenden, außer der Demahrer-Airbag ist deaktiviert. TOD ODER SCHWERE VERLETZUNGEN können die Folge sein. Siehe Betriebsanleitung.
NON posizionare il seggiolino per bambini rivolto in senso opposto a quello di marcia i sul sedile anteriore se l'airbag del passeggero non e'stato disattivato. Rischio di MORTE O LESIONI GRAVI. Consultare il manuale di uso e manutenzione.
NO coloque una silla para niños en sentido contrario al de la marcha del vehículo Elen el asiento del acompañante, excepto si el airbag del pasajero estuviera desactivado Riesgo de MUERTE O HERIDAS GRAVES. Consulte el manual del propietario.
GEEN tegen de rijrichting in geplaatst kinderzitje op de voorstoel plaatsen, tenzij de passagiersairbag gedeactiveerd is. DOOD OF ZWARE VERWONDINGEN kunnen het gevolg zijn. Zie instruktieboekje.

When installing a child restraint system

- If child restraint system regulations exist in the country where you reside, please contact your Lexus dealer for the child restraint system installation.
- When a junior (booster) seat is installed, always ensure that the shoulder belt is
 positioned across the center of the child's shoulder. The belt should be kept away
 from the child's neck, but not so that it could fall off the child's shoulder. Failing to
 do so may result in death or serious injury in the event of sudden braking, sudden
 swerving or an accident.

• Ensure that the belt and tab are securely locked and the seat belt is not twisted.

- Shake the child restraint system left and right, and tarward and backward to ensure that it has been securely installed.
- After securing a child restraint system, never adjust he seat.
- Follow all installation instructions provided whe child restraint system manufacturer.

To correctly attach a child restraint system to the anchors

When using the lower anchors, be sure that there are no foreign objects around the anchors and that the seat belt is not caught behind the child restraint system. Make sure the child restraint system is securely attached, or it may cause death or serious injury to the child or other passengers in the event of a sudden stop, sudden swerve or accident.

Using child restraint anchorages

WARNING: child restraint anchorages are designed to withstand only those loads imposed by correctly fitted child restraints. Under no circumstances are they to be used for adult seatbelts, harnesses, or for attaching other items or equipment to the vehicle. NotforReproduction

2-1. Driving procedures

	Driving the vehicle	180
	Engine (ignition) switch	193
	Power (ignition) switch	199
	EV drive mode	205
	Automatic transmission	208
	Hybrid trensmission	215
	Turn signa Hever	222
	Ranking brake	
	9rn	224
10tFor Rep		
6		

2

2-2. Instrument cluster

Gauges and meters	225
Indicators and warning	
lights	230
Multi-information	
display	236
Head-up display	249

2-3. Operating the lights and windshield wipers

Headlight switch	254
Fog light switch	258
Windshield wipers and	20
washer	259
Rear window wiper and	
washer	263
Headlight cleaner switch	265

2-5. Driving information

Utility vehicle precautions (RX270/RX350)	319
Utility vehicle precautions	
(RX450h)	. 324
Cargo and luggage	328
Winter driving tips	331
Trailer towing	334

The following procedures should be observed to ensure safe driving.
■ Starting the engine (RX270/RX350) →P. 193
Starting the hybrid system (RX450h) \rightarrow P. 199
 ■ Driving STEP 1 With the brake pedal depressed, shift the shift lever to D. (→P. 208, 215) STEP 2 Release the parking brake. (→P. 223)
STEP 3 Gradually release the brake pedal and gently depress the accelerator pedal to accelerate the vehicle.
 Stopping STEP 1 With the shift lever in D, depress the brake pedal. STEP 2 If necessary, set the parking brake. RX270/RX350: If the vehicle is to be stopped for an extended period of time, shift the shift lever to P or N. (→P. 208) RX450h: If the vehicle is to be stopped for an extended period of time, shift the shift lever to P. (→P. 215)
 Parking the vehicle STEP 1 With the shift lever in D, depress the brake pedal. STEP 2 Set the parking brake. (→P. 223) STEP 3 Shift the shift lever to P. (→P. 208, 215) If parking on a hill, block the wheels as needed. STEP 4 RX270/RX350: Press the "ENGINE START STOP" switch to stop the engine. RX450h: Press the "POWER" switch to stop the hybrid system. STEP 5 Lock the door, making sure that you have the electronic key on your person.

Starting off on a steep uphill

STEP 1 Make sure that the parking brake is set and shift the shift lever to D.

- STEP 2 Gently depress the accelerator pedal.
- STEP 3 Release the parking brake.

Driving in the rain

- Drive carefully when it is raining, because visibility will be reduced, the windows may become fogged-up, and the road will be slippery.
- Drive carefully when it starts to rain, because the road surface will be especially slippery.
- Refrain from high speeds when driving on an expressway in the rain, because there may be a layer of water between the tires and the road surface, preventing the steering and brakes from operating property.

Engine speed while driving (RX270/RX350)

In the following conditions, the engine speed may become high while driving. This is due to automatic up-shifting control or down-shifting implementation to meet driving conditions. It does not indicate sudden acceleration.

- The vehicle is judged to be riving uphill or downhill
- When the accelerator pedal is released

Breaking in your new Lexus

To extend the tite of the vehicle, observing the following precautions is recommended:

- For the first 300 km (200 miles): Avoid sudden stops.
- For the first 800 km (500 miles): Do not tow a trailer.
- For the first 2000 km (1200 miles):
 - Do not drive at extremely high speeds.
 - Avoid sudden acceleration.
 - Do not drive continuously in low gears.
 - Do not drive at a constant speed for extended periods.

Drum-in-disc type parking brake system

Your vehicle has a drum-in-disc type parking brake system. This type of brake system needs bedding-down of the brake shoes periodically or whenever the parking brake shoes and/or drum are replaced. Have your Lexus dealer perform the bedding down operation.

Operating your vehicle in a foreign country

Comply with the relevant vehicle registration laws and confirm the availability of the correct fuel. (\rightarrow P. 677)

For efficient use (RX450h)

- Shift the shift lever to D when driving. In the N position, the gasoline engine operates but electricity cannot be generated. The hybrid battery (traction battery) will discharge, requiring unnecessary engine power to recharge.
- Drive your vehicle smoothly. Avoid abrupt acceleration and deceleration. Gradual acceleration and deceleration will make more effective use of the electric motor (traction motor) without having to use gasoline engine power.

Avoid repeated acceleration. Repeated acceleration consumes hybrid battery (traction battery) power, resulting in poor acceleration. Battery power can be restored by driving with the accelerator pedal stightly released.

• Shift the shift lever to P when parking.

In the N position, the hybrid battery (traction battery) does not recharge. Leaving the shift lever in the N position for an extended period of time may discharge the hybrid battery. The vehicle cannot run if the hybrid battery is discharged.

Eco-friendly driving (RX270/RX350)



During Eco-friendly acceleration (Eco driving), Eco Driving Indicator Light will turn on. When the acceleration exceeds Zone of Eco driving, and when the vehicle is stopped, the light turns off.

Eco Driving Indicator Light will not operate in the following conditions:

- The shift lever is in anything other than D.
- The paddle shift switch s operated. (if equipped)
- The driving mode is set to snow mode. $(\rightarrow P. 210)$
- The vehicle speed is approximately 130 km/h (80 mph) or higher.

Eco-friendly driving (RX450h)

→P. 228

Customization (RX270/RX350)

Setting of Eco Driving Indicator Light can be changed. (Customizable features - P. 695)

When starting the vehicle

▶ RX270/RX350

Always keep your foot on the brake pedal while stopped with the engine running. This prevents the vehicle from creeping.

6.

▶ RX450h

Always keep your foot on the brake pedal while stopped with the hybrid system operating. This prevents the vehicle from creeping.


CAUTION

When driving the vehicle

- Do not drive if you are unfamiliar with the location of the brake and accelerator pedals to avoid depressing the wrong pedal.
 - Accidentally depressing the accelerator pedal instead of the brake pedal will result in sudden acceleration that may lead to an accident that could result in death or serious injury.
 - When backing up, you may twist your body around, leading to a difficulty in operating the pedals. Make sure to operate the pedals properly.
 - Make sure to keep a correct driving posture even when maying the vehicle only slightly. This allows you to depress the brake and accelerator pedals properly.
 - Depress the brake pedal using your right foot. Depressing the brake pedal using your left foot may delay response in arrenergency, resulting in an accident.
- RX450h: The driver should pay extra attention to pedestrians when the vehicle is powered only by the electric motor (traction motor). Because there is no engine noise, the pedestrians may misjudge the vehicle's movement.
- Do not drive the vehicle over or stop the vehicle near flammable materials. The exhaust system and exhaust gases can be extremely hot. These hot parts may cause a fire if there is any flammable material nearby.
- Do not let the vehicle roll backward while the shift lever is in a driving position, or roll forward while the shift lever is in R.

RX270/RX350: Doing so may cause the engine to stall or lead to poor brake and steering performance, resulting in an accident or damage to the vehicle. RX450h: Doing so may result in an accident or damage to the vehicle.

- If the smell of exhaust is noticed inside the vehicle, open the windows and check that the back door is closed. Large amounts of exhaust in the vehicle can cause driver drowsiness and an accident, resulting in death or a serious health hazard. Have the vehicle inspected by your Lexus dealer immediately.
- Do not shift the shift lever to P while the vehicle is moving.
 Doing so can damage the transmission and may result in a loss of vehicle control.
- Do not shift the shift lever to R while the vehicle is moving forward. Doing so can damage the transmission and may result in a loss of vehicle control.

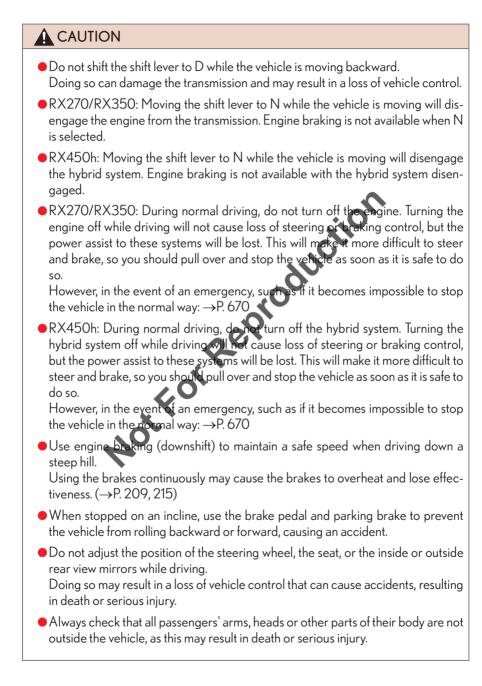

When driving on slippery road surfaces

- Sudden braking, acceleration and steering may cause tire slippage and reduce your ability to control the vehicle, resulting in an accident.
- Sudden acceleration, engine braking due to shift changing, or changes in engine speed could cause the vehicle to skid, resulting in an accident.
- After driving through a puddle, lightly depress the brake pedal to make sure that the brakes are functioning properly. Wet brake pads may prevent the brakes from functioning properly. If the brakes on only one side are wet and not functioning properly, steering control may be affected, resulting in an accident.

When shifting the shift lever

yot

Be careful not to shift the shift lever with the accelerator pedal depressed. This may lead to unexpected rapid acceleration of the vehicle that may cause an accident and result in death or serious injury.

■ If you hear a squealing or scraping noise (brake pad wear indicators)

Have your Lexus dealer check and replace the brake pads as soon as possible. Rotor damage can result if the pads are not replaced when needed.

It is dangerous to drive the vehicle when the wear limits of the brake pads and/or those of the brake discs are exceeded.

When the vehicle is stopped

• RX270/RX350: Do not race the engine.

If the vehicle is in any gear other than P or N, the vehicle may accelerate suddenly and unexpectedly, causing an accident.

• RX450h: Do not depress the accelerator pedal unnecessarily.

If the vehicle is in any gear other than P or N, the vehicle may accelerate suddenly and unexpectedly, causing an accident.

• RX270/RX350: Do not leave the vehicle with the engine ranning for a long time.

If such a situation cannot be avoided, park the vehicle in an open space and check that exhaust fumes do not enter the vehicle interior.

- RX450h: Do not leave the vehicle with the hybrid system on for a long time. If such a situation cannot be avoided, park the wehicle in an open space and check that exhaust fumes do not enter the vehicle interior.
- RX270/RX350: In order to prevent accidents due to the vehicle rolling away, always keep depressing the brake octal while the engine is running, and apply the parking brake as necessary.
- RX450h: In order to prevent accidents due to the vehicle rolling away, always keep depressing the brake pedal while the "READY" indicator is on. Apply the parking brake as necessary.
- If the vehicle is stopped on an incline, in order to prevent accidents caused by the vehicle rolling forward or backward, always depress the brake pedal and securely apply the parking brake as needed.

Avoid revving or racing the engine.

Running the engine at high speed while the vehicle is stopped may cause the exhaust system to overheat, which could result in a fire if combustible material is nearby.

When driving

When the vehicle is parked

• Do not leave glasses, cigarette lighters, spray cans, or soft drink cans in the vehicle when it is in the sun.

Doing so may result in the following:

- Gas may leak from a cigarette lighter or spray can, and may lead to a fire.
- The temperature inside the vehicle may cause the plastic lenses and plastic material of glasses to deform or crack.
- Soft drink cans may fracture, causing the contents to spray over the interior of the vehicle, and may also cause a short circuit in the vehicles electrical components.
- Do not leave cigarette lighters in the vehicle. If a cigarette lighter is in a place such as the glove box or on the floor, it may be lit accidentally when luggage is loaded or the seat is adjusted, causing a fire.
- Do not attach adhesive discs to the windshield or windows. Do not place containers such as air fresheners on the instrument panel or dashboard. Adhesive discs or containers may act as lenses, causing a fire in the vehicle.
- Do not leave a door or window open if the curved glass is coated with a metallized film such as a silver-colored one. Reflected sunlight may cause the glass to act as a lens, causing a fire.
- RX270/RX350: Always apply the parking brake, shift the shift lever to P, stop the engine and lock the vehicle.

Do not leave the vehicle unattended while the engine is running.

• RX450h: Arrays apply the parking brake, shift the shift lever to P, stop the hybrid system and lock the vehicle.

Do not leave the vehicle unattended while the hybrid system is operating.

- RX270/RX350: Do not touch the exhaust pipes while the engine is running or immediately after turning the engine off.
 Doing so may cause burns.
- RX450h: Do not touch the exhaust pipes while the hybrid system is operating or immediately after turning the hybrid system off.
 Doing so may cause burns.

- RX270/RX350: Do not leave the engine running in an area with snow build-up, or where it is snowing. If snowbanks build up around the vehicle while the engine is running, exhaust gases may collect and enter the vehicle. This may lead to death or a serious health hazard.
- RX450h: Do not leave the hybrid system operating in an area with snow buildup, or where it is snowing. If snowbanks build up around the vehicle while the hybrid system is operating, exhaust gases may collect and enter the vehicle. This may lead to death or a serious health hazard.

Exhaust gases

Exhaust gases include harmful carbon monoxide (CO) that is colorless and odorless. Inhaling exhaust gases may lead to death or a serious health hazard.

- If the vehicle is in a poorly ventilated area, stop the engine (RX270/RX350) or hybrid system (RX450h). In a closed area, such as a garage, exhaust gases may collect and enter the vehicle. This may lead to leath or a serious health hazard.
- The exhaust system should be checked occasionally. If there is a hole or crack caused by corrosion, damage to a toint or abnormal exhaust noise, be sure to have the vehicle inspected and repaired by your Lexus dealer. Failure to do so may allow exhaust gases to enter the vehicle, resulting in death or a serious health hazard.

When taking a nap in the vehicle

▶ RX270/RX350

Always turn the angine off. Otherwise, if you accidentally move the shift lever or depress the accelerator pedal, this could cause an accident or fire due to engine overheating. Additionally, if the vehicle is parked in a poorly ventilated area, exhaust gases may collect and enter the vehicle, leading to death or a serious health hazard.

▶ RX450h

Always turn the hybrid system off. Otherwise, if you may accidentally move the shift lever or depress the accelerator pedal, this could cause an accident or fire due to hybrid system overheating. Additionally, if the vehicle is parked in a poorly ventilated area, exhaust gases may collect and enter the vehicle, leading to death or a serious health hazard.

When braking the vehicle

• When the brakes are wet, drive more cautiously.

Braking distance increases when the brakes are wet, and this may cause one side of the vehicle to brake differently than the other side. Also, the parking brake may not securely hold the vehicle.

• If the power brake assist function does not operate, do not follow other vehicles closely and avoid hills or sharp turns that require braking.

In this case, braking is still possible, but the brake pedal should be depressed more firmly than usual. Also, the braking distance will increase

- RX270/RX350: Do not pump the brake pedal if the engine stalls. Each push on the brake pedal uses up the reserve for the power-assisted brakes.
- RX270/RX350: The brake system consists of 2 individual hydraulic systems; if one of the systems fails, the other will still operate. In this case, the brake pedal should be depressed more firmly than, so al and the braking distance will increase.

If this happens, do not drive the vehicle have your brakes fixed immediately.

• RX450h: The brake system consists of 3 individual hydraulic systems; if one of the systems fails, the others will still operate. In this case, the brake pedal should be depressed more firmly than usual and the braking distance will increase. If this happens, do not continue to drive the vehicle. If the brake system warning light (red indicator) comes on together with the buzzer sound while driving, immediately stop the vehicle in a safe place and contact your Lexus dealer.

If the vehicle becomes stuck

Do not spin the wheels excessively when any of the tires is up in the air, or the vehicle is stuck in sand, mud, etc. This may damage the driveline components or propel the vehicle forward or backward, causing an accident.

🕂 NOTICE

When driving the vehicle

- Do not depress the accelerator and brake pedals at the same time during driving, as this may restrain driving torque.
- Do not use the accelerator pedal or depress the accelerator and brake pedals at the same time to hold the vehicle on a hill.

When parking the vehicle

Always shift the shift lever to P. Failure to do so may cause the vehicle to move or the vehicle may accelerate suddenly if the accelerator pedal is accidentally depressed.

Avoiding damage to vehicle parts

• Do not turn the steering wheel fully in either direction and hold it there for an extended period of time.

Doing so may damage the power steering motor

• When driving over bumps in the road, drive as slowly as possible to avoid damaging the wheels, underside of the vehicle exc

If you get a flat tire while driving

A flat or damaged tire may cause the following situations. Hold the steering wheel firmly and gradually depress the brake pedal to slow down the vehicle.

- It may be difficult to control our vehicle.
- The vehicle will make abnormal sounds.
- The vehicle will behave abnormally.

Information on what to do in case of a flat tire (\rightarrow P. 627)

NOTICE

When encountering flooded roads

Do not drive on a road that has flooded after heavy rain etc. Doing so may cause the following serious damage to the vehicle:

- Engine stalling
- Short in electrical components
- Engine damage caused by water immersion

In the event that you drive on a flooded road and the vehicle is flooded, be sure to have your Lexus dealer check the following:

- Brake function
- RX270/RX350: Changes in quantity and quality of oil and fluid used for the engine, transaxle, transfer (AWD models), differential, etc.
- RX450h: Changes in quantity and quality of or and fluid used for the engine, hybrid transmission, rear electric motor (traction motor), etc.
- Lubricant condition for the propeller shaft (RX350), bearings and suspension joints (where possible), and the function of all joints, bearings, etc.

Notfor

Performing the following operations when carrying the electronic key on your person starts the engine or changes "ENGINE START STOP" switch modes.

Starting the engine

STEP 1 Check that the parking brake is set.

STEP 2 Check that the shift lever is set in P.

STEP 3 Firmly depress the brake pedal.

The "ENGINE START STOP" switch indicator will turn green. If the indicator does not turn green, the engine cannot be started.



Press the ENGINE START STOP" switch:

The engine will crank until it starts or for up to 30 seconds, whichever is less.

Continue depressing the brake pedal until the engine is completely started.

The engine can be started from any "ENGINE START STOP" switch mode.

Stopping the engine

STEP 1 Stop the vehicle.

STEP 2 Shift the shift lever to P.

STEP 3 Set the parking brake. $(\rightarrow P. 223)$

- STEP 4 Press the "ENGINE START STOP" switch.
- STEP 5 Release the brake pedal and check that the indicator on the "ENGINE START STOP" switch is off.

When driving

Changing "ENGINE START STOP" switch modes

Modes can be changed by pressing the "ENGINE START STOP" switch with the brake pedal released. (The mode changes each time the switch is pressed.)



When stopping the engine with the shift lever in a position other than P

If the engine is stopped with the shift lever in a position other than P, the "ENGINE START STOP" switch will not be turned off but instead be turned to ACCESSORY mode. Perform the following procedure to turn the switch off:

STEP 1 Check that the parking brake is set.

STEP 2 Shift the shift lever to P.

- STEP 3 Check that the indicator on the "ENGINE START STOP" switch is illuminated in amber and then press the "ENGINE START STOP" switch once.
- STEP 4 Check that the indicator on the "ENGINE START STOP" switch is off.

Auto power off function

When the shift lever is in P, if the vehicle is left in ACCESSORY or IGNITION ON mode with the engine not running to more than 20 minutes (ACCESSORY mode) or one hour (IGNITION ON mode), the "ENGINE START STOP" switch will automatically turn off. However, this function cannot entirely prevent battery discharge. Do not leave the vehicle with the "ENGINE START STOP" switch in ACCESSORY or IGNITION ON mode for long periods of time when the engine is not running.

Operation of the "ENGINE START STOP" switch

When operating the "ENGINE START STOP" switch, one short, firm press is enough. If the switch is pressed improperly, the engine may not start or the "ENGINE START STOP" switch mode may not change. It is not necessary to press and hold the switch.

Electronic key battery depletion

→P. 59

Conditions affecting operation

→P. 56

Note for the entry function

→P. 57

If the engine does not start

The engine immobilizer system may not have been deactivated. (\rightarrow P. 131) Contact your Lexus dealer.

Steering lock

After turning the "ENGINE START STOP" switch off and opening and closing the doors, the steering wheel will be locked due to the steering lock function. Operating the "ENGINE START STOP" switch again automatically cancels the steering lock.

When the steering lock cannot be released



The green indicator light on the "ENGINE START STOP" switch will flash and a message will be shown on the multi-information display. Press the "ENGINE START STOP" switch again while turning the steering wheel left and right

Steering lock motor overheating prevention

To prevent the steering lock motor from overheating, the motor may be suspended if the engine is turned on and off repeatedly in a short period of time. In this case, refrain from operating the engine. After about 2 seconds, the steering lock motor will resume functioning.

When the "ENGINE START STOP" switch indicator flashes in amber

The system may be malfunctioning. Have the vehicle inspected by your Lexus dealer immediately.

■ If the electronic key battery is depleted

→P. 536

CAUTION

When starting the engine

Always start the engine while sitting in the driver's seat. Do not depress the accelerator pedal while starting the engine under any circumstances.

Doing so may cause an accident resulting in death or serious injury.

Caution while driving

If the vehicle begins to slide due to engine failure or other circumstances, do not lock or open the doors until the vehicle reaches a safe and complete stop. Activation of the steering lock in this circumstance may lead to an accident, resulting in death or serious injury.

Stopping the engine in an emergency

If you want to stop the engine in an emergency while driving the vehicle, press and hold the "ENGINE START STOP" switch for more than 2 seconds, or press it briefly 3 times or more in succession. (\rightarrow P. 670)

However, do not touch the "ENGINE START STOP" switch while driving except in an emergency. Turning the engine off while driving will not cause loss of steering or braking control, but the power assist othese systems will be lost. This will make it more difficult to steer and brake would pull over and stop the vehicle as Notfor soon as it is safe to do so.

NOTICE

To prevent 12-volt battery discharge

- Do not leave the "ENGINE START STOP" switch in ACCESSORY or IGNI-TION ON mode for long periods of time without the engine running.
- If the indicator on the "ENGINE START STOP" switch is illuminated, the "ENGINE START STOP" switch is not off. When exiting the vehicle, always check that the "ENGINE START STOP" switch is off.
- Do not stop the engine when the shift lever is in a position other than P. If the engine is stopped in another shift lever position, the "ENGINE START STOP" switch will not be turned off but instead be turned to ACCESSORY mode. If the vehicle is left in ACCESSORY mode, 12-volt battery discharge may occur.

When starting the engine

- Do not race a cold engine.
- If the engine becomes difficult to start o starts frequently, have your vehicle checked by your Lexus dealer immediately.
- Symptoms indicating a malfunction with the "ENGINE START STOP" switch

If the "ENGINE START STOP" seems to be operating somewhat differently than usual, such as the switch sticking slightly, there may be a malfunction. Contact your Lexus dealer immediately.

2-1. Driving procedures Power (ignition) switch (RX450h)

Performing the following operations when carrying the electronic key on your person starts the hybrid system or changes "POWER" switch modes.

Starting the hybrid system

STEP 1 Check that the parking brake is set.

- STEP 2 Check that the shift lever is set in P.
- STEP 3 Firmly depress the brake pedal.

The "POWER" switch indicator will turn green. If the indicator does not turn green, the hybrid system cannot be started.



Press the "POWER" switch.

After a while, the "READY" indicator contres on with a beep sound

The vehicle can move when the "READY" indicator is on even if the engine is stopped.

Continue depressing the brake pedal until the hybrid system is completely started.

The hybrid system can be started from any "POWER" switch mode.

STEP 5 Check that the "READY" indicator is on. The vehicle will not move when the "READY" indicator is off. When driving

Stopping the hybrid system

- STEP 1 Stop the vehicle.
- STEP 2 Shift the shift lever to P.
- STEP 3 Set the parking brake. (\rightarrow P. 223)
- STEP 4 Press the "POWER" switch.
- STEP 5 Release the brake pedal and check that the indicator on the "POWER" switch is off.

Changing "POWER" switch modes

Modes can be changed by pressing the "POWER" switch with the brake pedal released. (The mode changes each time the switch is pressed.)

1 Off

The emergency flashers can be used.

2 ACCESSORY mode

Some electrical components such as the audio system can be used.

The "POWER" switch indicator turns amber.

3 ON mode

All electrical components can be used.

The "POWER" switch indicator turns amber.

*: If the shift lever is in a position other than P when turning off the hybrid system, the "POWER" switch will be turned to ACCESSORY mode, not to off.

When stopping the hybrid system with the shift lever in a position other than P

If the hybrid system is stopped with the shift lever in a position other than P, the "POWER" switch will not be turned off but instead be turned to ACCESSORY mode. Perform the following procedure to turn the switch off:

- STEP 1 Check that the parking brake is set.
- STEP 2 Shift the shift lever to P.
- STEP 3 Check that the indicator on the "POWER" switch is illuminated in amber and then press the "POWER" switch once

STEP 4 Check that the indicator on the "POWER" switch is off.

Auto power off function

When the shift lever is in P, if the vehicle is left in ACCESSORY or ON mode with the hybrid system not operating for more than 20 minutes (ACCESSORY mode) or one hour (ON mode), the "POWER" switch will automatically turn off. However, this function cannot entirely prevent 22 volt battery discharge. Do not leave the vehicle with the "POWER" switch in ACCESSORY or ON mode for long periods of time when the hybrid system is not operating.

Operation of the "POWER" switch

When operating the "POWER" switch, one short, firm press is enough. If the switch is pressed improperty, the hybrid system may not start or the "POWER" switch mode may not change. It is not necessary to press and hold the switch.

Sounds and vibrations specific to a hybrid vehicle

→P. 30

Electronic key battery depletion

→P. 59

When the ambient temperature is low, such as during winter driving conditions

It may take time until the "READY" indicator comes on.

Conditions affecting operation

→P. 56

Note for the entry function

→P. 57

If the hybrid system does not start

The immobilizer system may not have been deactivated. (\rightarrow P. 133) Contact your Lexus dealer.

Steering lock

After turning the "POWER" switch off and opening and closing the doors, the steering wheel will be locked due to the steering lock function. Operating the "POWER" switch again automatically cancels the steering lock.

When the steering lock cannot be released



The green indicator light on the "POWER" switch will flash and a message will be shown on the multi-information display. Press the "POWER" switch again while turning the steering wheel left and right.

Steering lock motor overheating prevention

To prevent the steering lock motor from overheating, the motor may be suspended if the hybrid system is turried on and off repeatedly in a short period of time. In this case, refrain from operating the hybrid system. After about 2 seconds, the steering lock motor will resume functioning.

When the "POWER" switch indicator flashes in amber

The system may be malfunctioning. Have the vehicle inspected by your Lexus dealer immediately.

■ If the "READY" indicator does not come on

If the "READY" indicator does not come on when you press the "POWER" switch with the shift lever in P and the brake pedal depressed, contact your Lexus dealer immediately.

■ If the hybrid system is malfunctioning

→P. 602

■ If the electronic key battery is depleted

→P. 536

CAUTION

When starting the hybrid system

Always start the hybrid system while sitting in the driver's seat. Do not depress the accelerator pedal while starting the hybrid system under any circumstances. Doing so may cause an accident resulting in death or serious injury.

Caution while driving

If a hybrid system failure occurs while the vehicle is moving, do not lock or open the doors until the vehicle reaches a safe and complete stop. Activation of the steering lock in this circumstance may lead to an accident, resulting indeath or serious injury.

Stopping the hybrid system in an emergency

If you want to stop the hybrid system in an emergen while driving the vehicle, press and hold the "POWER" switch for more than 2 seconds, or press it briefly 3 times or more in succession. $(\rightarrow P. 670)$

However, do not touch the "POWER" switch while driving except in an emergency. Turning the hybrid system off while driving with not cause loss of steering or braking control, but the power assist to these systems will be lost. This will make it more difficult to steer and brake, so you should pull over and stop the vehicle as soon as it is Notfor safe to do so.

2

NOTICE

To prevent 12-volt battery discharge

Do not leave the "POWER" switch in ACCESSORY or ON mode for long periods of time without the hybrid system on.

- If the indicator on the "POWER" switch is illuminated, the "POWER" switch is not off. When exiting the vehicle, always check that the "POWER" switch is off.
- Do not stop the hybrid system when the shift lever is in a position other than P. If the hybrid system is stopped in another shift lever position, the "POWER" switch will not be turned off but instead be turned to ACCESSORY mode. If the vehicle is left in ACCESSORY mode, 12-volt battery discharge may occur.

When starting the hybrid system

- Do not depress the accelerator pedal unnecessarily.
- If the hybrid system becomes difficult to start, are your vehicle checked by your Lexus dealer immediately.
- Symptoms indicating a malfunction with the "POWER" switch

If the "POWER" switch seems to be operating somewhat differently than usual, such as the switch sticking slightly there may be a malfunction. Contact your Lexus dealer immediately.

204

2-1. Driving procedures EV drive mode (RX450h)

In EV drive mode, the electric motor (traction motor), powered by the hybrid battery (traction battery), is used to drive the vehicle.

This mode allows you to drive in residential areas early in the morning and late at night, or in indoor parking lots etc. without concern for noises and exhaust gas emissions.



Turns EV drive mode on/off

When EV drive mode is turned on, the EV drive mode indicator will come on Pressing the switch when in EV drive mode will return the vehicle to normal driving (using the gasoline engine and electric motor [traction motor]).

Switching to EV drive mode when the gasoline engine is cold

If the hybrid system is started while the gasoline engine is cold, the gasoline engine will start automatically after a short period of time in order to warm up. In this case, you will become unable to switch to EV drive mode.

After the hybrid system has started and the "READY" indicator has illuminated, press the EV drive mode switch before the gasoline engine starts to switch to EV drive mode.

Situations in which EV drive mode cannot be turned on

It may not be possible to turn EV drive mode on in the following situations. If it cannot be turned on, a buzzer will sound and a message will be shown on the multiinformation display.

The temperature of the hybrid system is high.
 The vehicle has been left in the sun, driven on a hill, driven at high speeds, etc.

The temperature of the hybrid system is low.

The vehicle has been left in extremely low temperatures for a long period of time etc.

tion

• The gasoline engine is warming up.

The hybrid battery (traction battery) is low.

• Vehicle speed is about 40 km/h (25 mph) or more.

- The accelerator pedal is depressed firmly or the vehicle is on a hill etc.
- The windshield defogger is in use.

Automatic cancelation of EV drive mode 🗨

When driving in EV drive mode, the gasoline engine may automatically restart in the following situations. When EV drive mode is canceled, a buzzer will sound and the EV drive mode indicator will hash and go off.

- The hybrid battery (traction battery) becomes low.
- Vehicle speed becomes more than about 40 km/h (25 mph). If engine coolant temperature is low, EV drive mode may be canceled when vehicle speed is below 40 km/h (25 mph).
- The accelerator pedal is depressed firmly or the vehicle is on a hill etc.

When it is possible to inform the driver of automatic cancelation in advance, a prior notice screen will appear on the multi-information display.

Possible driving distance when driving in EV drive mode

In EV drive mode, it is possible to drive up about 1 km (1/2 mile) if driving at a speed of about 40 km/h (25 mph) or less.

(The distance that is possible depends on the hybrid battery [traction battery] level and driving conditions.)

Fuel economy

RX450h is designed to achieve the best possible fuel economy during normal driving (using the gasoline engine and electric motor [traction motor]). Driving in EV drive mode more than necessary may lower fuel economy.

Caution while driving

When driving in EV drive mode, pay special attention to the area around the vehicle. Because there is no engine noise, pedestrians, people riding bicycles or other people and vehicles in the area may not be aware of the vehicle starting off or approaching them, so take extra care while driving.

ction

2

2-1. Driving procedures Automatic transmission (RX270/RX350)

Select a shift position appropriate for the driving conditions.

Shifting the shift lever



While the "ENGINE START STOP" switch is in IGNITION ON mode, depress the brake pedal and move the shift lever.

When shifting the shift laver between P and D, make sure that the vehicle is completely stopped.


Shift position purposeShift positionFunctionPParking the vehicle/starting the engineRReversingNNeutralDNormal driving*1SS mode driving*2 (→P. 211)

*1: Shifting to the D position allows the system to select a gear suitable for the driving condition. Setting the shift lever to the D position is recommended for normal driving.

*2: Selecting shift ranges using S mode restricts the upper limit of the possible gear ranges, controls engine braking orces, and prevents unnecessary upshifting.


Selecting snow mode

Use snow mode for accelerating and driving on slippery road surfaces such as snow.

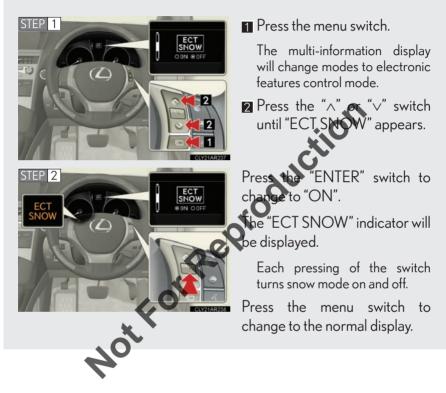

Changing shift ranges in S mode

To enter S mode, shift the shift lever to the S position. The shift range can then be selected by operating the "-" and "+" paddle shift switches (if equipped) or the shift lever. Changing the shift range allows restriction of the upper limit of the gears to be used, preventing unnecessary upshifting and enabling the level of engine braking force to be selected.

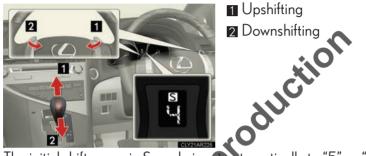

The initial shift range in S mode is set automatically to "5" or "4" according to vehicle speed. However, the initial shift range may be set to "3" if AI-SHIFT has operated while the shift lever was in the D position. $(\rightarrow P. 213)$

Shift ranges and their functions


• Automatically selecting gears between 1 and 6 according to vehicle speed and driving conditions. But the gear is limited according to selected shift range.

• You can choose from 6 levels of engine braking force.

• A lower shift range will provide greater engine braking force than a higher shift range, and the engine speed will also increase.

Selecting shift ranges in the D position (vehicles with paddle shift switches)

To drive using temporary shift range selection, operate the "-" paddle shift switch. The shift range can then be selected by operating the "-" and "+" paddle shift switches. Changing the shift range allows restriction of the upper limit of the gears to be used, preventing unnecessary upshifting and enabling the level of engine braking force to be selected.

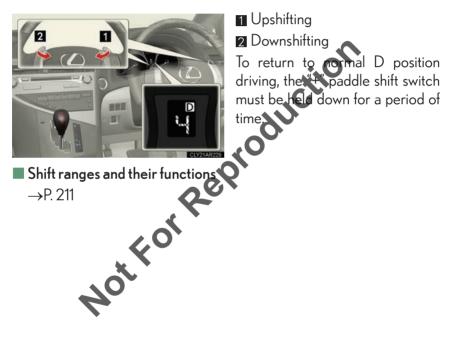

When the "-" paddle shift switch is operated in the D position (vehicles with paddle shift switches)

When the "-" paddle shift switch is operated in the D position, a shift range will be automatically selected. The highest gear of the first shift range will be one gear lower than the gear in use during normal D position driving.

Automatic deactivation of shift range selection in the D position (vehicles with paddle shift switches)

Shift range selection in the D position will be deactivated in the following situations:

When the vehicle comes to a stop

- When range 6 is selected and the accelerator pedal is depressed
- If the accelerator pedal is depressed for more than a certain period of time

Snow mode automatic deactivation

Snow mode is automatically deactivated if the "INCINE START STOP" switch is turned off after driving in snow mode.

S mode

- When the shift range is "5" or love tolding the shift lever toward "+" sets the shift range to "6".
- To prevent the engine from over-revving, upshifting may automatically occur.
- To protect the automatic transmission, a function is adopted that automatically selects a higher shift range when the fluid temperature is high.

AI-SHIFT

AI-SHIFT automatically selects the suitable gear according to driver performance and driving conditions.

The AI-SHIFT automatically operates when the shift lever is in the D position. (Shifting the shift lever to the S position cancels the function.)

The engine speed may remain high after releasing the accelerator pedal. This does not indicate a malfunction.

Driving on a downhill

On declines, there may be case where the vehicle shifts down automatically to obtain engine braking. As a result of the downshifting, the engine speed may increase.

When driving

When driving with cruise control or radar cruise control activated

Even when performing the following actions with the intent of enabling engine braking, engine braking will not activate while driving in S mode and downshifting to 5 or 4 because cruise control or radar cruise control will not be canceled. $(\rightarrow P. 266, 271)$

■ If the shift lever cannot be shifted from P

→P. 644

■ If S does not come on or D comes on even after shifting the shift lever to S

This may indicate a malfunction in the automatic transmission system. Have the vehicle inspected by Lexus dealer immediately.

(In this situation, the transmission will operate in the same a manner as when the shift lever is in D.)

Downshift restriction warning buzzer

To help ensure safety and driving performance, downshifting operation may sometimes be restricted. In some circumstances, downshifting may not be possible even when the shift lever or paddle shift switch is operated. (The warning buzzer will sound twice.)

woth for the state of the state

2-1. Driving procedures Hybrid transmission (RX450h)

Select a shift position appropriate for the driving conditions.

Shifting the shift lever



While the "POWER" switch is in ON mode, depress the brake pedal and move the shift layer.

When shifting the shift laver between P and D, make sure that the vehicle is completely stopped.


Shift position purpose

Shift position	• Function
P	Parking the vehicle/starting the hybrid system
R	Reversing
Ν	Neutral
D	Normal driving*1
S	S mode driving *2 (\rightarrow P. 219)

- *1: Shifting to the D position allows the system to select a gear suitable for the driving condition. Setting the shift lever to the D position is recommended for normal driving.
- *²: Selecting shift ranges using S mode controls engine braking forces.

Selecting Eco drive mode

When the vehicle is driven in Eco drive mode, vehicle driving force and operation of the air conditioning system (heating/cooling) is controlled to improve fuel efficiency.

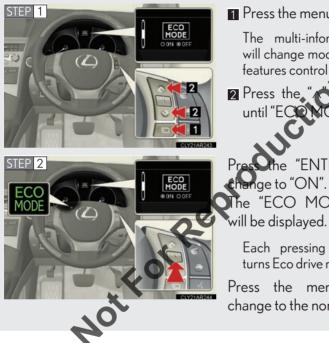

Press the menu switch.

The multi-information display will change modes to electronic features control mode.

2 Press the " " switch until "ECONODE" appears.


the "ENTER" switch to nange to "ON". he "ECO MODE" indicator

Each pressing of the switch turns Eco drive mode on and off.

Press the menu switch to change to the normal display.


Selecting snow mode

Use snow mode for accelerating and driving on slippery road surfaces such as snow.

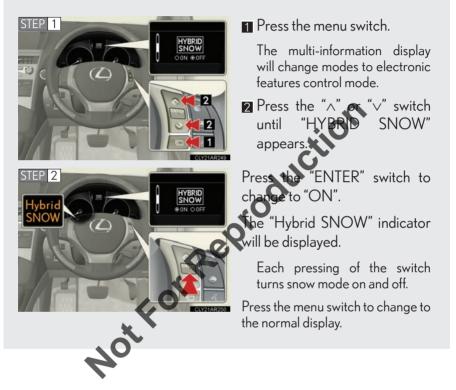


Selecting sport mode

Use when high levels of response and feeling are desirable, such as when driving in mountainous regions or when overtaking.

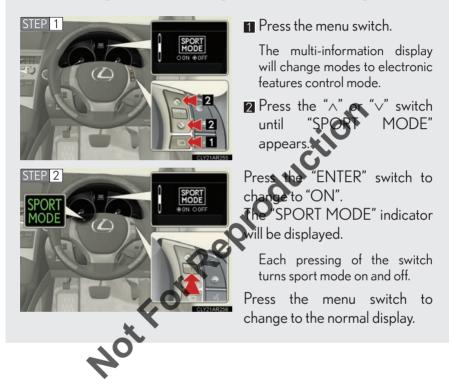

Changing shift ranges in S mode

When the shift lever is in the S position, the shift lever can be operated as follows:

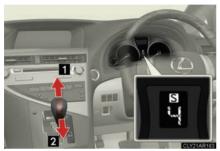

1 Upshifting 2 Downshifting



The initial shift range in S mode is set automatically to "5" or "4" according to vehicle speed.

Shift ranges and their functions

- ullet You can choose from 6 levels of engine braking force.
- A lower shift range will provide greater engine braking force than a higher shift range, and the engine speed will also increase. Not

When driving

Operation of the air conditioning system in Eco drive mode

Eco drive mode controls the heating/cooling operations and fan speed of the air conditioning system to enhance fuel efficiency. (\rightarrow P. 344) To improve air conditioning performance, adjust the fan speed or turn off Eco drive mode.

Automatic return to normal driving mode

If snow mode or sport mode is selected, the driving mode will automatically return to normal mode when the hybrid system is turned off.

S mode

- When the shift range is "5" or lower, holding the shift lever toward "+" sets the shift range to "6".
- To prevent the engine from over-revving, upshifting may automatically occur.

AI-SHIFT

AI-SHIFT automatically selects the suitable gear according to driver performance and driving conditions.

AI-SHIFT automatically operates when the shift lever is in the D position. (Shifting the shift lever to the S position cancels the function.)

The engine speed may remain high after releasing the accelerator pedal. This does not indicate a malfunction.

When driving with cruise control or radar cruise control activated

Even when performing the following actions with the intent of enabling engine braking, engine braking will not activate because cruise control or radar cruise control will not be canceled.

• While driving in D or S mode, downshifting to 5 or 4. (\rightarrow P. 266, 271)

When switching the driving mode to sport mode while driving in D position.
 (→P. 218)

■ If the shift lever cannot be shifted from P

→P. 644

If S does not come on even after shifting the shift lever to S

This may indicate a malfunction in the hybrid transmission system. Have the vehicle inspected by Lexus dealer immediately.

(In this situation, the hybrid transmission will operate in the same as manner as when the shift lever is in D.)

Downshift restriction warning buzzer (S mode)

To help ensure safety and driving performance, downshifting operation may sometimes be restricted. In some circumstances, downshifting may not be possible even when the shift lever is operated. (The buzzer will sound twice.)

CAUTION

When driving on slippery road surfaces

Do not accelerate or shift gears suddenly. Sudden changes in engine braking may cause the vehicle to spin or skid, resulting in an accident.

Hybrid battery (traction battery) charge pre-caution If the shift lever is in N, the hybrid battery (the shift lever is running. The shift lever is running. The shift lever is a long period of the matrix If the shift lever is in N, the hybrid battery (traction battery) will not be charged even when the engine is running. Therefore, the vehicle is left with the shift lever in N for a long period of time, the hybrid battery (traction battery) will discharge, and this may result in the vehicle not being able to start.

NotFor

2-1. Driving procedures Turn signal lever

The turn signal lever can be used to show the following intention of the driver:



■ If the indicators flash faster than usual

Check that a light bulb in the front or rear turn signal lights has not burned out.

2-1. Driving procedures **Parking brake**



To set the parking brake, fully depress the parking brake pedal with your left foot while depressing the brake pedal with your right foot.

(Depressing the pedal again releases the parking brake.)

■ Usage in winter time

 $\rightarrow P.331$

NOTICE

Before driving

Reproduction Reproduction pr pr Fully release the parking brake. Driving the vehicle with the parking brake set will lead to brake components overheating, which may affect baing performance and increase brake wear. Not


2-1. Driving procedures **Horn**




To sound the horn, press on or close to the karnet.

weiter

2-2. Instrument cluster Gauges and meters

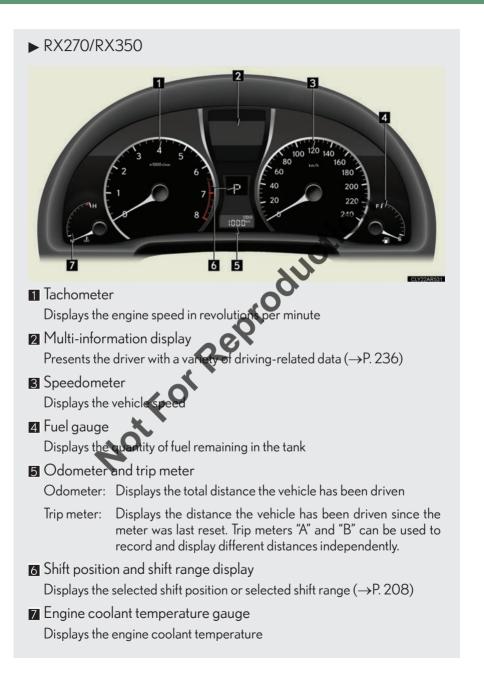


2

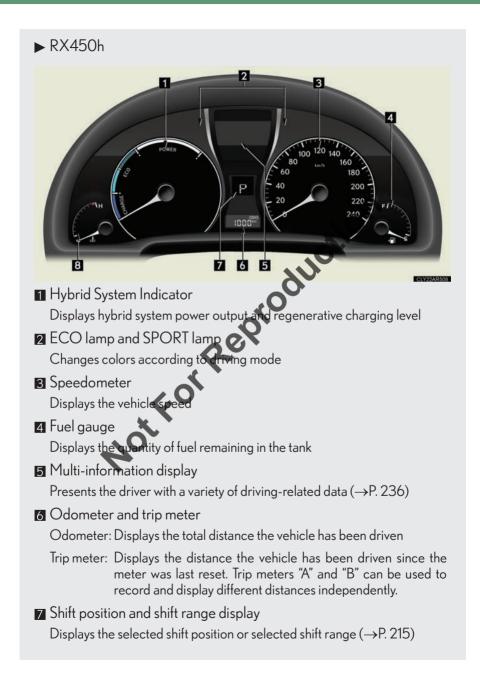

2-2. Instrument cluster

B Engine coolant temperature gauge Displays the engine coolant temperature

Changing the display

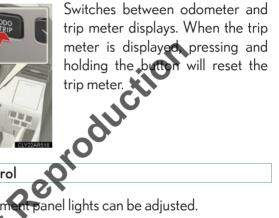

Instrument panel light control

The brightness of the instrument panel lights can be adjusted.

The meters and display illuminate when

▶ RX270/RX350

The "ENGINE START STOP" switch is in IGNITION ON mode.

▶ RX450h


The "POWER" switch is in ON mode.



1 Darker 2 Brighter

2

Hybrid System Indicator (RX450h)

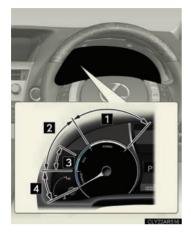

1 Power area

Shows that an Eco-friendly driving range is being exceeded (during full power driving etc.)

2 Eco area

Shows that the vehicle is being driven in an Eco-friendly manner.

3 Hybrid Eco area

Shows that gasoline engine power is not being used very often

The gasoline engine will automatically stop and restart under various conditions.

4 Charge area

Shows that energy is being recovered via regenerative braking.

- By keeping the indicator within Ecoarda, more Eco-friendly driving can be achieved.
- Charge area indicates regeneration* status. Regenerated energy will be used to charge the hybrid battery (traction battery).

*: When used in this manual, "regeneration" refers to the conversion of energy created by the movement of the vehicle into electrical energy.

ECO lamp and SPORT lamp (RX450h)

- When sport mode is selected, the SPORT lamp (red) will illuminate.
- When all of the following conditions are satisfied and the Eco-friendly driving, the ECO lamp (blue) will illuminate:
 - When driving with the shift lever in D
 - When either normal mode or Eco mode are selected, and EV drive mode and snow mode are not in use
 - The vehicle speed is approximately 130km/h (80 mph) or below.

Customization (RX450h)

Settings (e.g. on/off operation of the ECO lamp) can be changed. (Customizable features \rightarrow P. 695)

A NOTICE

To prevent damage to the engine and its components

- RX270/RX350: Do not let the indicator needle of the tachometer enter the red zone, which indicates the maximum engine speed.
- The engine may be overheating if the engine coolant temperature gauge is in the red zone (H). In this case, immediately stop the vehicle in a safe place, and check the engine after it has cooled completely. (→P. 660, 663)



When driving

2-2. Instrument cluster Indicators and warning lights

The indicator and warning lights on the instrument cluster and center panel inform the driver of the status of the vehicle's various systems.

For the purpose of explanation, the following illustration displays all indicators and warning lights illuminated.

- Instrument cluster
- ▶ RX270/RX350





Indicators

The indicators inform the driver of the operating state of the vehicle's various systems.



Turn signal indicator (→P. 222) Headlight high beam indicator (\rightarrow P. 255)



Tail light indicator $(\rightarrow P. 254)$



Front fog light indicator (→P. 258)



Rear fog light indicato $(\rightarrow P. 258)$



NOW" indica-"Hybrid



"ECO MODE" indicator $(\rightarrow P. 216)$



Cruise control indicator (→P. 266, 271)

(if equipped)



VSC off indicator $(\rightarrow P.305)$



"READY" indicator $(\rightarrow P. 199)$



Eco Driving Indicator Light (\rightarrow P. 183)



(RX450h)

"SPORT MODF" indicator (\rightarrow P. 218)



EV drive mode indicator $(\rightarrow P. 205)$



All-wheel drive lock indicator (\rightarrow P. 309)



"PCS" warning (\rightarrow P. 312)

"ECT SNOW" indicator


 $(\rightarrow P. 210)$



- *1: These lights turn on when the "ENGINE START STOP" switch is turned to IGNITION ON mode to indicate that a system check is being performed. They will turn off after the engine is started, or after a few seconds. There may be a malfunction in a system if a light does not come on, or if the lights do not turn off. Have the vehicle inspected by your Lexus dealer, for details.
- *²: The light flashes to indicate that the system is operating.
- *³: The light comes on when the system is turned off. The light flashes faster than usual to indicate that the system is operating.
- ▶ RX450h
- *1: These lights turn on when the "POWER" switch is turned to ON mode to indicate that a system check is being performed. They will turn off after the hybrid system is on, or after a few seconds. There may be a malfunction in a system if a light does not come on, or if the lights do not turn off. Have the vehicle inspected by your Lexus dealer.
- *2 : The light flashes to indicate that the system is operating.
- *³: The light comes on when the system is turned off. The light flashes faster than usual to indicate that the system is operating.

Warning lights

Warning lights inform the driver of malfunctions in any of the vehicle's systems. (\rightarrow P. 596)

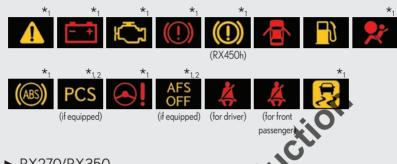

▶ RX270/RX350

*1: These lights turn on when the "ENGINE START STOP" switch is turned to IGNITION ON mode to indicate that a system check is being performed. They will turn offatter the engine is started, or after a few seconds. There may be a malfunction in a system if a light does not come on, or if the lights do not turn off. Have the vehicle inspected by your Lexus dealer, for details.

 $*^2$: The light flashes to include a malfunction.

- ▶ RX450h
 - *1: These lights turn on when the "POWER" switch is turned to ON mode to indicate that a system check is being performed. They will turn off after the hybrid system is on, or after a few seconds. There may be a malfunction in a system if a light does not come on, or if the lights do not turn off. Have the vehicle inspected by your Lexus dealer.
 - *²: The light flashes to indicate a malfunction.

CAUTION

■ If a safety system warning light does not come on

Should a safety system light such as the ABS and SRS warning light not come on when you start the engine (RX270/RX350) or hybrid system (RX450h), this could mean that these systems are not available to help protect you in an accident, which could result in death or serious injury. Have the vehicle inspected by your Lexus dealer immediately if this occurs.



2-2. Instrument cluster Multi-information display

The multi-information display presents the driver with a variety of drivingrelated data including the current outside air temperature.

Multi-information switches



1 " \wedge " " \vee " switch

Changes items.


2 "ENTER" switch

Turns on/off electronic features controls and changes customization settings.

Menu switch


Changes mode from normal ditolay to electronic features, Cistomization or back to normal display.


Display contentsRX270/RX350

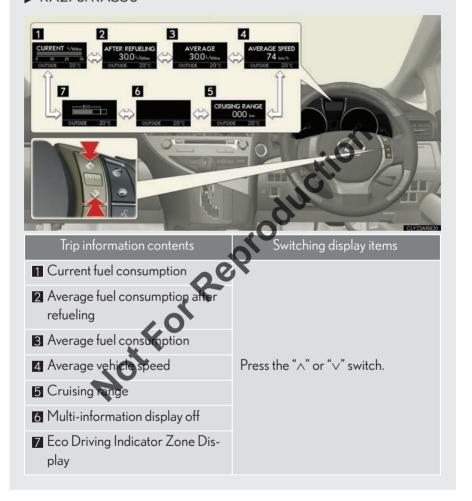



Other contents	Details
Outside temperature	Displays the outside temperature
Dynamic radar cruise control display (if equipped) (\rightarrow P. 271)	Automatically displayed when using dynamic radar cruise control
Window close suggestion mode (→P. 244)	If you forget to close a window before exiting the vehicle, a sugges- tion to close all the windows is shown.
Customization (\rightarrow P. 695)	Settings of functions such as the door lock and light illumination time can be changed
Warning message (\rightarrow P. 602)	Automatically displayed when a mal- function occurs in one of the vehi- cle's systems
6- 6-	
NotForRe	

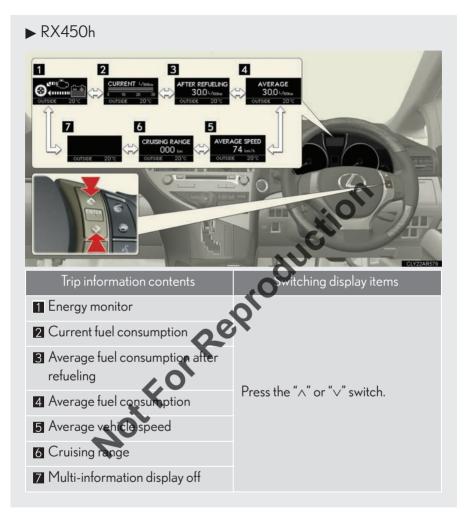

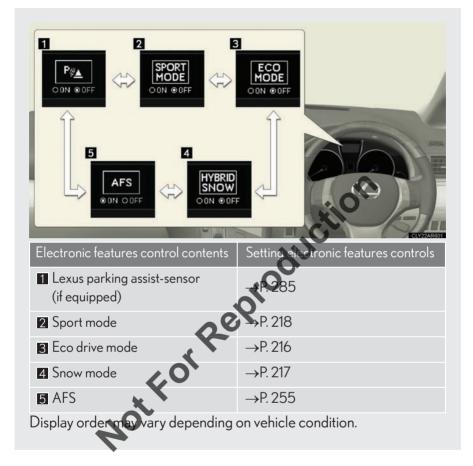

Other contents	Details
Outside temperature	Displays the outside temperature
Dynamic radar cruise control display (if equipped) (\rightarrow P. 271)	Automatically displayed when using dynamic radar cruise control
Window close suggestion mode (→P. 244)	If you forget to close a window before exiting the vehicle, a sugges- tion to close all the windows is shown.
Customization (\rightarrow P. 695)	Settings of functions such as the door lock and light illumination time can be changed
Warning message (\rightarrow 602)	Automatically displayed when a mal- function occurs in one of the vehi- cle's systems
00	, •
rip information	
Energy monitor (RX450h) Displays the status of the hybrid s	$v_{\rm retard}$ ($\lambda P 37$)
	ystem (>r. 57)
Current fuel consumption	
Displays the current rate of fuel c	
Average fuel consumption after Displays the average fuel consum eled	refueling nption since the vehicle was last ref
eled	

Average fuel consumption

Displays the average fuel consumption since the function was reset

- The function can be reset by pushing the "ENTER" switch for longer than one second when the average fuel consumption is displayed.
- Use the displayed average fuel consumption as a reference.

Average vehicle speed

Displays the average vehicle speed since the function was reset

The function can be reset by pushing the "ENTER" switch for longer than one second when the average vehicle speed is displayed.

Cruising range

Displays the estimated maximum distance that can be driven with the quantity of fuel remaining

- This distance is computed based on your average fuel consumption. As a result, the actual distance that can be driven may differ from that displayed.
- When only a small amount of user is added to the tank, the display may not be updated.

RX270/RX350: When refueling, turn the "ENGINE START STOP" switch off. If the vehicle is refueled without turning the "ENGINE START STOP" switch off, the display may not be updated.

RX450h: When refueling, turn the "POWER" switch off. If the vehicle is refueled without turning the "POWER" switch off, the display may not be updated

Eco Driving Indicator Zone Display (RX270/RX350)

→P. 247

When driving


Window close suggestion mode

▶ RX270/RX350

If any of the windows is open when the "ENGINE START STOP" switch is turned off, a suggestion is shown on the multi-information display asking the driver if they want to close all the windows. Following the procedure below closes all the windows.

▶ RX450h

If any of the windows is open when the "POWER" switch is turned off, a suggestion is shown on the multi-information display asking the driver if they want to close all the windows. Following the procedure below closes all the windows.

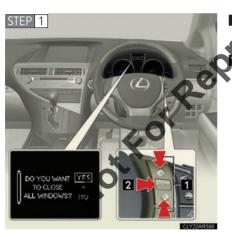

■ Press the "∧" or "∨" switch to select "YES".

Press the "ENTER" switch.

If "NO" is selected, the window close suggestion mode will be terminated.



- Press the "∧" or "∨" switch to select "START".
- 2 Press the "ENTER" switch.

All windows will start to close.

If "CANCEL" is selected, the window close suggestion mode will be terminated.



Electronic features control can be turned on/of when

▶ RX270/RX350

The "ENGINE START STOP" switch is in CONITION ON mode.

▶ RX450h

The "POWER" switch is in ON-mode.

Conditions for ending electronic features control

In the following situations, the electronic features control will end:

- The menu switch is pressed.
- The dynamic radar cruise control is operated (if equipped).
- Lexus parking assist-sensor starts operating (if equipped).
- No action is performed for some time after the electronic features control screen is displayed.
- A warning message appears after the electronic features control screen is displayed.

Window close suggestion mode

In the following situations, the window close suggestion mode will not operate:

- A warning message appears on the multi-information display.
- The window lock switch is on
- All the windows are closed.
- The window close suggestion mode has been disabled in the customized settinas.
- The driver's or front passenger's door is open.
- In the following situations, the window close suggestion mode will end:
 - RX270/RX350: The "ENGINE START STOP" switch is furned to IGNI-TION ON mode.
 - RX450h: The "POWER" switch is turned to ON m
 - RX270/RX350: About 20 seconds have passed since the "ENGINE START STOP" switch was turned off.
 - RX450h: About 20 seconds have passed since the "POWER" switch was turned off.
 - A warning message appears on the multi-information display.
 - All the windows are closed.
 - The window lock switch is turned
 - The menu switch is pressed.

 - The driver's or front passenger's door is opened.
 The windows were opened or closed by the wireless remote control.
- In the following situations, the window close operation will stop partway:
 - RX270/RX350 The "ENGINE START STOP" switch is turned to IGNI-TION ON mode.
 - RX450h: The "POWER" switch is turned to ON mode.
 - The "ENTER" switch was pressed.
 - The window lock switch was turned on.
 - The iam protection function was activated.
 - The windows were opened or closed by the wireless remote control.

If the power window switch of any of the doors is operated while in window close suggestion mode, the window close operation of that door will stop partway.

Eco Driving Indicator (RX270/RX350)



- Eco Driving Indicator Light During Eco-friendly acceleration (Eco driving), Eco Driving Indicator Light will turn on.
- Eco Driving Indicator Zone Display Suggests Eco driving range with current Eco driving ratio based on acceleration.
- 3 Zone of Eco driving
- Eco driving ratio based on acceleration If Zone of Eco driving is exceeded, the right of Eco Driving Indicator Zone Display will blink and Eco Driving Indicator Light willtum off.

Outside temperature display

In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normalize change.

- When stopped, or driving at low speeds (less than 25 km/h [16 mph])
- When the outside temperature has changed suddenly (at the entrance/exit of a garage, tunnel, etc.)

The multi-information display at low temperatures

Allow the interior of the vehicle to warm up before using the liquid crystal information display. At extremely low temperatures, the information display monitor may respond slowly, and display changes may be delayed.

Customization

Settings (e.g. available languages) can be changed. (Customizable features \rightarrow P. 695)

CAUTION

Operating the windows close suggestion mode

- Before closing the windows, ensure that there are no objects in the surrounding area that could become caught in the windows.
- Check that all the windows are closed when exiting the vehicle, as window close suggestion mode may not operate under certain conditions.

Caution while driving

ving, take When operating the electronic features control while driving, take extra notice of the vehicle's surrounding area.

2

2-2. Instrument cluster Head-up display*

The head-up display can be used to project vehicle speed and other information onto the windshield.



*: If equipped

Head-up display contents

In addition to vehicle speed, the following information will be displayed:



Audio display

Displays audio information for approximately 3 seconds when the audio system is operated

Shift position and shift range display

Displays the selected shift position or selected shift range $(\rightarrow P. 208, 215)$


- Dynamic radar cruise control display (if equipped)
 - Displays the approach warning message (→P. 602)
- Pre-crash safety system display (if equipped)

Displays the collision warning and the brake warning $(\rightarrow P. 599)$

Turn-by-turn navigation display*

> Displays a notification of upcoming intersections during navigation system route guidance

- 6 Vehicle speed display
- *: Refer to the "Navigation System Owner's Manual".

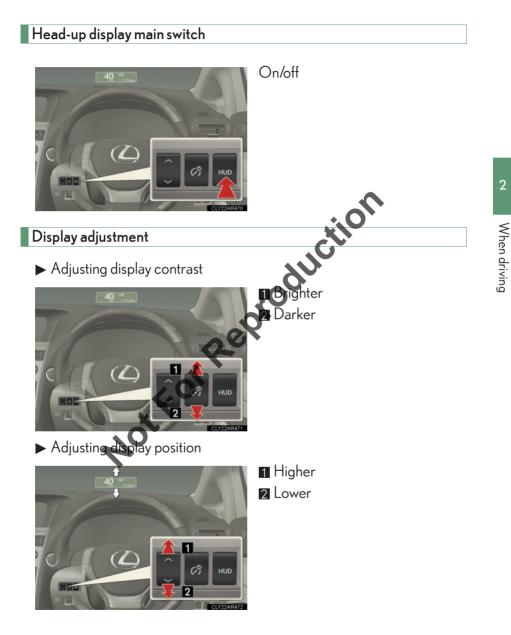

Display customization

The audio mode display and/or the shift position and shift range display can be shown or hidden.



Press and hold the head-up display main switch changes the display to the display on/off mode. Press the head-up display main switch to select the desired setting item. Press and hold the head-up display main switch to turn the display on/ off.

Customization can be performed when the head-up display is on and the vehicle is traveling at less than 8 km/h (5 mph).

Brightness of the head-up display

The headlight control sensor detects the brightness of the area surrounding the head-up display and adjusts the brightness accordingly. (\rightarrow P. 256)

Head-up display

The head-up display may seem dark and hard to see when viewed through sunglasses, especially polarized sunglasses.

Adjust the brightness of the head-up display or remove your sunglasses.

CAUTION

Before using the head-up display

Check that the position and brightness of the head-up display image does not interfere with safe driving. Incorrect adjustment of the image's position or brightness may obstruct the driver's view and lead to an accident, resulting in death or serious injury.

NOTICE

To prevent damage to components

• Do not place anything on the head-up display opening.



If an object falls into the opening of the head-up display, remove it immediately. Also, avoid spilling water or other liquids near the head-up display opening as this may cause mechanical damage.

2


2-3. Operating the lights and windshield wipers **Headlight switch**

The headlights can be operated manually or automatically.

Turning the end of the lever turns on the lights as follows:



Turning on the high beam headlights

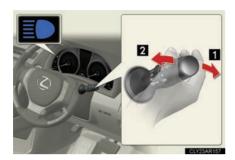

With the headlights on, push the lever away from you to turn on the high beams.

Pull the lever toward you to the center position to turn the high beams off.

Pull the lever toward you to turn on the high beams.

Release the lever to turn them off. You can flash the high beams with the headlights on or off.

AFS (Adaptive Front-lighting System) (inequipped)

AFS (Adaptive Front-lighting System) improves visibility at intersections and on curves by automatically adjusting the direction of the light axis of the headlights according to vehicle speed and the degree of the tire angle that are controlled by steering input.

AFS operates at speeds of 10 km/h (6 mph) or higher.

Deactivating AFS



Press the menu switch.

The multi-information display will change modes to electronic features control mode.

Press the "∧" or "∨" switch until "AFS" appears. When driving



Press the "ENTER" switch to change to "OFF".

The "AFS OFF" indicator will be displayed.

Each pressing of the switch turns AFS on and off.

Press the menu switch to change to the normal display.

Daytime running light system

To make your vehicle more visible to other drivers, the drytme running lights turn on automatically whenever the engine (RX270/RX350) or hybrid system (RX450h) is started. Daytime running lights are not designed for use at night.

Headlight control sensor



The censor may not function properly if an object is placed on the sensor, or anything that blocks the sensor is affixed to the wind-shield.

Doing so interferes with the sensor detecting the level of ambient light and may cause the automatic headlight system to malfunction.

Automatic light off system (RX270/RX350)

The headlights and tail lights turn off automatically if the "ENGINE START STOP" switch is turned to ACCESSORY mode or turned off and the driver's door is opened.

To turn the lights on again, turn the "ENGINE START STOP" switch to IGNITION ON mode, or turn the light switch off once and then back to **set of** or **ED**.

Automatic light off system (RX450h)

The headlights and tail lights turn off automatically if the "POWER" switch is turned to ACCESSORY mode or turned off and the driver's door is opened.

To turn the lights on again, turn the "POWER" switch to ON mode, or turn the light switch off once and then back to or ED.

Automatic headlight leveling system

The level of the headlights is automatically adjusted according to the number of passengers and the loading condition of the vehicle to ensure that the headlights do not interfere with other road users.

If the "AFS OFF" indicator flashes (if equipped

It may indicate a malfunction in the system. Contact your Lexus dealer.

Illuminated entry system

If the wireless remote control witch is used to unlock the vehicle when the light

switch is in AUTO and the surrounding area is dark, the front position light turns on.

Customization

Settings (e.g. light sensor sensitivity) can be changed. (Customizable teatures \rightarrow P. 695)

🕂 NOTICE

To prevent 12-volt battery discharge

Do not leave the lights on longer than necessary when the engine (RX270/ RX350) or hybrid system (RX450h) is off.

2-3. Operating the lights and windshield wipers Fog light switch

The fog lights improve visibility in difficult driving conditions, such as in rain and fog.




Rear fog lights: The front fog lights are turned on.

2-3. Operating the lights and windshield wipers Windshield wipers and washer

When **AUTO** is selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing according to rain volume and vehicle speed.

When **AUTO** is selected, the sensor sensitivity can be adjusted as follows by turning the switch ring:

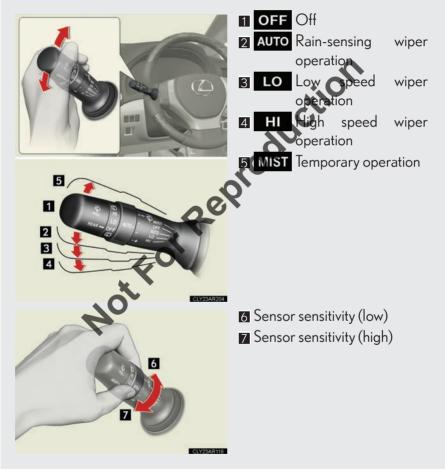



8 Washer/wiper dual operation

The wipers operate automatically. (After operating several times, the wipers operate one more time after a short delay to prevent dripping.)

If the headlights are on, the headlight cleaners will operate once.

The windshield wipers and washer can be operated when

▶ RX270/RX350

The "ENGINE START STOP" switch is in IGNDON ON mode.

▶ RX450h

The "POWER" switch is in ON mode.

Effects of vehicle speed on wiper operation

Vehicle speed affects the following even when the wipers are not in AUTO mode:

Intermittent wiper interval

• Wiper operation when the washer is being used (delay until drip prevention wiper sweep occurs)

When low speed wiper operation is selected, wiper operation will be switched from low speed to intermittent wiper operation only when the vehicle is stationary. (However, when the sensor sensitivity is adjusted to the highest level, the mode cannot be switched.)

Raindrop sensor



The raindrop sensor judges the amount of raindrops.

An optical sensor is adopted. It may not operate properly when sunlight from the rising or setting of the sun intermittently strikes the windshield, or if bugs etc. are present on the windshield.

- RX270/RX350: If the wiper switch is turned to the **AUTO** position while the "ENGINE START STOP" switch is in IGNITION ON mode, the wipers will operate once to show that AUTO mode is activated.
- •RX450h: If the wiper switch is turned to the AUTO position while the "POWER" switch is in ON mode, the wipers will operate once to show that AUTO mode is activated.
- When the sensor sensitivity ring is turned toward high while in AUTO mode, the wipers will operate once to indicate that the sensor sensitivity is enhanced.
- If the temperature of the raindrop sensor is 90°C (194°F) or higher, or -15°C (5°F) or lower, automatic operation may not occur. In this case, operate the wipers in any mode other than AUIO

If no windshield washer fluid sprays

Check that the washer nozzles are not blocked if there is washer fluid in the windshield washer fluid reservoir.

Caution regarding the use of windshield wipers in AUTO mode

The windshield wipers may operate unexpectedly if the sensor is touched or the windshield is subject to vibration in AUTO mode. Take care that your fingers or anything else do not become caught in the windshield wipers.

Caution regarding the use of washer fluid

When it is cold, do not use the washer fluid until the windshield becomes warm. The fluid may freeze on the windshield and cause low visibility. This may lead to an accident, resulting in death or serious injury.

MOTICE

When the windshield is dry

Do not use the wipers, as they may damage the windshield.

When the washer fluid tank is empty

Damage to the washer fluid pump may be caused if the lever is pulled toward you and held continually.

When a nozzle becomes blocked

In this case, contact your Lexus dealer. Do not try to clear it with a pin or other object. The nozzle will be camaged.

2-3. Operating the lights and windshield wipers Rear window wiper and washer

1 OFF Off 2 LO Intermittent window wiper operation Normal window wiper (T)3 нι operation 100 Washer/wiper dual 4 washer wash Washer Wiper dual 4 3 1-5 The rear window wiper and washer can be operated when ▶ RX270/RX350 RT STOP" switch is in IGNITION ON mode. The "ENGINE

The wiper operation is selected by moving the lever as follows:

▶ RX450h

The "POWER" switch is in ON mode.

NOTICE

When the rear window is dry

Do not use the wipers, as they may damage the rear window.

When the washer fluid tank is empty

Damage to the washer fluid pump may be caused if the lever is operated continually.

When a nozzle becomes blocked

In this case, contact your Lexus dealer.

In this case, contact your Lexus dealer. Do not try to clear it with a pin or other object. The nozzle will be camaged.

2-3. Operating the lights and windshield wipers Headlight cleaner switch

Washer fluid can be sprayed on the headlights.



Press the switch to clean the headlights.

The headlight cleaner can be operated when

▶ RX270/RX350

duction The "ENGINE START STOP" switch is in IGNITION ON mode and the headlight switch is turned on.

▶ RX450h

The "POWER" switch is in ON mode and the headlight switch is turned on.

Windshield washer linked operation

► RX270/RX350

When the windshield washer is operated with the "ENGINE START STOP" switch in IGNITION Commode and the headlights on, the headlight cleaner will operate once. $(\rightarrow P. 25)$

▶ RX450h

When the windshield washer is operated with the "POWER" switch in ON mode and the headlights on, the headlight cleaner will operate once. (\rightarrow P. 259)

NOTICE

When the washer fluid tank is empty

Do not press the switch continually as the washer fluid pump may overheat.

2-4. Using other driving systems **Cruise control***

Use cruise control to maintain a set speed without depressing the accelerator pedal.



Setting the vehicle speed



1 Indicator


- 2 Display
- 3 Cruise control switch



Press the "ON-OFF" button to activate the cruise control.

Cruise control indicator will come on.

Press the button again to deactivate the cruise control.

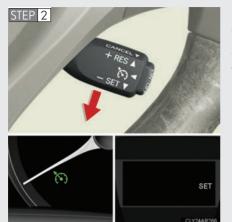

Adjusting the set speed


Accelerate or decelerate the vehicle to the desired speed. and push the lever down to set the speed.

"SET" will be displayed.

The vehicle speed at the moment the lever is released becomes the set speed.



To change the set speed, operate the ver until the desired set speed is obtained.

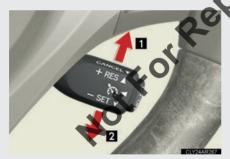

1 Increases the speed

Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.

Large adjustment: Hold the lever in the desired direction.


The set speed will be increased or decreased as follows:

Fine adjustment: By approximately 1.6 km/h (1 mph) each time the lever is operated.

Large adjustment: The set speed can be increased or decreased continually until the lever is released.

When driving

Canceling and resuming the constant speed control

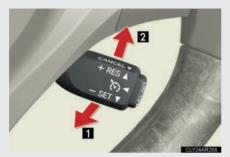

Pulling the lever towards you cancels the constant speed control.

The speed setting is also canceled when the brakes are applied.

Pushing the lever up resumes the constant speed control.

Resuming is available when the vehicle speed is more than approximately 40 km/h (25 mph)

Cruise control can be set when

- The shift lever is in the D or range 4 or higher of S has been selected.
- Range 4 or higher has been selected by using the paddle shift. (vehicles with paddle shift switch)
- Vehicle speed is above approximately 40 km/h (25 mph).

Accelerating after setting the vehicle speed

- The vehicle can be accelerated normally. After acceleration, the set speed resumes.
- Even without canceling the cruise control, the set speed can be increased by first accelerating the vehicle to the desired speed and then pushing the lever down to set the new speed.

Automatic cruise control cancelation

Cruise control will stop maintaining the vehicle speed in any of the following situations:

• Actual vehicle speed falls more than approximately 16 km/h (10 mph) below the preset vehicle speed.


At this time, the memorized set speed is not retained.

- Actual vehicle speed is below approximately 40 km/h (25 mph).
- VSC is activated.

If a warning message is shown on the multi-information display

Press the "ON-OF" button once to deactivate the system, and then press the button again to reactivate the system.

If the cruise control speed cannot be set or if the cruise control cancels immediately after being activated, there may be a malfunction in the cruise control system. Have the vehicle inspected by your Lexus dealer.

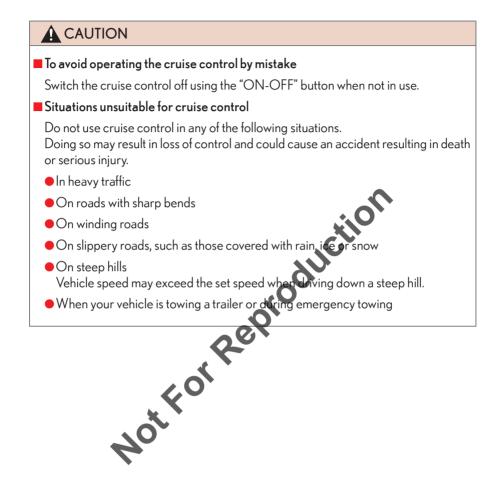

Dynamic radar cruise control supplements conventional cruise control with a vehicle-to-vehicle distance control. In vehicle-to-vehicle distance control mode, the vehicle automatically accelerates or decelerates in order to maintain a set following distance from vehicles ahead.



- Indicator (vehicle-to-vehicle distance control mode)
- Indicator (constant speed control mode)
- 3 Display
- Vehicle-to-vehicle distance button
- 5 Cruise control switch

Setting the vehicle speed (vehicle-to-vehicle distance control mode)




Press the "ON-OFF" button to activate the cruise control.

Radar cruise control indicator will come on.

Press the button again to deactivate the cruise control.

*: If equipped

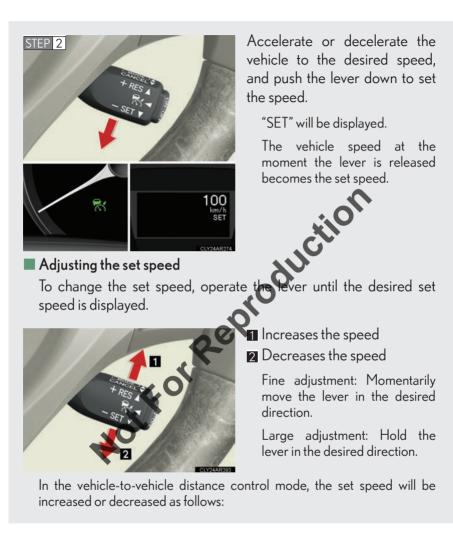

Fine adjustment: By approximately 1 km/h (0.6 mph) each time the lever is operated

Large adjustment: By approximately 5 km/h (3.1 mph) for each 0.75 seconds the lever is held

In the constant speed control mode (\rightarrow P. 272), the set speed will be increased or decreased as follows:

Fine adjustment: By approximately 1.6 km/h (1 mph) each time the lever is operated

Large adjustment: The set speed can be increased or decreased continually until the lever is released.

Not For Reproduction

Changing the vehicle-to-vehicle distance



Pressing the button changes the vehicle-to-vehicle distance as follows:

1 Long

2 Medium

- 3 Short
- ► RX270/RX350

The vehicle-to-vehicle distance is set automatically to long mode when the "ENGINE STARDSTOP" switch is turned to CNITION ON mode.

RX450h

The vehicle-to-vehicle distance is set automatically to long mode when the "POWER" switch is turned to ON mode.


If a vehicle is running ahead of you, the preceding vehicle mark will be also displayed.

Vehicle-to-vehicle distance settings

Select a distance from the table below. Note that the distances shown correspond to a vehicle speed of 80 km/h (50 mph). Vehicle-to-vehicle distance increases/decreases in accordance with vehicle speed.

Distance options	Vehicle-to-vehicle distance
Long	Approximately 50 m (164 ft.)
Medium	Approximately 40 m (132 ft.)
Short	Approximately 25 m (82 ft.)

Canceling and resuming the speed control

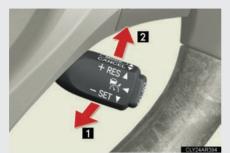

Pulling the lever toward you cancels the cruise control.


The speed setting is also canceled when the brakes are applied.

2 Pushing the lever up resumes suming is available when the vehicle speed is more than anonximately 40 km/h (25 mph). the cruise control and returns

Driving in vehicle-to-vehicle distance control mode

This mode employs a radar sensor to detect the presence of vehicles up to approximately 120 m (400 ft.) ahead, determines the current vehicle-to-vehicle following distance, and operates to maintain a suitable following distance from the vehicle ahead.

Note that vehicle-to-vehicle distance will close in when traveling on long downhill slopes.

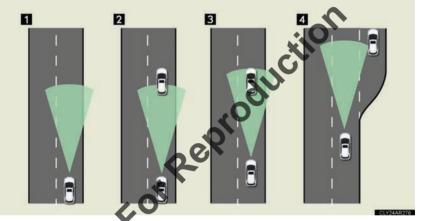

Example of constant speed cruising When there are no vehicles ahead

The vehicle travels at the speed set by the driver. The desired vehicle-to-vehicle distance can also be set by operating the vehicle-to-vehicle distance control.

2 Example of deceleration cruising

When the vehicle ahead is driving slower than the set speed

When a vehicle is detected running ahead of you, the system automatically decelerates your vehicle. When a greater reduction in vehicle speed is necessary, the system applies the brakes. A warning tone warns you when the system cannot decelerate sufficiently to prevent your vehicle from closing in on the vehicle ahead.

Example of follow-up cruising

When following a vehicle driving slower than the set speed The system continues follow-up cruising while adjusting for changes in the speed of the vehicle ahead in order to maintain the vehicle-to-vehicle distance set by the driver.

4 Example of acceleration

When there are no longer any vehicles ahead driving slower than the set speed

The system accelerates until the set speed is reached. The system then returns to constant speed cruising.

Approach warning

When your vehicle is too close to a vehicle ahead, and sufficient automatic deceleration via the cruise control control solution possible, the display will flash and a buzzer will sound to alert the driver. An example of this would be if another driver cuts in front of you while you are following a vehicle. Apply the brakes to ensure an appropriate vehicle-to-vehicle distance.

Warnings may not occur when

In the following instances, there is a possibility that the warnings will not occur:

• When the speed of the vehicle ahead matches or exceeds your vehicle speed

• When the vehicle ahead is traveling at an extremely slow speed

- Immediately after the cruise control speed was set
- At the instant the accelerator is applied

Selecting conventional constant speed control mode

Constant speed control mode differs from vehicle-to-vehicle distance control mode. When constant speed control mode is selected, your vehicle will maintain a set speed regardless of whether or not there are other vehicles in the lane ahead.



Press the "ON-OFF" button to activate the cruise control.

Press the button again to deactivate the cruise control.

Switch to constant speed control mode.

(Pash the lever forward and hold for approximately one second.)

Constant speed control mode indicator will come on.

When in constant speed control mode, to return to vehicle-to-vehicle distance control mode, push the lever forward again and hold for approximately 1 second.

After the desired speed has been set, it is not possible to return to vehicle-to-vehicle distance control mode.

RX270/RX350: If the "ENGINE START STOP" switch is turned off and then turned to IGNITION ON mode again, the vehicle will automatically return to vehicle-to-vehicle distance control mode.

RX450h: If the "POWER" switch is turned off and then turned to ON mode again, the vehicle will automatically return to vehicle-tovehicle distance control mode.

Adjusting the speed setting: \rightarrow P. 272

Canceling and resuming the speed setting: \rightarrow P. 274

Dynamic radar cruise control can be set when

- The shift lever is in the D or range 4 or higher of S has been selected.
- Range 4 or higher has been selected by using the paddle shift. (vehicles with paddle shift switch)
- Vehicle speed is above approximately 50 km/h (30 mph).

Accelerating after setting the vehicle speed

The vehicle can accelerate normally. After acceleration, the set speed resumes.

However, during vehicle-to-vehicle distance control mode, the vehicle speed may decrease below the set speed in order to maintain the distance to the vehicle ahead.

Automatic cancelation of vehicle-to-vehicle distance control

Vehicle-to-vehicle distance control driving is automatically canceled in the following situations:

- Actual vehicle speed falls below approximately 40 km/h (25 mph).
- VSC is activated.
- The sensor cannot operate correctly because it is covered in some way.
- The windshield wipers are operating at high speed. (when the wiper switch is set to the AUTO mode or the high speed wiper operation position).
- When snow mode is set

If vehicle-to-vehicle distance control driving is automatically canceled for any other reason, there may be a malfunction in the system. Contact your Lexus dealer.

Automatic cancelation of constant speed control

The cruise control will stop maintaining the vehicle speed in the following situations:

• Actual vehicle speed is more than approximately 16 km/h (10 mph) below the set vehicle speed.

At this time, the memorized set speed is not retained.

- Actual vehicle speed falls below approximately 40 km/h (25 mph).
- VSC is activated.

Radar sensor and grille cover

Always keep the sensor and grille cover clean to ensure that the vehicle-to-vehicle distance control operates properly. (Some obstructions, such as snow, ice and plastic objects, cannot be detected by the obstruction sensor.)

Dynamic radar cruise control is canceled if an obstruction is detected.



1 Grille cover

2 Radar sensor



Warning lights, messages and buzzers are used to indicate a system malfunction or to inform the driver of the need for caution while driving. (\rightarrow P. 608)

CAUTION

Before using dynamic radar cruise control

Do not overly rely on vehicle-to-vehicle distance control. Be aware of the set speed. If automatic deceleration/acceleration is not appropriate, adjust the vehicle speed, as well as the distance between your vehicle and vehicles ahead by applying the brakes etc.

Cautions regarding the driving assist systems

Observe the following precautions.

Failure to do so may cause an accident resulting in death or serious injury.

• Assisting the driver to measure following distance

The dynamic radar cruise control is only intended to help the driver in determining the following distance between the driver's own vehicle and a designated vehicle traveling ahead. It is not a mechanism that allows careless or inattentive driving, and it is not a system that can assist the driver in low-visibility conditions. It is still necessary for driver to pay close attention to the vehicle surroundings.

Assisting the driver to judge proper following distance


The dynamic radar cruise control determines whether the following distance between the driver's own vehicle and a designated vehicle traveling ahead is appropriate or not. It is not capable of making any other type of judgement. Therefore, it is absolutely necessary for the driver to remain vigilant and to determine whether or not there is a possibility of danger in any given situation.

Assisting the driver to operate the vehicle

The dynamic radar cruise control has no capability to prevent or avoid a collision with a vehicle traveling ahead. Therefore, if there is ever any danger, the driver must take immediate and direct control of the vehicle and act appropriately in order to ensure the safety of all involved.

To avoid inadvertent dynamic radar cruise control activation

Switch the cruise on rol off using the "ON-OFF" button when not in use.

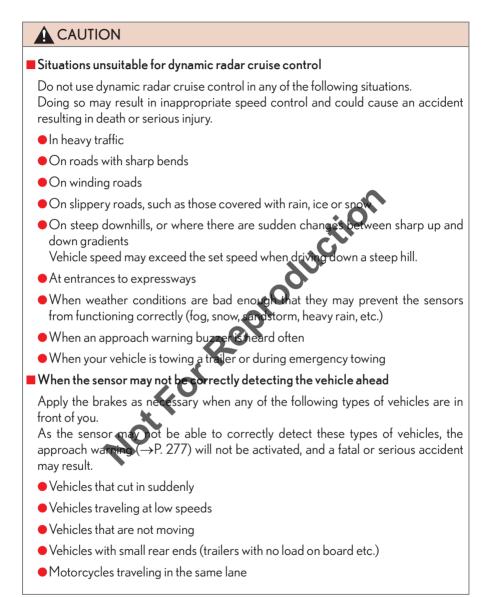

Conditions under which the vehicle-to-vehicle distance control may not function correctly

Apply the brakes as necessary in the following conditions as the radar sensor may not be able to correctly detect vehicles ahead, and a fatal or serious accident may result:

- When water or snow thrown up by the surrounding vehicles hinders the functioning of the radar sensor
- When your vehicle is pointing upwards (caused by a heavy load in the luggage compartment etc.)
- When the road curves or when the lanes are narrow
- When steering wheel operation or your position in the lane is unstable
- When the vehicle ahead of you decelerates sudden
- Handling the radar sensor

Observe the following to ensure the cruite control system can function effectively.

Otherwise, the system may not function correctly and could result in an accident.

- Keep the sensor and grille clean at all times. Clean the sensor and grille cover with a soft cloth so you do not mark or damage them.
- Do not subject the sensor or surrounding area to a strong impact. If the sensor moves even slightly off position, the system may malfunction. If the sensor or surrounding area is subject to a strong impact, always have the area inspected and adjusted by your Lexus dealer.
- Do not disassemble the sensor.
- Do not attach accessories or stickers to the sensor, grille cover or surrounding area.
- Do not modify or paint the sensor and grille cover.
- Do not replace them with non-genuine parts.

2-4. Using other driving systems Lexus parking assist-sensor^{*}

The distance to obstacles measured by the sensors is communicated via the multi-information display and a buzzer when parallel parking or maneuvering into a garage is conducted. Always check the surrounding area when using this system.

Types of sensors



Setting the Lexus parking assist-sensor mode



- Press the menu switch.
 - The multi-information display will change modes to electronic features control mode.
- Press the "^" or "\" switch until the Lexus parking assistsensor mark appears in the multi-information display.



Press the "ENTER" switch to change to "ON".

The Lexus parking assist-sensor indicator will be displayed.


Each pressing of the switch turns the Lexus parking assistsensor on and off.

When on, the buzzer sounds to inform the driver that the system is operational.

Press the menu switch to change to the normal display.

Display

DYO When the sensors detect an objecte, a graphic is shown on the multiinformation display depending on the position and distance to the obstacle.

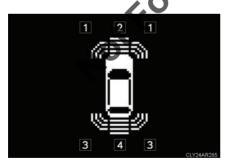


- Front corner sensor operation
- 2 Front center sensor operation
- **3** Rear corner sensor operation
- 4 Rear center sensor operation

The distance display and buzzer

When a sensor detects an obstacle, the direction of and the approximate distance to the obstacle are displayed and the buzzer sounds.

The site of the obstacle will flash (detection level 4 only).

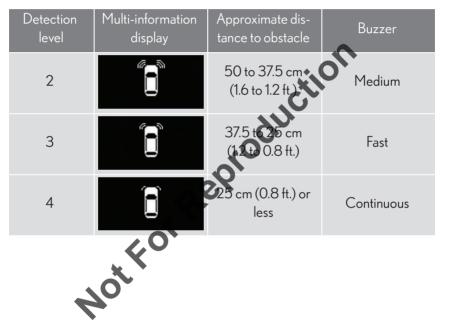

Front corner sensors

Front center sensors


Detection level	Multi-information display	Approximate dis- tance to obstacle	Buzzer	
1		100 to 50 cm (3.3 to 1.6 ft.)	Slow	
2		50 to 40 cm (1.6 to 1.3 ft.)	Medium	
3		40 to 30 cm (1.3 to 1.0 ft)	Fast	
4		30 cm (1.0 ft.) or less	Continuous	
Rear corner sensors				
Detection level	Multi-information	Approximate dis- tance to obstacle	Buzzer	
2		50 to 37.5 cm (1.6 to 1.2 ft.)	Medium	
3	, E	37.5 to 25 cm (1.2 to 0.8 ft.)	Fast	
4		25 cm (0.8 ft.) or less	Continuous	

Rear center sensors

Detection level	Multi-information display	Approximate dis- tance to obstacle	Buzzer
1		150 to 60 cm (4.9 to 2.0 ft.)	Slow
2		60 to 45 cm (2.0 to 1.5 ft.)	Medium
3		45 to 35 cm (1.5 to 1.2.f)	Fast
4		35 cm (1.2 ft.) or less	Continuous
	R	<u> </u>	
	otfor		
7			

289

Detection range of the sensors

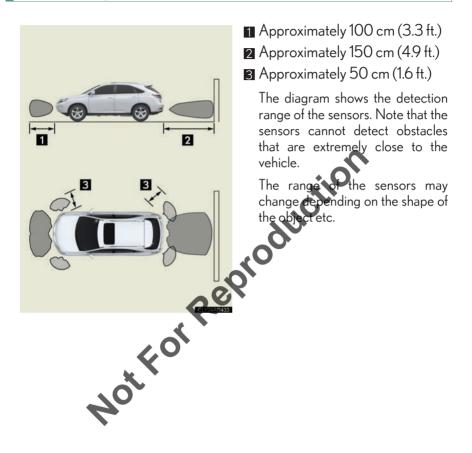

The Lexus parking assist-sensor can be operated when

- Front corner sensors:
 - RX270/RX350: The "ENGINE START STOP" switch is in IGNITION ON mode.
 - RX450h: The "POWER" switch is in ON mode.
 - The shift lever is in a position other than P.
 - The vehicle speed is less than about 10 km/h (6 mph).
- Front center sensors:
 - RX270/RX350: The "ENGINE START STOP" switch is in GNITION ON mode.
 - RX450h: The "POWER" switch is in ON mode.
 - The shift lever is in a position other than P or R.
 - The vehicle speed is less than about 10 km/h (6 mph).
- Rear corner and center sensors:
 - RX270/RX350: The "ENGINE STARE STOP" switch is in IGNITION ON mode.
 - RX450h: The "POWER" switch ON mode.
 - The shift lever is in R.

Sensor detection information

- Certain vehicle conditions and the surrounding environment may affect the ability of a sensor to correctly detect an obstacle. Particular instances where this may occur are listed below.
 - There is dirt, snow or ice on a sensor.
 - A sensor is frozen
 - A sensor is covered in any way.
 - The vehicle is leaning considerably to one side.
 - On an extremely bumpy road, on an incline, on gravel, or on grass
 - The vicinity of the vehicle is noisy due to vehicle horns, motorcycle engines, air brakes of large vehicles, or other loud noises producing utrasonic waves.
 - There is another vehicle equipped with parking assist sensors in the vicinity.
 - A sensor is coated with a sheet of spray or heavy rain.
 - The vehicle is equipped with a fender pole or radio antenna.
 - Towing eyelets are installed.
 - A bumper or sensor receives a strong impa
 - The vehicle is approaching a tall or right-angled curb.
 - In harsh sunlight or intense cold weather.

• A non-genuine Lexus suspension (rowered suspension, etc.) is installed. In addition to the examples above there are instances in which, because of their shapes, signs and other objects may be judged by a sensor to be closer than they are.

• The shape of the obstacle may prevent a sensor from detecting it. Pay particular attention to the following obstacles:

- Wires, fences, ropes, etc.
- Cotton, snow and other materials that absorb sound waves
- Sharply-angled objects
- Low obstacles
- Tall obstacles with upper sections projecting outwards in the direction of your vehicle

If a warning message is displayed

 $\rightarrow P.602$

Customization

Settings (e.g. buzzer volume) can be changed. (Customizable features \rightarrow P. 695)

Caution when using the Lexus parking assist-sensor

Observe the following precautions.

Failing to do so may result in the vehicle being unable to be driven safely and possibly cause an accident.

- Do not use the sensor at speeds in excess of 10 km/h (6 mph).
- Do not attach any accessories within the sensor range.

🔥 NOTICE

Notes when washing the vehicle

Do not apply intensive bursts of water or steam to the sensor area. Doing so may result in the sensor malfunctioning

Conditions possibly indicating system malfunctions

If any of the following occurs, the system may be malfunctioning due to a sensor failure etc. Have the vehicle inspected by your Lexus dealer.

- The buzzer does not sound when the Lexus parking assist-sensor mode is set.
- The sensor operation display lashes and the buzzer sounds even when no obstacle is detected.
- An area of the sensors is hit or subjected to a strong impact.
- Either bumper is hit
- The sensor operation display remains on even though no buzzer sounds.

When driving

2-4. Using other driving systems Rear view monitor system (rear view mirror-attached type)*

The rear view monitor system assists the driver by displaying an image of the view behind the vehicle while reversing. The image is displayed in reverse on the screen. This allows the image to appear in the same manner as that of the rear view mirror.



The rear view monitor system can be operated when

▶ RX270/RX350

The shift lever is in R, the "ENGINE START STOP" switch is in IGNITION ON mode.

▶ RX450h

The shift lever is in R, the "POWER" switch is in ON mode.

Changing display modes

The rear view monitor display mode can be changed while the screen is on.

• To temporarily disable the rear view monitor system

Notfor

Press the "AUTO" button. The indicator will turn amber.

► RX270/RX350

The system will be re-enabled once the "ENGINE START STOP" switch is turned off and then turned to IGNITION ON mode.

▶ RX450h

The system will be re-enabled once the "POWER" switch is turned off and then turned to ON mode.

When driving

• To constantly disable the rear view monitor system



Press and hold the "AUTO" button for 12 to 15 seconds.

The screen will turn off and on after 6 seconds. Keep pressing the button until the screen turns back off. The indicator will flash amber.

▶ RX270/RX350


The system will not automatically turn on again after the "ENGINE START STOP" switch is off and then turned to IGNITION ON mode.

▶ RX450h

The system will not automatically turn on again after the "POWER" switch is off and then turned to ON mode.

• To re-enable the rear view monitor system Press the "AUTO" button. The indicator will turn green.

Rear view monitor guide lines

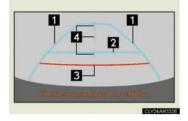

NotForR

Guide lines are displayed on the screen.

Guidelines shown differ from those shown on the actual screen.

Vehicle width extension guide lines (blue)

These lines indicate the estimated vehicle width extension.

2 Distance guide line (blue)

This line indicates a position on the ground about (Lin (3 ft.) behind on the ground of the rear bumper of your vehicle.


3 Distance guide line (red)


This one indicates a position on the ground about 0.5 m (1.5ft.) behind on the ground of the rear bumper of your vehicle.

4 Vehicle center guide lines (blue)

These lines indicate the estimated vehicle center on the ground.

Displayed area

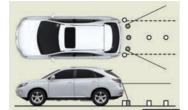

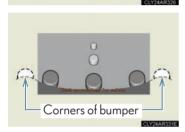

Driving precautions


The area detected by the camera is limited. Object which are close to either corner of the bumper or under the bumper cannot be seen on the screen.

The area displayed on the screen may vary according to vehicle orientation or road conditions.

The camera uses a special lens.

The distance of the image that appears on the screen differs from the actual distance.

when the grade behind the vehicle slopes up sharply, objects appear to be farther away than they actually are.

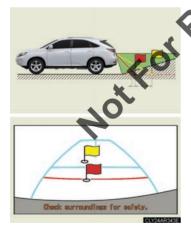

When the grade behind the vehicle slopes down sharply, objects appear to be closer than they actually are.



Check surroundings for safety.

С

AB

The distance that appears on the screen between three-dimensional objects (such as vehicles) and flat surfaces (such as the road) and the actual distance differ as follows

a reality, C = A < B (C and A are equally far away; B is farther than C and A). However, on the screen, the situation appears to be A < B < C.

On the screen, it appears that a truck is parking about 0.5 m (1.5 ft.) away. However, in reality if you back up to point A, you will hit the track.

Rear view monitor system camera



The rear view monitor system camera is located on the back door as shown in the illustration.

In the following cases, it may become difficult to see the images on the screen, even when the system is functioning correctly.

• The vehicle is in a dark area, such as at night.

• The temperature near the lens is extremely high or low.


• Water droplets are on the camera lens or humidity shigh, such as when it rains.

• Foreign matter, such as snow or mud, achieves to the camera lens.

The sun or headlights are shining directly into the camera lens.

 A bright object such as a white wall is reflected in the mirror surface over the monitor.

• The camera has scratches or dirt on it.

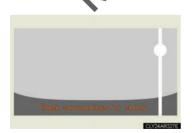

Smear effect

otfor

If a bright light, such as sunlight reflected off the vehicle body, is picked up by the camera, a smear effect^{*} characteristic to the camera may occur.

*: Smear effect — A phenomenon that occurs when a bright light is picked up by the camera; when transmitted by the camera, the light source appears to have a vertical streak above and below it.

Flicker effect

When the camera is used under fluorescent light, sodium lights, or mercury lights etc., the lights and the illuminated areas may appear to flicker.

- When using the rear view monitor system, observe the following precautions to avoid an accident that could result in death or serious injuries:
 - Never depend solely on the monitor system when reversing.
 - Always check visually and with the mirrors to confirm your intended path is clear.
 - Use your own eyes to confirm the vehicle's surroundings as the displayed image may become faint or dark, and moving images will be distorted, or not entirely visible when the outside temperature is low. When backing up, be sure to check behind and all around the vehicle visually and with the mirrors before proceeding.
 - Always check the vehicle surrounding area because the guide lines are ancillary lines.
 - The guide lines are ancillary lines and do not change even if the steering wheel is turned.
 - Depicted distances between objects and flat surfaces differ from actual distances.
 - Do not use the system if the back door open.

🕂 NOTICE

Conditions which may affect the rear view monitor system

- If the back of the vehicle has been hit, the camera's position and mounting angle may have changed. Have the vehicle inspected by your Lexus dealer.
- Rapid temperature changes, such as when hot water is poured on the vehicle in cold weather, may cause the system to function abnormally.
- If the camera lens is dirty, it cannot transmit a clear image. Rinse with water and wipe with a soft cloth. If extremely dirty, wash with a mild cleanser and rinse.
- The displayed image may be darker and moving images may be slightly distorted when the system is cold.

Camera precautions

- As the camera has a water proof construction, do not detach, disassemble or modify it. This may cause incorrect operation.
- Do not subject the camera to a strong impact.
- If the camera lens becomes dirty, it cannot transmit a clear image. If water droplets, snow, or mud adhere to the leng rinse with water and wipe with a soft cloth. If the lens is extremely dirty, wash the with a mild cleanser and rinse. Do not rub hard.
- Do not allow organic solvent car wax, window cleaner or glass coat to adhere to the camera. If this happens, vipe it off as soon as possible.
- Do not strongly rub the camera lens. If the camera lens is scratched, it cannot transmit a clear image.
- When washing the vehicle, do not apply intensive bursts of water to the camera or camera area. Doing so may result in the camera malfunctioning.
- When replacing tires, please consult your Lexus dealer. If you replace the tires, the area displayed on the screen may change.

To help enhance driving safety and performance, the following systems operate automatically in response to various driving situations. Be aware, however, that these systems are supplementary and should not be relied upon too heavily when operating the vehicle.

ABS (Anti-lock Brake System)

Helps to prevent wheel lock when the brakes are applied suddenly, or if the brakes are applied while driving on a slippery road surface

Brake assist

Generates an increased level of braking force after the brake pedal is depressed, when the system detects a panic stop situation

VSC (Vehicle Stability Control)

Helps the driver to control skidding when swerving suddenly or turning on slippery road surfaces

TRC (Traction Control)

Helps to maintain drive power and prevent the drive wheels from spinning when starting the vehicle or accelerating on slippery roads

Hill-start assist control

→P. 310

EPS (Electric Power Steering)

Employs an electric motor to reduce the amount of effort needed to turn the steering wheel

Active Torque Control 4WD system (RX350)

Automatically switches from front-wheel drive to AWD (All-Wheel Drive) according to driving conditions, helping to ensure reliable handling and stability. Examples of conditions where the system will switch to AWD are when cornering, going uphill, starting off or accelerating, and when the road surface is slippery due to snow or rain etc.

■ VSC (Vehicle Stability Control) (vehicles without VDIM)

Provides cooperative control of the ABS, TRC, VSC and EPS. Helps to maintain directional stability when swerving on slippery road surfaces by controlling steering performance.

VDIM (Vehicle Dynamics Integrated Management) (if equipped) RX270/RX350

Provides integrated control of the ABS, brake assist, TRC, VSC, hill-start assist control and EPS systems.

Helps to maintain vehicle stability when swerving on slippery road surfaces by controlling the brakes and engine output.

▶ RX450h

Provides integrated control of the ABS, brake assist, TRC, VSC, hill-start assist control and EPS systems.

Helps to maintain vehicle stability when sverving on slippery road surfaces by controlling the brakes and hybrid system output.

PCS (Pre-Crash Safety system) (Dequipped)

→P. 312

Emergency brake signal (if equipped)

In order to reduce the risk of a rear-end collision, when the brakes are applied suddenly the stop lights will automatically flash to alert the vehicle behind.

When the VSC/TRC systems are operating



If the vehicle is in danger of slipping or if any of the drive wheels spins, the slip indicator light flashes to indicate that the VSC/TRC systems are operating.

Disabling the TRC/VSC systems

If the vehicle gets stuck in fresh snow or mud, the TRC/VSC systems may reduce power from the engine (RX270/RX350) or hybrid system (RX450h) to the wheels. You may need to turn the system off to enable you to rock the vehicle in order to free it.

Turning off the TRC system only



To turn the TRC system off, quickly press and release the switch.

A message will be shown on the multi-information display.

Press the switch again to turn the system back on.

Turning off both TRC and VSC systems



To turn the TRC and VSC systems off, press and hold the switch for 3 seconds or more while the vehicle is stopped.

A message will be shown on the multi- information display and VSC off indicator light will come on.

Press the switch again to turn the systems back on.

When the message is displayed on the multi-information display showing that TRC has been disabled even if the VSC off switch has not been pressed

TRC and hill-start assist control cannot be operated. Contact your Lexus dealer.

Sounds and vibrations caused by the ABS, VSC, TRC and brake assist

- A sound may be heard from the engine compartment when the engine (RX270/RX350) or hybrid system (RX450h) is started or just after the vehicle begins to move. This sound does not indicate that a malfunction has occurred in any of these systems.
- Any of the following conditions may occur when the above systems are operating. None of these indicates that a malfunction has occurred.
 - Vibrations may be felt through the vehicle body and steering.
 - A motor sound may be heard after the vehicle contesto a stop.
 - The brake pedal may pulsate slightly after the ABS is activated.
 - The brake pedal may move down slightly after the ABS is activated.

EPS operation sound

When the steering wheel is operated a motor sound (whirring sound) may be heard. This does not indicate a matunation.

Reactivation of the TRC/VSC systems

Turning off the engine (RX270/RX350) or hybrid system (RX450h) after turning off the TRC/VSC systems will automatically reactivate them.

Reactivation of the IRC system linked to vehicle speed

When only the TRC system is turned off, the TRC system will turn on when vehicle speed increase. However, when both TRC and VSC systems are turned off, the systems will not turn on even when vehicle speed increases.

Reduced effectiveness of the EPS system

The effectiveness of the EPS system is reduced to prevent the system from overheating when there is frequent steering input over an extended period of time. The steering wheel may feel heavy as a result. Should this occur, refrain from excessive steering input or stop the vehicle and turn the engine (RX270/RX350) or hybrid system (RX450h) off. The EPS system should return to normal within 10 minutes.

Operating conditions of emergency brake signal

When the following two conditions are met, the emergency brake signal will operate[.]

- Actual vehicle speed is over 55 km/h (34 mph).
- The brake pedal is depressed in a manner that cause the system to judge from the vehicle deceleration that this is a sudden braking operation.

Automatic system cancelation of emergency brake signal

The emergency brake signal will turn off in any of the following situations:

- The emergency flashers are turned on.
- The brake pedal is released.
- roduc • The system judges from the vehicle deceleration that this is not a sudden braking operation.

A CAUTION

The ABS does not operate effectively where

- Tires with inadequate gripping ability are used (such as excessively worn tires on a snow covered road).
- The vehicle hydroplanes while driving at high speed on a wet or slick road.

Stopping distance when the ABS is operating may exceed that of normal conditions

The ABS is not resigned to shorten the vehicle's stopping distance. Always maintain a safe distance from the vehicle in front of you in the following situations:

- When driving on dirt, gravel or snow-covered roads
- When driving with tire chains
- When driving over bumps in the road
- When driving over roads with potholes or roads with uneven surfaces

TRC may not operate effectively when

Directional control and power may not be achievable while driving on slippery road surfaces, even if the TRC system is operating.

Do not drive the vehicle in conditions where stability and power may be lost.

When the VSC is activated

The slip indicator light flashes. Always drive carefully. Reckless driving may cause an accident, resulting in death or serious injury. Exercise particular care when the indicator light flashes.

■ When the TRC/VSC systems are turned off

Be especially careful and drive at a speed appropriate to the road conditions. As these are the systems to help enhance vehicle stability and driving force, do not turn the TRC/VSC systems off unless necessary.

Replacing tires

Make sure that all tires are of the same size, brand, tread pattern and total load capacity. In addition, make sure that the tires are inflated to the recommended tire inflation pressure level.

The ABS and VSC systems will not function prectly if different tires are installed on the vehicle.

Contact your Lexus dealer for further information when replacing tires or wheels.

Handling of tires and suspension

Using tires with any kind of problem or modifying the suspension will affect the driving assist systems, and may cause a system malfunction.

2-4. Using other driving systems All-wheel drive lock switch (RX350)

All-wheel drive lock mode can be used when a large amount of drive power needs to be applied to all the wheels, such as when the vehicle gets stuck in mud and you need to free it.



Press the switch.

The torque of the engine is distributed to the rear wheels to the maximum extent possible in accordance with driving conditions.

Pressing the switch again cancels all-wheel drive lock mode and returns the active torque control 4WD system to normal mode. (→P. 303)

All-wheel drive lock mode

- All-wheel drive lock mode is canceled when the brakes are applied to ensure the ABS and VSC systems operate effectively.
- All-wheel drive lock mode is canceled when the vehicle speed exceeds 40 km/h (25 mph).

2-4. Using other driving systems Hill-start assist control

Hill-start assist control helps to prevent the vehicle from rolling backwards when starting on an incline or slippery slope.



To engage hill-start assist control, further depress the brake pedal when the vehicle is stopped completely.

A buzzer will sound once to indicate the system is activated. The slip indicator will also start flashing.

Hill-start assist control can be operated when The shift lever is in a position other than R The parking brake is not applied TL

- The accelerator pedal is not depres

Hill-start assist control

- While hill-start assist control is operating, the brakes remain automatically applied after the driver releases the brake pedal. The stop lights and the high mounted stoplight turn on.
- Hill-start assist control operates for about 2 seconds after the brake pedal is released.
- If the slip indicator does not flash and the buzzer does not sound when the brake pedal is further depressed, slightly reduce the pressure on the brake pedal (do not allow the vehicle to roll backward) and then firmly depress it again. If the system still does not operate, check if the operating conditions explained above have been met.

Hill-start assist control buzzer

- When hill-start assist control is activated, the buzzer will sound once.
- In the following situations, hill-start assist control will be canceled and the buzzer will sound twice
 - No attempt is made to drive the vehicle within approximately 2 seconds of releasing the brake pedal.
 - The shift lever is moved to P.
 - The parking brake is applied.
 - The brake pedal is depressed again.
 - The brake pedal has been depressed for more than approximately 3 minutes.
- If a buzzer other than the hill-start assist control buzzer is sounding, the hill-start assist control buzzer may not sound when the system is activated or canceled.

If the slip indicator comes on

It may indicate a malfunction in the system. Contact your Lexus dealer.

A CAUTION

Hill-start assist control

- Repro Do not overly rely on hill-start assist control. Hill-start assist control may not operate effectively on extremely steep inclines or roads covered in ice.
- Unlike the parking brake, hill-start assist control is not intended to hold the vehicle stationary for an extended period of time. Do not attempt to use hill-start assist control to od the vehicle on an incline for an extended period of time, as doing so may lead to an accident.

When the radar sensor detects that a frontal collision is highly likely or even unavoidable, safety systems such as the brakes and seat belts are automatically engaged to lessen impact as well as vehicle damage.

Pre-crash seat belts (front seat belts only)

If the pre-crash sensor detects that a collision is unavoidable, the precrash safety system will retract the seat belt before the collision occurs. The same will happen if the driver makes an emergency braking or loses control of the vehicle. (\rightarrow P. 99)

However, the system will not operate in the event of skinding when the VSC system is disabled.

Pre-crash brake assist

When there is a high possibility of a frontal collision, the system applies greater braking force in relation to how strongly the brake pedal is depressed.

Pre-crash braking (if equipped)

When there is a high possibility of a hontal collision, the system warns the driver using a warning light varning display and buzzer. If the system determines that a collision is unavoidable, the brakes are automatically applied to reduce the collision speed. Pre-crash braking can be disabled using the pre-crash braking off switch.

Disabling pre-crash braking (if equipped)



The pre-crash safety system is operational when

- Pre-crash seat belts (type A):
 - Vehicle speed is greater than about 5 km/h (4 mph).
 - The speed at which your vehicle is approaching the obstacle or the vehicle running ahead of you is greater than about 30 km/h (19 mph).
 - The front occupants are wearing a seat belt.
- Pre-crash seat belts (type B):
 - Vehicle speed is greater than about 30 km/h (19 mph).
 - The system detects sudden braking or skidding.
 - The front occupants are wearing a seat belt.
- Pre-crash brake assist:
- rion • Vehicle speed is greater than about 30 km/h (19 main)
 - The speed at which your vehicle is approaching the obstacle or the vehicle running ahead of you is greater than about 30 km/h (19 mph).
 - The brake pedal is depressed.
- Pre-crash braking:
 - The pre-crash braking off switch is not pressed.
 - Vehicle speed is greater than about 15 km/h (10 mph).
 - The speed at which your vehicle is approaching the obstacle or the vehicle running ahead of you is greater than about 15 km/h (10 mph).



Conditions that may trigger the system even if there is no possibility of collision

- When there is an object by the roadside at the entrance to a curve
- When passing an oncoming vehicle on a curve
- When driving over a narrow iron bridge
- When there is a metal object on the road surface
- When driving on an uneven road surface
- When passing an oncoming vehicle on a right-turn
- When your vehicle rapidly closes on the vehicle in front
- When a grade separation/interchange, sign, billboard, or other structure appears to be directly in the vehicle's line of travel
- When climbing a steep hill causes an overhead billboard or other metallic structure to appear directly in the vehicle's line of travel
- When an extreme change in vehicle height occ
- When the axis of the radar is out of adjustmen
- When passing through certain toll gates
- When driving on a bridge

When the system is activated in the situations described above, there is also a possibility that the seat belts will retract quickly and the brakes will be applied with a force greater than normal. When the seat belt is locked in the retracted position, stop the vehicle in a safe place, release the seat belt and refasten it.

Obstacles not detected

The sensor cannot detect plastic obstacles such as traffic cones. There may also be occasions when the sensor cannot detect pedestrians, animals, bicycles, motorcycles, trees, or snowdrifts.

Situations in which the pre-crash safety system does not function properly

The system may not function effectively in situations such as the following:

- On roads with sharp bends or uneven surfaces
- If a vehicle suddenly moves in front of your vehicle, such as at an intersection
- If a vehicle suddenly cuts in front of your vehicle, such as when overtaking
- In inclement weather such as heavy rain, fog, snow or sand storms
- When your vehicle is skidding with the VSC system off
- When an extreme change in vehicle height occurs
- When only part of your vehicle's front end collides with, or contacts, a vehicle or ctio object in a frontal collision
- When the axis of the radar is out of adjustment

Automatic cancelation of the pre-crash safety system

When a malfunction occurs due to sensor commination, etc. that results in the sensors being unable to detect obstacles, the ope-crash safety system will be automatically disabled. In this case, the system whot activate even if there is a collision possibility.

When there is a malfunction in the system

Warning lights and/or warning messages will turn on or flash. (\rightarrow P. 596, 602)

Notfo

Limitations of the pre-crash safety system

Do not overly rely on the pre-crash safety system. Always drive safely, taking care to observe your surroundings and checking for any obstacles or other road hazards.

Failure to do so may cause an accident resulting in death or serious injury.

Cautions regarding the assist contents of the system

By means of alarms and brake control, the pre-crash safety system is intended to assist the driver in avoiding collisions through the process of LOOK-JUDGE-ACT. There are limits to the degree of assistance the system can provide so please keep in mind the following important points.

Assisting the driver in watching the road


The pre-crash safety system is only able to detect obstacles directly in front of the vehicle, and only within a limited range. It is not a mechanism that allows careless or inattentive driving, and it is not a system that can assist the driver in low-visibility conditions. It is still necessary for the driver to pay close attention to the vehicle's surroundings.

• Assisting the driver in making correct/udgment

When attempting to estimate the possibility of a collision, the only data available to the pre-crash safety system is that from obstacles it has detected directly in front of the vehicle. Therefore, it is absolutely necessary for the driver to remain vigilant and to determine whether or not there is a possibility of collision in any given situation.

• Assisting the driver in taking action

The pre-crash safety system's braking assist feature is designed to help reduce the severity of a collision, and so only acts when the system has judged that a collision is unavoidable. This system by itself is not capable of automatically avoiding a collision or bringing the vehicle to a stop safely. For this reason, when encountering a dangerous situation the driver must take direct and immediate action in order to ensure the safety of all involved. When driving

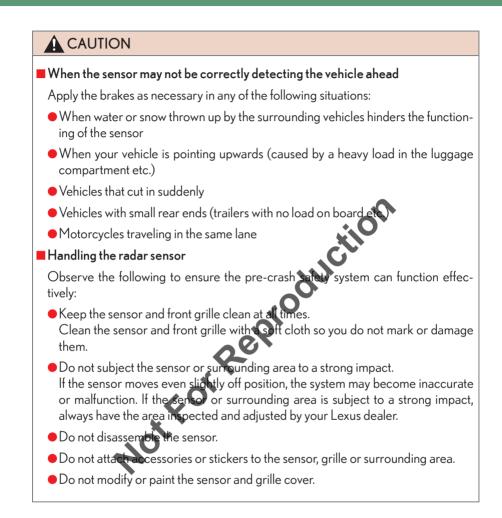

2-5. Driving information Utility vehicle precautions (RX270/RX350)

This vehicle belongs to the utility vehicle class, which has higher ground clearance and narrower tread in relation to the height of its center of gravity to make it capable of performing in a wide variety of off-road applications.

Off-road vehicle feature

- Specific design characteristics give it a higher center of gravity than ordinary passenger cars. This vehicle design feature causes this type of vehicle to be more likely to rollover. And, utility vehicles have a significantly higher rollover rate than other types of vehicles.
- An advantage of the higher ground clearance is a better view of the road allowing you to anticipate problems
- It is not designed for cornering at the same speeds as ordinary passenger cars any more than low-slung sports cars designed to perform satisfactorily under off-road conditions. Therefore, sharp turns at excessive speeds may cause rollover.

2

Off-road vehicle precautions

Always observe the following precautions to minimize the risk of death or serious injury or damage to your vehicle:

- In a rollover crash, an unbelted person is significantly more likely to die than a person wearing a seat belt. Therefore, the driver and all passengers should fasten their seat belts whenever the vehicle is moving.
- Avoid sharp turns or abrupt maneuvers, if at all possible.
 Failure to operate this vehicle correctly may result in loss of control or vehicle rollover causing death or serious injury.
- Loading cargo on the roof luggage carrier will make the center of the vehicle gravity higher. Avoid high speeds, sudden starts, sharp turns, sudden braking or abrupt maneuvers, otherwise it may result in loss of control or vehicle rollover due to failure to operate this vehicle correctly.
- Always slow down in gusty crosswinds. Because of its profile and higher center of gravity, your vehicle is more sensitive to side winds than an ordinary passenger car. Slowing down will allow you to have better control.
- Do not drive horizontally across steep slopes. Driving straight up or straight down is preferred. Your vehicle (at any similar off-road vehicle) can tip over sideways much more easily than forward or backward.

Off-road driving

When driving your vehicle off-road, please observe the following precautions to ensure your driving enjoyment and to help prevent the closure of areas to off-road vehicles.

• Drive your vehicle only in areas where off-road vehicles are permitted to travel.

Respect private property. Get owner's permission before entering private property.

• Do not enter areas that are closed. Honor gates barriers and signs that restrict travel.

• Stay on established roads. When conditions are wet, driving techniques should be changed or travel delayed to prevent damage to roads.

Off-road driving precautions

Always observe the following precautions to minimize the risk of death or serious injury or damage to your vehicle:

- Drive carefully when off the road. Do not take unnecessary risks by driving in dangerous places.
- Do not grip the steering wheel spokes when driving off-road. A bad bump could jerk the wheel and injure your hands. Keep both hands and especially your thumbs on the outside of the rim.
- Always check your brakes for effectiveness immediately after driving in sand, mud, water or snow.
- After driving through tall grass, mud, rock, sand, water, etc., check that there is no grass, bush, paper, rags, stone, sand, etc. adhering or trapped the underbody. Clear off any such matter from the underbody of the vehicle is used with these materials trapped or adhering to the underbody, a breakdown or fire could occur.
- When driving off-road or in rugged terrain, do not drive at excessive speeds, jump, make sharp turns, strike objects, etc. This may cause loss of control or vehicle rollover causing death or serious injury. You are also risking expensive damage to your vehicle's suspension and chassis.

NOTICE

To prevent water damage

Take all necessary safety measures to ensure that water damage to the engine or other components does not occur.

- Water entering the engine air intake will cause severe engine damage.
- Water entering the automatic transmission will cause deterioration in shift quality, locking up of your transmission accompanied by vibration, and ultimately damage.
- Water can wash the grease from wheel bearings, causing rusting and premature failure, and may also enter the differentials, transmission and transfer case (AWD models), reducing the gear oil's lubricating qualities.

<u>∧</u> NOTICE

When you drive through water

If driving through water, such as when crossing shallow streams, first check the depth of the water and the bottom of the stream for firmness. Drive slowly and avoid deep water.

Inspection after off-road driving

- Sand and mud that has accumulated around brake discs may affect braking efficiency and may damage brake system components.
- Always perform a maintenance inspection after each day of afteroad driving that has taken you through rough terrain, sand, mud, or water

2

2-5. Driving information Utility vehicle precautions (RX450h)

This vehicle belongs to the utility vehicle class, which has higher ground clearance and narrower tread in relation to the height of its center of gravity.

Utility vehicle feature

- Specific design characteristics give it a higher center of gravity than ordinary passenger cars. This vehicle design feature causes this type of vehicle to be more likely to rollover. And, utility vehicles have a significantly higher rollover rate than other types of vehice.
- It is not designed for cornering at the same speeds as ordinary passenger cars any more than low-slung sports cars designed to perform satisfactorily under off-road conditions. Therefore, sharp turns at excessive speeds may cause rollover.



ACAUTION

Utility vehicle precautions

Always observe the following precautions to minimize the risk of death or serious injury or damage to your vehicle:

- In a rollover crash, an unbelted person is significantly more likely to die than a person wearing a seat belt. Therefore, the driver and all passengers should fasten their seat belts whenever the vehicle is moving.
- Avoid sharp turns or abrupt maneuvers, if at all possible.
 Failure to operate this vehicle correctly may result in loss of control or vehicle rollover causing death or serious injury.
- Loading cargo on the roof luggage carrier will make the center of the vehicle gravity higher. Avoid high speeds, sudden starts, sharp turns, sudden braking or abrupt maneuvers, otherwise it may result in loss of control or vehicle rollover due to failure to operate this vehicle correctly.
- Always slow down in gusty crosswinds. Bacause of its profile and higher center of gravity, your vehicle is more sensitive to side winds than an ordinary passenger car. Slowing down will allow you to have better control.
- Do not drive horizontally across steep slopes. Driving straight up or straight down is preferred. Your vehicle (or any similar off-road vehicle) can tip over sideways much more easily than forward or backward.

Off-road driving

Your vehicle is not designed to be driven off-road. However, in the event that off-road driving cannot be avoided, please observe the following precautions to help avoid the areas prohibited to vehicles.

• Drive your vehicle only in areas where off-road vehicles are permitted to travel.

Respect private property. Get owner's permission before entering private property.

• Do not enter areas that are closed. Honor gates barriers and signs that restrict travel.

• Stay on established roads. When conditions are wet, driving techniques should be changed or travel delayed to prevent damage to roads.

• Avoid driving on very steep, slippery roads and other surfaces, such as sand, where the tires are table to lose traction. Your vehicle may not perform as well as conventional AWD on-road vehicles on these surfaces.

CAUTION

Off-road driving precautions

Always observe the following precautions to minimize the risk of death or serious injury or damage to your vehicle:

• Drive carefully when off the road. Do not take unnecessary risks by driving in dangerous places.

• Do not grip the steering wheel spokes when driving off-road. A bad bump could jerk the wheel and injure your hands. Keep both hands and especially your thumbs on the outside of the rim.

• Always check your brakes for effectiveness immediately after driving in sand, mud, water or snow.

CAUTION

- After driving through tall grass, mud, rock, sand, water, etc., check that there is no grass, bush, paper, rags, stone, sand, etc. adhering or trapped to the underbody. Clear off any such matter from the underbody. If the vehicle is used with these materials trapped or adhering to the underbody, a breakdown or fire could occur.
- When driving off-road or in rugged terrain, do not drive at excessive speeds. jump, make sharp turns, strike objects, etc. This may cause loss of control or vehicle rollover causing death or serious injury. You are also risking expensive damage to your vehicle's suspension and chassis.

NOTICE

To prevent water damage

uctio Take all necessary safety measures to ensure that water damage to the hybrid battery, hybrid system or other components does not occur.

- Water entering the engine compartment may cause severe damage to the hybrid system. Water entering the interior may cause the hybrid battery stowed under the rear seats to short circuit.
- Water entering the hybrid transmission will cause deterioration in transmission quality. The malfunction inclusion may come on, and the vehicle may not be drivable.
- Water can wash the grease from wheel bearings, causing rusting and premature failure, and may also enter the hybrid transmission case, reducing the gear oil's lubricating qualities.

When you drive through water

If driving through water, such as when crossing shallow streams, first check the depth of the water and the bottom of the river bed for firmness. Drive slowly and avoid deep water.

Inspection after off-road driving


- Sand and mud that has accumulated around brake discs may affect braking efficiency and may damage brake system components.
- Always perform a maintenance inspection after each day of off-road driving that has taken you through rough terrain, sand, mud, or water.

When driving

Take notice of the following information about storage precautions, cargo capacity and load:

- Stow cargo and luggage in the luggage compartment whenever possible:
- Be sure all items are secured in place.
- Be careful to keep the vehicle level. Placing the weight as far forward as possible helps maintain vehicle balance.


• For better fuel economy, do not carry unnecessary weight.

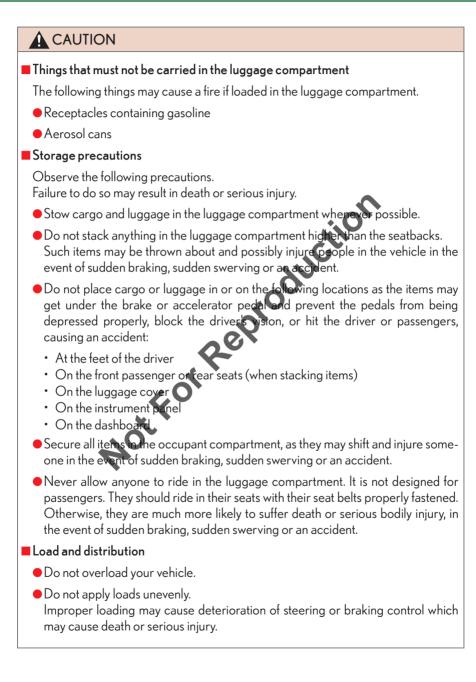

Roof luggage carrier precautions (if equipped)

To use the roof rails as a roof luggage carrier, you must fit the roof rails with two or more genuine Lexus cross rails or their equivalent.

When you load cargo on the roof luggage carrier, observe the following:

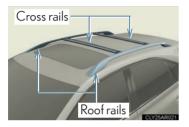

- Place the cargo so that its weight is distributed evenly between the front and rear axles.
- If loading long or wide cargo, never exceed the vehicle's overall length or width. $(\rightarrow P. 674)$
- Before driving, make sure the cargo is securely tastened on the roof luggage carrier.
- Loading cargo on the roof luggage carrier will make the center of gravity of the vehicle higher. Avoid high speeds, rodoen starts, sharp turns, sudden braking or abrupt maneuvers, otherwise the result may be a loss of control or vehicle roll-over due to failure to operate this vehicle correctly and result in death or serious injury.
- If driving for long distances, on rough roads, or at high speeds, stop the vehicle now and then during the trip to make sure the cargo remains in its place.
- Do not exceed 5kg (165 lb.) cargo weight on the roof luggage carrier.

NOTICE

When loading cargo

Be careful not to scratch the surface of the moon roof.

Carry out the necessary preparations and inspections before driving the vehicle in winter. Always drive the vehicle in a manner appropriate to the prevailing weather conditions.

Pre-winter preparations

• Use fluids that are appropriate to the prevailing outside temperatures.

- Engine oil
- Engine coolant
- Power control unit coolant (RX450h)
- Washer fluid
- Have a service technician inspect the condition of the 12-volt battery.
- Have the vehicle fitted with four solve tires or purchase a set of tire chains for the front tires.

Ensure that all tires are the same size and brand, and that chains match the size of the tires.

Before driving the vehicle

Perform the following according to the driving conditions:

- Do not try to torcibly open a window or move a wiper that is frozen. Pour warm water over the frozen area to melt the ice. Wipe away thewater immediately to prevent it from freezing.
- To ensure proper operation of the climate control system fan, remove any snow that has accumulated on the air inlet vents in front of the windshield.
- Check for and remove any excess ice or snow that may have accumulated on the exterior lights, vehicle's roof, chassis, around the tires or on the brakes.
- Remove any snow or mud from the bottom of your shoes before getting in the vehicle.

When driving

When driving the vehicle


Accelerate the vehicle slowly, keep a safe distance between you and the vehicle ahead, and drive at a reduced speed suitable to road conditions

When parking the vehicle

Park the vehicle and move the shift lever to P without setting the parking brake. The parking brake may freeze up, preventing it from being released. If necessary, block the wheels to prevent inadvert-,uctio ent sliding or creeping.

Selecting tire chains

Use the correct tire chain size when morning the tire chains. Chain size is regulated for each tire size

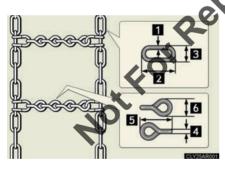

Side chain

- 3 mm (0.12 in.) in diameter
- 25 mm (0.98 in.) in length
- **I**1 mm (0.43 in.) in width

Cross chain

4 mm (0.16 in.) in diameter

- **5** 25 mm (0.98 in.) in length
- 6 14 mm (0.55 in.) in width

Regulations on the use of tire chains

Regulations regarding the use of tire chains vary depending on location and type of road. Always check local regulations before installing chains.

Tire chain installation

Observe the following precautions when installing and removing chains:

- Install and remove tire chains in a safe location.
- Install tire chains on the front tires only. Do not install tire chains on the rear tires.
- Install tire chains on front tires as tightly as possible. Retighten chains after driving 0.5—1.0 km (1/4—1/2 mile).
- Install tire chains following the instructions provided with the tire chains.

CAUTION

Driving with snow tires

Observe the following precautions to reduce the tisk of accidents.

Failure to do so may result in a loss of vehicle control and cause death or serious injury.

- Use tires of the specified size.
- Maintain the recommended level phair pressure.
- Do not drive at speeds in excess of the speed limit or the speed limit specified for the snow tires being used
- Use snow tires on all, not just some wheels.

Driving with tire chains

Observe the following precautions to reduce the risk of accidents.

Failure to do so may result in the vehicle being unable to be driven safely, and may cause death or serious injury.

- Do not drive in excess of the speed limit specified for the tire chains being used, or 50 km/h (30 mph), whichever is lower.
- Avoid driving on bumpy road surfaces or over potholes.
- Avoid sudden acceleration, abrupt steering, sudden braking and shifting operations that cause sudden engine braking.
- Slow down sufficiently before entering a curve to ensure that vehicle control is maintained.

2-5. Driving information Trailer towing (RX350/RX450h)

Your vehicle is designed primarily as a passenger-and-load carrying vehicle. Towing a trailer will have an adverse effect on handling, performance, braking, durability, and fuel consumption. For your safety and the safety of others, do not overload the vehicle or trailer.

Lexus warranties do not apply to damage or malfunction caused by towing a trailer for commercial purposes.

For towing purposes, we recommend use of the following parts:

When towing a caravan trailer etc., use a distributing hitch.

• When the total trailer weight is greater than the vehice weight, use a sway control device.

Weight limits

Confirm that the total trailer weight, gross vehicle weight, gross axle weight and trailer tongue load are all within the limits.

Gross vehicle weight

► RX350

The gross vehicle weight must not exceed 2545 kg (5611 lb.).

▶ RX450h

The gross vehicle weight must not exceed 2700 kg (5952 lb.).

The gross vehicle weight is the sum weight of the unloaded vehicle, driver, passengers, luggage, hitch and trailer tongue load. Also included is the weight of any special equipment installed on your vehicle.

Gross axle weight

▶ RX350

The load on either the front or rear axle resulting from distribution of the gross vehicle weight on both axles must not exceed 1490 kg (3285 lb.)

▶ RX450h

The load on either the front or rear axle resulting from distribution of the gross vehicle weight on both axles must not exceed 1540 kg (3395 lb.)

Trailer tongue load


► RX350

The trailer cargo load should be distributed so that the tongue load is 9 to 11% of the total trailer weight, not exceeding 140 kg (308 lb.). (Tongue load / Total trailer weight 00 = 9 to 11%)

▶ RX450h

The trailer cargo load should be distributed so that the tongue load is 9 to 11% of the total trailer weight, not exceeding 150 kg (331 lb.). (Tongue load / Total trailer weight x 100 = 9 to 11%)

The total trailer weight and tongue load can be measured with platform scales found at highway weighing stations, building supply companies, trucking companies, junk yards, etc.

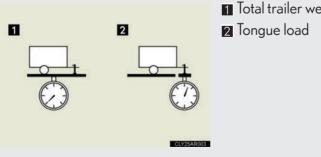

1 Total trailer weight

Towing a trailer

Contact your Lexus dealer for further information about additional requirements such as a towing kit etc.

Hitch

Trailer hitch assemblies have different weight capacities established by the hitch manufacturer. Even though the vehicle may be rated for towing a higher weight, the operator must never exceed the maximum weight ductio rating specified for the trailer hitch.

Before towing

Check that the following conditions are met:

- The vehicle's tires are properly inflated. (\rightarrow **P**091
- Trailer tires are inflated according to the trailer manufacturer's recommendation.
- All trailer lights work.
- All lights work each time you connect them.
- The trailer ball is set up at the proper height for the coupler on the trailer.
- The trailer is level when it is hitched.

Do not drive if the trailer is not level, and check for improper tongue weight, overloading, worn suspension, or other possible causes.

- The trailer cargo is securely loaded.
- The rear view mirrors conform to all applicable federal, state/provincial or local regulations. If they do not, install rear view mirrors appropriate for towing purposes.

Break-in schedule

▶ RX350

Lexus recommends that you do not use a new vehicle or a vehicle with any new power train components (engine, transmission, differential, wheel bearings, etc.) to tow a trailer for the first 800 km (500 miles) of driving.

▶ RX450h

Lexus recommends that you do not use a new vehicle or a vehicle with any new power train components (engine, hybrid transmission, wheel bearings, etc.) to tow a trailer for the first 800 km (500 miles) of driving.


Maintenance

- If you tow a trailer, your vehicle will require more frequent maintenance due to the additional load. (See "Warranty and Service Booklet"
- Retighten the fixing bolts of the towing ball and bracket after approximately Reprod 1000 km (600 miles) of trailer towing.

A CAUTION

To avoid accident or injury

- The total trailer weight (trail weight plus the weight of cargo) must not exceed 1500 kg (3307 lb.).
- Do not exceed the trailer hitch assembly weight, gross vehicle weight, gross axle weight and trailer tongue load capacities.
- Never load more weight in the back than in the front of the trailer. About 60% of the load should be in the front half of the trailer, and the remaining 40% in the rear.
- Do not use cruise control when you are towing.
- Do not tow the vehicle with the compact spare tire installed.

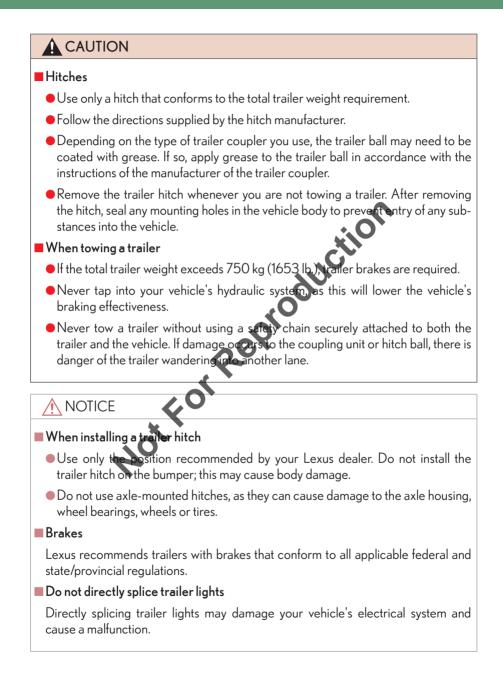

Trailer towing tips

Your vehicle will handle differently when towing a trailer. In order to avoid accident, death or serious injury, keep the following in mind when towing:

• Before starting out, check the trailer lights and the vehicle-trailer connections. Recheck after driving a short distance.

 Practice turning, stopping and reversing with the trailer attached in an area away from traffic until you become accustomed to the feel of the vehicle.

• Reversing with a trailer attached is difficult and requires practice. Grip the bottom of the steering wheel and move your hand to the left to move the trailer to the left. Move your hand to the right to move the trailer to right. (This is generally opposite to reversing without a trailer attached.) Avoid sharp or prolonged turning. Have someone guide you when reversing to reduce the risk of an accident.

• As stopping distance is increased when towing a trailer, vehicle-tovehicle distance should be increased. For each 16 km/h (10 mph) of speed, allow at least one vehicle and trailer length.

• Avoid sudden braking as you may skid, resulting in jackknifing and loss of control. This is especially true on wet or slippery surfaces.

• Avoid jerky starts or sudden acceleration.

 Avoid jerky steering and sharp turns, and slow down before making turns.

 Note that when making a turn, the trailer wheels will be closer than the vehicle wheels to the inside of the turn. Compensate by making a larger than normal turning radius.

- Crosswinds and rough roads will adversely affect handling of your vehicle and trailer, causing sway. Periodically check the rear to prepare for being passed by large trucks or buses, which may cause your vehicle and trailer to sway. If swaying occurs, firmly grip the steering wheel, reduce speed immediately but gradually, and steer straight ahead. Never increase speed. If you make no extreme correction with the steering or brakes, your vehicle and trailer will stabilize.
- Take care when passing other vehicles. Passing requires considerable distance. After passing a vehicle, do not forget the length of your trailer, and be sure you have plenty of room before changing lanes.
- RX350: To maintain engine braking efficiency and charging system performance when using engine braking, do for use "D". Transmission shift range position must be in "6", in S mode.
- RX450h: To maintain engine braking efficiency and electrical charging performance when using engine braking, do not use "D". Hybrid transmission shift range position must be in "4", in S mode.
- Due to the added load of the trailer, your vehicle's engine (RX350) or hybrid system (RX450h) may overheat on hot days (at temperatures over 30°C [85°F]) when driving up a long or steep grade. If the engine coolant/temperature gauge indicates overheating, immediately turn off the air conditioning (if in use), pull your vehicle off the road and stop in a safe spot. (→P. 660, 663)

- Always place wheel blocks under both the vehicle and the trailer wheels when parking. Apply the parking brake firmly, and put the transmission (RX350) or hybrid transmission (RX450h) in P. Avoid parking on a slope, but if unavoidable, do so only after performing the following:
- STEP 1 Apply the brakes and keep them applied.
- STEP 2 Have someone place wheel blocks under both the vehicle and trailer wheels.
- STEP 3 When the wheel blocks are in place, release the brakes slowly until the blocks absorb the load.
- STEP 4 Apply the parking brake firmly.
- STEP 5 Shift into P and turn off the engine (RX450h).
- When restarting after parking on a slope
- STEP 1 With the transmission in the Position, start the engine (RX350) or hybrid system (RX450h). Be sure to keep the brake pedal depressed.
- STEP 2 Shift into a forward gear. If reversing, shift into R.
- STEP 3 Release the parking brake and brake pedal, and slowly pull or back away from the wheel blocks. Stop and apply the brakes.

STEP 4 Have someone retrieve the blocks.

To avoid an accident

- Observe the legal maximum speeds for trailer towing.
- Slow down and downshift before descending steep or long downhill grades. Do not make sudden downshifts while descending steep or long downhill grades.
- Avoid holding the brake pedal down too long or applying the brakes too frequently. This could cause the brakes to overheat and result in reduced braking efficiency.

When driving

	3-1.	Using the air conditioni	ng
		system and defogger	
		Automatic air	
		conditioning system	344
		Rear window defogger	
		switch	. 352
		switch Windshield wiper de-icer	353
	3-2.	Using the audio system	
		Audio system	
		Using the radio	
		Using the CD player	360
		Playing MP3 and WMA	
0	K	discs	
		Operating an iPod	. 376
		Operating a USB	
		memory	385
		Bluetooth [®] audio	
		system	. 394
20		Using the Bluetooth [®]	
NotForRet		audio system	. 397
		Operating a Bluetooth [®] enabled portable	
		player	400
		Setting up a Bluetooth [®] enabled portable	
		player	403
		Bluetooth [®] audio system	
		setup	. 407
		Optimal use of the audio	
		system	408
		I Ising the ALIX port	410

	Using the steering wheel		
	audio switches	412	
	Hands-free system for		
	mobile phones	415	
	Using the hands-free		
	system		
	(for mobile phones)	420	
	Making a phone call	426	
	Setting a mobile phone		
	Security and system		
	setup	434	
	Using the phone book	440	
5.	Using the interior lights	- 2	
	Interior lights list	446	
	• Interior lights	447	
	• Personal lights	447	
l			
2	Using the storage Seatur		
	List of storage teatures	449	
	• Glove Gove	450	
	• Bottle holders/		

door pockets451• Cup holders452• Console box455• Coin holder457• Auxiliary box457• Under tray458

3-3

3-

Sun visors	. 459
Vanity mirrors	. 460
Clock	461
Outside temperature	
display	. 462
Multi-display light	
control	. 463
Power outlets	. 464
Heated steering wheel	. 466
Seat heaters and	
• ventilators	. 468
Armrest	. 470
Coat hooks	471
Assist grips	. 472
Floor mat	. 473

3-5. Other interior features


uggage compartment	
features	475

3-1. Using the air conditioning system and defogger Automatic air conditioning system


Air outlets and fan speed are automatically adjusted according to the temperature setting.


► Vehicles with a navigation system

Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".

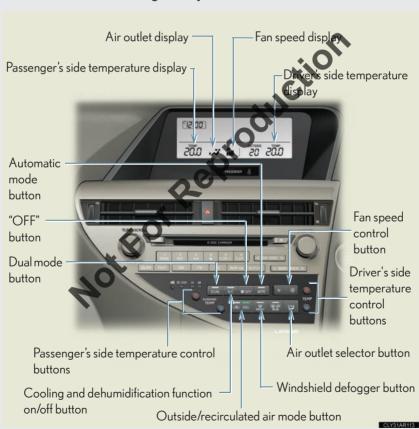

► Vehicles without a navigation system

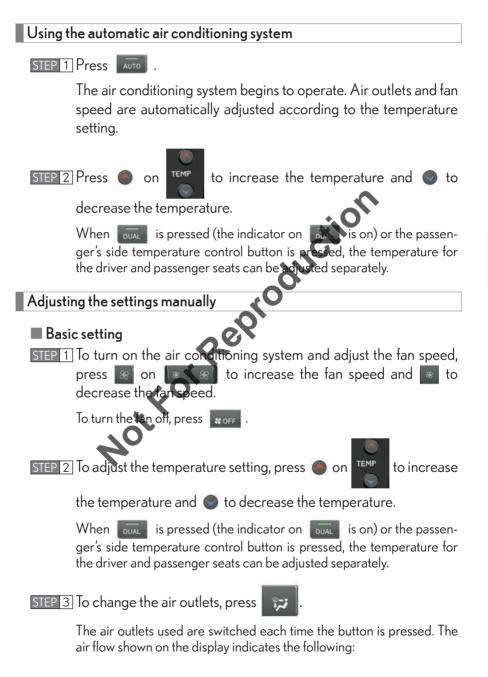

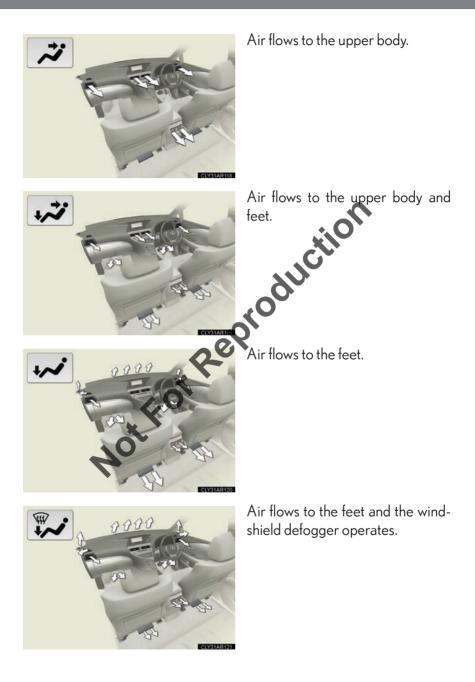

Switching between outside air and recirculated air modes




The mode switches between <>> (recirculated air mode) and <>> (outside air mode) modes each time the button is pressed.

Defogging the windshield



Adjusting the position of and opening and closing the air outlets

► Front center outlets

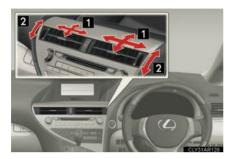

▶ Front side outlets

- Direct air flow to the left or right, up or down.
- Turn the knob to open or close the vent.





- Directair flow to the left or right, ap or down.
 Iurn the knob to open or close the vent.



- Direct air flow to the left or right, up or down.
- Irrn the knob to open or close the vent.

Operation of the air conditioning system in Eco drive mode (RX450h)

In Eco drive mode, the air conditioning system is controlled as follows to prioritize fuel efficiency:

- Engine speed and compressor operation controlled to restrict heating/cooling capacity
- Fan speed restricted when automatic mode is selected

To improve air conditioning performance, perform the following operations:

- Adjust the fan speed
- Turn off Eco drive mode

Customization

The air conditioning control of Eco drive mode can be shanged to the same setting as that used in normal drive mode. (Customizable features \rightarrow P. 695)

Air conditioning system settings

- •RX270/RX350: When the "ENGINESTART STOP" switch is turned on, the air conditioning system settings mill were in use the last time the "ENGINE START STOP" switch was turned off.
- RX450h: When the "POWER" switch is turned on, the air conditioning system settings will be set to those that were in use the last time the "POWER" switch was turned off.
- Air conditioning sys tem settings are memorized individually on each electronic key, so the settings reproduced will be specific to the key that is used.
- This feature is customizable at your Lexus dealer.

Using automatic mode

Fan speed is adjusted automatically according to the temperature setting and ambient conditions. As a result, the following may occur:

Immediately after the button is pressed, the fan may stop for a while until warm or cool air is ready to flow.

Using the system in recirculated air mode

The windows will fog up more easily if recirculated air mode is used for an extended period.

Switching between outside air and recirculated air modes

Recirculated air mode or outside air mode may be automatically switched to in accordance with the temperature setting and the inside temperature.

Window defogger feature

Recirculated air mode may automatically switch to outside air mode in situations where the windows need to be defogged.

■ When outside air temperature is below 0°C (32°F)

The cooling and dehumidification function may not operate even when *we* is pressed.

■ When the indicator light on _____ goes off

Press **AC** to turn on the cooling and dehumidification function again. There may be a problem in the air conditioning system if the indicator light goes off again shortly after the button is pressed. Have it inspected by your Lexus dealer.

Air conditioning odors

- During use, various odors from inside and outside the vehicle may enter into and accumulate in the air conditioning system. This may then cause odor to be emitted from the vents.
- To reduce potential odors from occurring:
 - It is recommended that the air conditioning system be set to outside air mode prior to turning the rehise off.
 - The start timing of the blower may be delayed for a short period of time immediately after the air conditioning system is started in automatic mode.

To prevent the windshield from fogging up

Do not use during cool air operation in extremely humid weather. The differ-

ence between the temperature of the outside air and that of the windshield can cause the outer surface of the windshield to fog up, blocking your vision.

NOTICE


To prevent 12-volt battery discharge

▶ RX270/RX350

Do not leave the air conditioning system on longer than necessary when the engine is off.

▶ RX450h

Do not leave the air conditioning system on longer than necessary when the hybrid system is off.

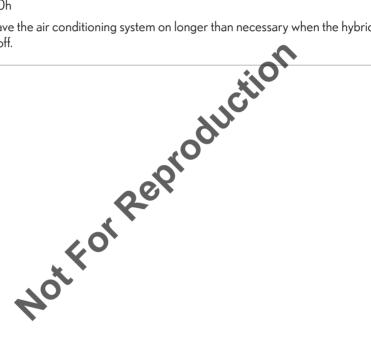


Defoggers are used to defog the rear window, and to remove raindrops, dew and frost from the outside rear view mirrors.

Vehicles with a navigation system

Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".

Vehicles without a navigation system

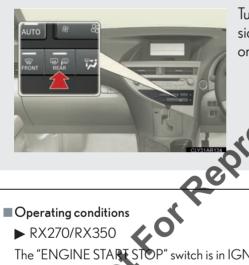

Turns the rear window and outside rear view mirror defoggers on/off

The deformers will automatically turn off after 15 to 60 minutes. The operation time changes cording to the ambient temerature and vehicle speed.

Operating conditions

► RX270/RX350

The "ENGINE STARE STOP" switch is in IGNITION ON mode.

▶ RX450h ▲

The "POWER" switch is in ON mode.

The outside rear view mirror defoggers

Turning the rear window defogger on will turn the outside rear view mirror defoggers on.

A CAUTION

When the outside rear view mirror defoggers are on

Do not touch the outside surface of the rear view mirrors, as they can become very hot and burn you.


3-1. Using the air conditioning system and defogger **Windshield wiper de-icer***

This feature is used to prevent ice from building up on the windshield and wiper blades.

► Vehicles with a navigation system

Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".

► Vehicles without a navigation system

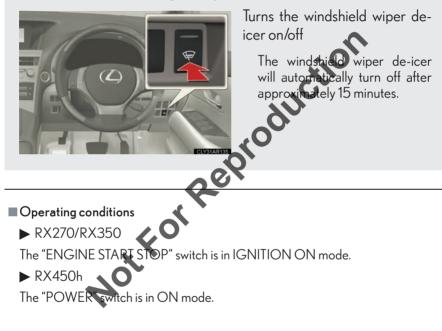

CAUTION

When the windshield wiper de-icer is on

Do not touch the lower part of the windshield or the side of the front pillars, as the surfaces can become very hot and burn you.

3-2. Using the audio system Audio system

► Vehicles with a navigation system

Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".

Vehicles without a navigation system
 CD player with a changer and AM/FM radio



Title	Page
Using the radio	P. 357
Using the CD player	P. 360
Playing MP3 and WMA discs	P. 368
Operating an iPod	P. 376
Operating a USB memory	P. 385
Bluetooth [®] audio system	P.394
Optimal use of the audio system	P.408
Using the AUX port	P. 410
Using the steering wheel audio switches	P. 412
Hands-free system for mobile phones	P. 415

■Using mobile phones

Interference may be heard through the audio system's speakers if a mobile phone is being used inside or close to the vehicle while the audio system is operating.

CAUTION

Certification for the disc player with a changer

This product is a class 1 laser product classified under the Safety of laser products, IEC 60825-1:2007, and contains a class 1 M laser module. To ensure continued safety, do not remove any covers or attempt to gain access to the inside of the product. Refer all servicing to gualified personnel.

CLASS1LASER PRODUCT

duction CAUTION - CLASS 1 M INVISIBLE LASER RADIATION WHEN OPEN. DO NOT OPTICAL VIFW DIRFCTIY WITH INSTRUMENTS. Repro

NOTICE

To prevent 12-volt battery dischard

▶ RX270/RX350

Do not leave the audio system on longer than necessary when the engine is off.


RX450h


Do not leave the audio system on longer than necessary when the hybrid system is off.

To avoid damaging the audio system

Take care not to spill drinks or other fluids over the audio system.

3-2. Using the audio system **Using the radio**

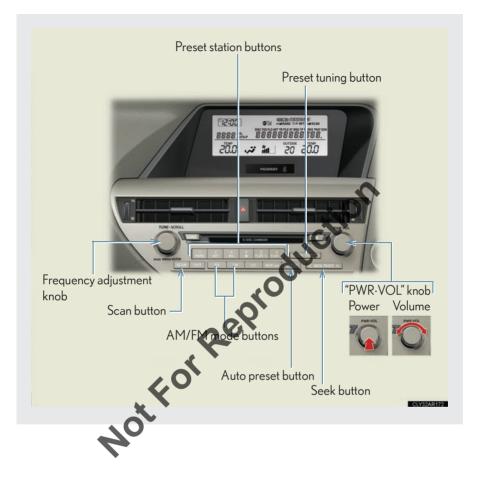

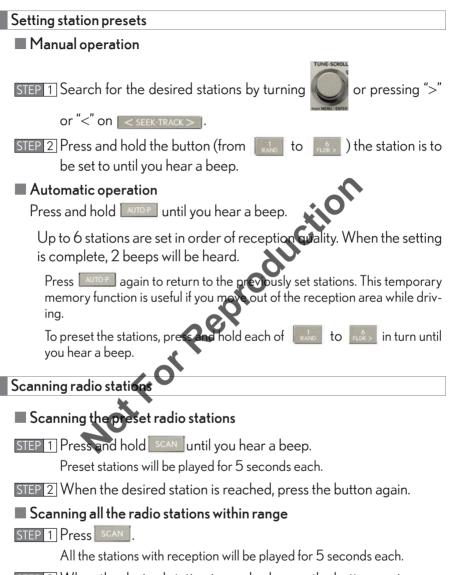

When the 12-volt battery is disconnected

All preset stations are erased.

Reception sensitivity


- It is difficult to maintain perfect radio reception at all times due to the continually changing position of the antenna, differences in signal strength and surrounding objects, such as trains and transmitters.
- When AUTOP is used, automatic station selection and automatic registering of the stations may not be possible.
- The radio antenna is mounted inside the rear spoiler and the rear window. To maintain clear radio reception, do not attach metallic window tinting or other metallic objects to the antenna wire mounted inside the tear window.


allice side that side that

3-2. Using the audio system Using the CD player



Loading a CD
Loading a CD
STEP 1 Press week.
"WAIT" is shown on the display.
STEP 2 When the indicator on the slot turns from amber to green, insert a CD.
The display changes from "WAIT" to "LOAD".
Loading multiple CDs
STEP 1 Press and hold 📼 until you hear a beep. 😱 🔿
"WAIT" is shown on the display.
STEP 2 When the indicator on the slot turns from amber to green, insert a CD.
The display changes from "WAIT" COAD".
The indicator on the slot turns on the rune the CD is being inserted.
STEP 3 When the indicator on the slot turns from amber to green, insert the next CD.
Repeat the procedure for the remaining CDs.
To cancel the operation, press 💶. If you do not insert a disc within 15 seconds, loading will be canceled automatically.

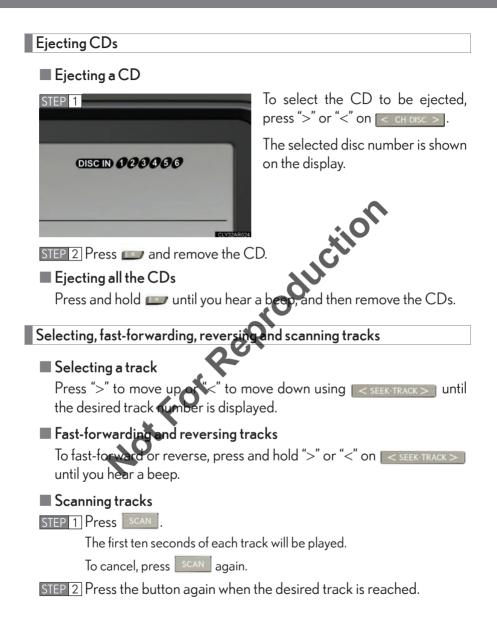

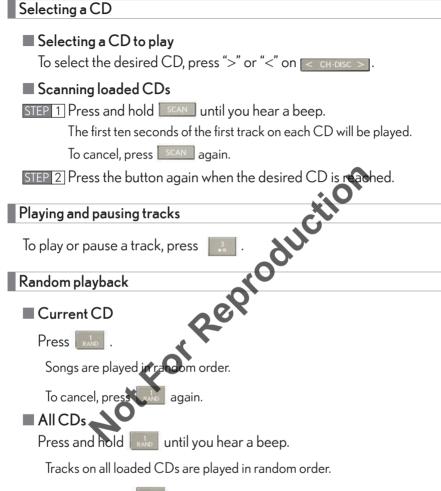

To cancel, press again.

Repeat play
Press 2
To cancel, press again.
Repeating all of the tracks on a CD
Press and hold 🔐 until you hear a beep.
To cancel, press again.
Switching the display
Press TEXT .
Each time the button is pressed, the display changes in the following order: Elapsed time \rightarrow CD title \rightarrow Track title
CD player protection feature
To protect the internal components, playback is automatically stopped when a problem is detected.
Display
Up to 12 characters can be displayed at a time.
If there are 13 or more characters, pressing and holding TEXT until you hear a beep enables to display the remaining characters. A maximum of 24 characters can be displayed.
If TEXT is pressed until you hear a beep again or has not been operated for more than 6 seconds, the display will return to the first 12 characters.
Depending on the contents recorded, the characters may not be displayed prop- erly or may not be displayed at all.

■ When "ERROR" or "WAIT" is shown on the display

"ERROR": This indicates a problem either in the CD or inside the player. The CD may be dirty, damaged, or inserted up-side down.

"WAIT": This indicates that operation is stopped due to a high temperature inside the player. Wait for a while and then press _____. If the CD still cannot be played back, contact your Lexus dealer.

Discs that can be used

Discs with the marks shown below can be used.

Playback may not be possible depending on recording format or disc features, or CDs with copy-protection features may not be user. Lens cleaners Do not use lens cleaners. Doi:



Lens cleaners

If discs are left inside the CD player of in the ejected position for extended periods of time


Not FO The discs may be damaged and may not play properly. Interior features


3

NOTICE


CDs and adapters that cannot be used

Do not use the following types of CDs, 8 cm (3 in.) CD adapters or Dual Discs. Doing so may damage the CD player and/or the CD load/eject function.

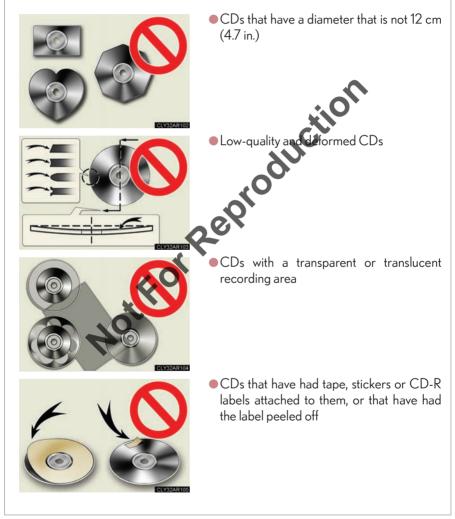

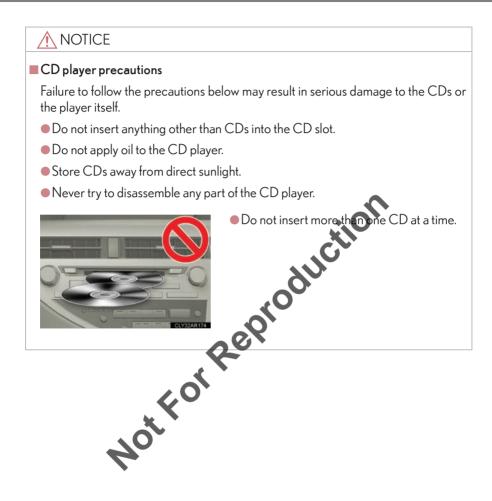

3-2. Using the audio system Playing MP3 and WMA discs

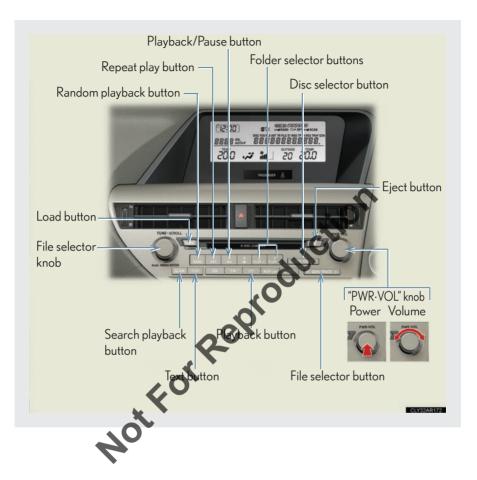



→P. 361, 362

Selecting MP3 and WMA discs

 $\rightarrow P.363$

Selecting and scanning a folder

Selecting a folder one at a time

Returning to the first folder

Press and hold as until you hear a beep.

Scanning the first file of all the folders


STEP 1 Press and hold scan until on hear a beep.


The first ten seconds of the first file in each folder will be played.

STEP 2 When the desired folder is reached, press scan again.

Fast-forwarding and reversing files

everse, press and hold ">" or "<" on [< seek-track > To fast-forward or until you hear a beep.

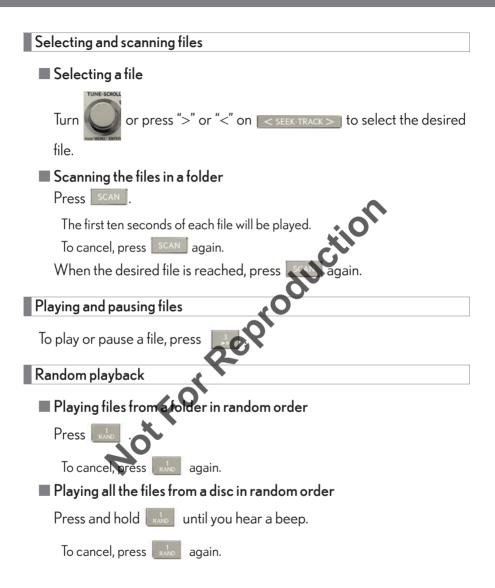

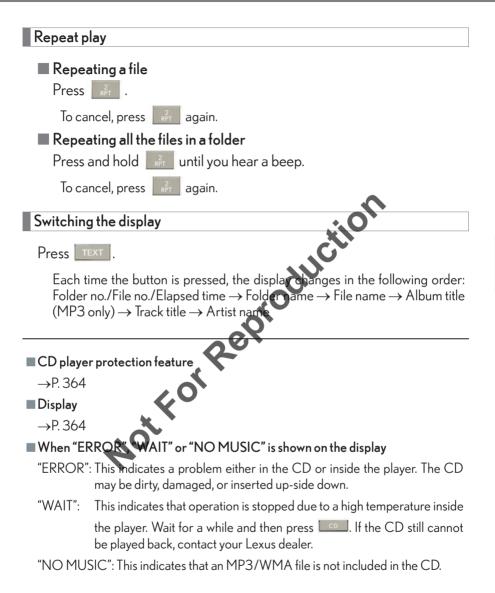

Discs that can be used

→P. 365

Lens cleaners

→P. 365

If discs are left inside the CD player or in the ejected position for extended periods of time

→P. 365

■ MP3 and WMA files

MP3 (MPEG Audio LAYER 3) is a standard audio compression format.

Files can be compressed to approximately 1/10 of their original size by using MP3 compression.

WMA (Windows Media Audio) is a Microsoft audio compression format.

This format compresses audio data to a size smaller than that of the MP3 format.

There is a limit to the MP3 and WMA file standards that can be used and to the media/formats on which the files are recorded.

MP3 file compatibility

- Compatible standards MP3 (MPEG1 LAYER3, MPEG2 LSF LAYER3)
- Compatible sampling frequencies MPEG1 LAYER3: 32, 44.1, 48 (kHz) MPEG2 LSF LAYER3: 16, 22.05, 24 (kHz)
- Compatible bit rates (compatible with VBR) MPEG1LATER3: 64, 80, 96, 112, 128, 160, 192, 224, 256, 320 (kbps) MPEG2 LSF LAYER3: 64, 80, 96, 112, 128, 144, 160 (kbps)
- Compatible channel modes: stereo, joint stereo, dual channel and monaural

- WMA file compatibility
 - Compatible standards WMA Ver. 7. 8. 9
 - Compatible sampling frequencies 32, 44.1, 48 (kHz)
 - Compatible bit rates (only compatible with 2-channel playback) Ver. 7, 8: CBR 48, 64, 80, 96, 128, 160, 192 (kbps) Ver. 9: CBR 48, 64, 80, 96, 128, 160, 192, 256, 320 (kbps)

Compatible media

Media that can be used for MP3 and WMA playback are CD-Rs and CD-RWs.

Playback in some instances may not be possible if the CPR or CD-RW is not finalized. Playback may not be possible or the audio may jump if the disc is 4110 scratched or marked with fingerprints.

Compatible disc formats

The following disc formats can be used:

- Disc formats: CD-ROM Mode 1 and Mode 2 CD-ROM XA Mode Form 1 and Form 2
- File formats: ISO9660 Level 1, (Romeo, Joliet) MP3 and WMA files written in any format other than those listed above may not play correctly, and their file names and folder names may not be displayed correctly.

Items related to standards and limitations are as follows:

- Maximum directory hierarchy: 8 levels (including the root)
- Maximum ength of folder names/file names: 32 characters
- Maximum number of folders: 192 (including the root)
- Maximum number of files per disc: 255

File names

The only files that can be recognized as MP3/WMA and played are those with the extension .mp3 or .wma.

Discs containing multi-session recordings

As the audio system is compatible with multi-sessions, it is possible to play discs that contain MP3 and WMA files. However, only the first session can be played.

ID3 and WMA tags

ID3 tags can be added to MP3 files, making it possible to record the track title, artist name, etc.

The system is compatible with ID3 Ver. 1.0, 1.1, and Ver. 2.2, 23 ID3 tags. (The number of characters is based on ID3 Ver. 1.0 and 1.1.)

WMA tags can be added to WMA files, making it possible to record the track title and artist name in the same way as with ID3 tags

MP3 and WMA playback

When a disc containing MP3 or WMA files is inserted, all files on the disc are first checked. Once the file check is finished, the first MP3 or WMA file is played. To make the file check finish more quickly, we recommend you do not write in any files other than MP3 or WMA files or create any unnecessary folders.

Discs that contain a mixture of music data and MP3 or WMA format data cannot be played.

Extensions

If the file extensions mp3 and .wma are used for files other than MP3 and WMA files, they will be mistakenly recognized and played as MP3 and WMA files. This may result in large amounts of interference and damage to the speakers.

Playback

- To play MP3 files with steady sound quality, we recommend a fixed bit rate of at least 128 kbps and a sampling frequency of 44.1 kHz.
- CD-R or CD-RW playback may not be possible in some instances, depending on the characteristics of the disc.
- There is a wide variety of freeware and other encoding software for MP3 and WMA files on the market, and depending on the status of the encoding and the file format, poor sound quality or noise at the start of playback may result. In some cases, playback may not be possible at all.
- When files other than MP3 or WMA files are recorded on a disc, it may take more time to recognize the disc and in some cases, playback may not be possible at all.
- Microsoft, Windows, and Windows Media are registered trademarks of Microsoft Corporation in the U.S.A. and other countries.
 NOTICE
 CDs and adapters that cannot be used

■ CD player precautions
→P. 367

Connecting an iPod enables you to enjoy music from the vehicle speakers.

Connecting an iPod

STEP 2




NotFor


Pull up the lever to release the lock, and lift the armrest.



Open the cover and connect an iPod using an iPod cable.

turn on the power of the iPod if it is not turned on.

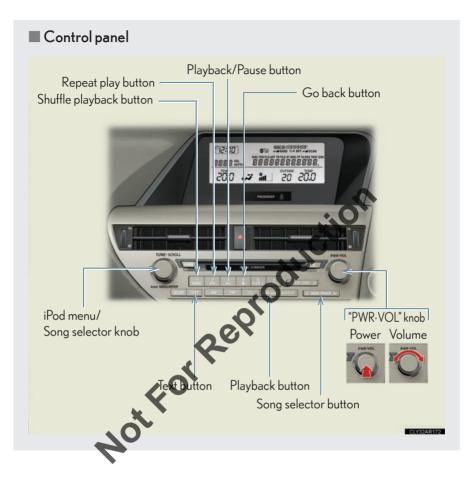

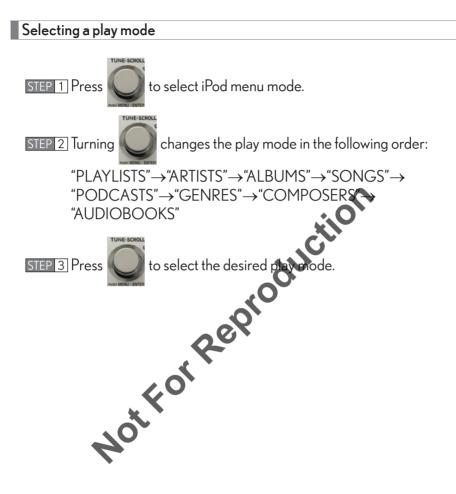

Play mode list

Play mode	First selection	Second selection	Third selection	Fourth selection
"PLAYLISTS"	Playlists select	Songs select	-	-
"ARTISTS"	Artists select	Albums select	Songs select	-
"ALBUMS"	Albums select	Songs select	-	-
"SONGS"	Songs select	-	-	-
"PODCASTS"	Albums select	Songs select	-	-
"GENRES"	Genre select	Artists select	Albums select	Songs select
"COMPOSERS"	Composers select	Albums select	Songs select	-
"AUDIOBOOKS"	Songs select	-		-

Selecting a list



Selecting songs
Turn or press ">" or "<" on <seek.track> to select the desired song.</seek.track>
Playing and pausing songs
To play or pause a song, press 🔝 .
Fast-forwarding and reversing songs
To fast-forward or reverse, press and hold ">" or "<" on <seek-track> until you hear a beep.</seek-track>
Shuffle playback
Playing songs from one playing or album in random order Press In the press For cancel, press In the playing of the pl
Playing songs from all the playlists or albums in random order
Press and hold international until you hear a beep.
To cancel, press again.
Repeat play
Press RPT . To cancel, press RPT again.
Switching the display
Press TEXT .

Each time the button is pressed, the display changes in the following order: Elapsed time \rightarrow Album title \rightarrow Track title \rightarrow Artist name





• iPhone, iPad, iPad classic, iPad nano and iPad touch are trademarks of Apple Inc., registered in the U.S. and other countries.

iPod functions

- When an iPod is connected and the audio source is changed to iPod mode, the iPod will resume play from the same point in which it was last used.
- Depending on the iPod that is connected to the system, certain functions may not be available. If a function is unavailable due to a malfunction (as opposed to a system specification), disconnecting the device and reconnecting it once again may resolve the problem.
- While connected to the system, the iPod cannot be operated with its own controls. It is necessary to use the controls of the vehicle's audio system instead.
- When the battery level of an iPod is very low, the iPod may not operate. If so, charge the iPod before use.
- Supported models (\rightarrow P. 383)

iPod problems

To resolve most problems encountered when using your iPod, disconnect your iPod from the vehicle iPod connection and reset it.

For instructions on how to reset your iPod, when to your iPod Owner's Manual.

Display

→P. 364

Error messages

- "ERROR": This indicates problem in the iPod or its connection.
- "NO MUSIC": This indicates that there is no music data in the iPod.
- "EMPTY": This indicates that some available songs are not found in a selected playlist.
- "UPDATE": This indicates that the version of the iPod is not compatible. Upgrade your iPod software to the latest version.

Compatible models

The following iPod[®], iPod nano[®], iPod classic[®], iPod touch[®] and iPhone[®] devices can be used with this system.

Made for

- iPod touch (4th generation)
- iPod touch (3rd generation)
- iPod touch (2nd generation)
- iPod touch (1st generation)
- iPod classic
- iPod with video
- iPod nano (6th generation)
- iPod nano (5th generation)
- iPod nano (4th generation)
- iPod nano (3rd generation)
- iPod nano (2nd generation)
- iPod nano (1st generation)
- iPhone 4
- iPhone 3GS
- iPhone 3G
- iPhone

Reproduction Depending on differences between models or software versions etc., some models might be incompatible with this system.

Items related to standards and limitations are as follows:

- Maximum number of lists in device: 9999
- Maximum number of songs in device: 65535
- Maximum number of songs per list: 65535

Caution while driving

Do not connect iPod or operate the controls.

<u>∧</u> NOTICE

If the armrest cannot be fully closed

Depending on the size and shape of the iPod that is connected to the system, the armrest may not close fully. In this case, do not forcibly close the armrest as this may damage the iPod or the terminal, etc.

To prevent damage to iPod

- Do not leave iPod in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the player.
- Do not push down on or apply unnecessary pressure to the iPod while it is connected as this may damage the iPod orrits terminal.

• Do not insert foreign objects into the point as this may damage the iPod or its terminal.

384

3-2. Using the audio system Operating a USB memory

Connecting a USB memory enables you to enjoy music from the vehicle speakers.

Connecting a USB memory



Notro


STEP 2


Pull up the lever to release the lock, and lift the armrest.




Open the cover and connect a USB memory.

Turn on the power of the USB memory if it is not turned on.

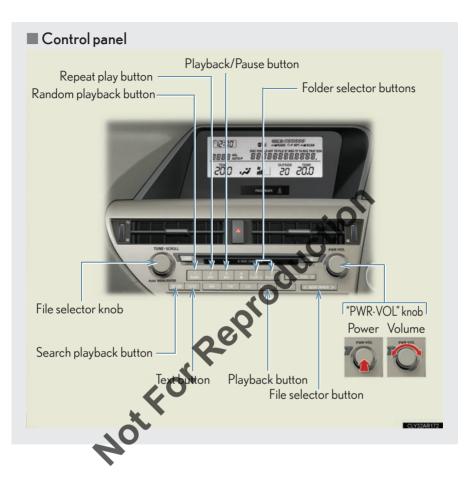

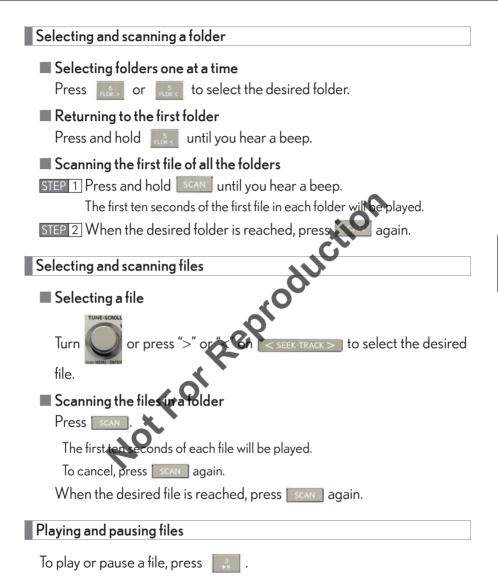

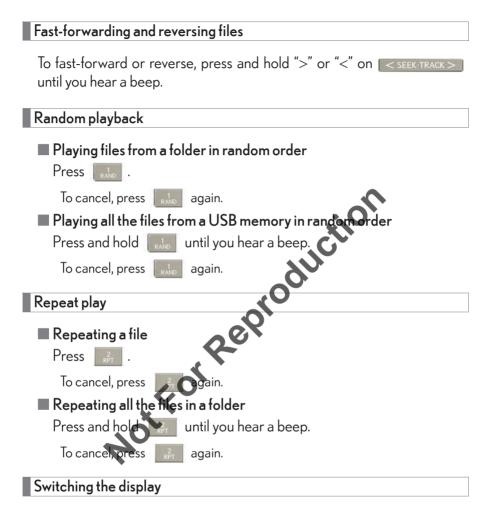

Press TEXT .

Each time the button is pressed, the display changes in the following order: Elapsed time \rightarrow Folder name \rightarrow File name \rightarrow Album title (MP3 only) \rightarrow Track title \rightarrow Artist name

■ USB memory functions

- Depending on the USB memory that is connected to the system, the device itself may not be operable and certain functions may not be available. If the device is inoperable or a function is unavailable due to a malfunction (as opposed to a system specification), disconnecting the device and reconnecting it once again may resolve the problem.
- If the USB memory still does not begin operation after being disconnected and reconnected, format the memory.

Display

→P.364

Error messages

This indicates a problem in the USB memory or its connection. "FRROR":

"NO MUSIC": This indicates a problem in the USB memory or its connection. "NO MUSIC": This indicates that no MP3/What tiles are included in the USB memory.



USB memory

Compatible devices

USB memories that can be used for MP3 and WMA playback

Compatible device formats

The following device formats can be used:

- USB communication formats: USB2.0 FS (12 Mbps)
- File formats: FAT16/32 (Windows)
- Correspondence class: Mass storage class

MP3 and WMA files written in any format other than those listed above may not play correctly, and their file names and folder names may not be displayed correctly.

Items related to standards and limitations are as follows

- Maximum directory hierarchy: 8 levels
- Maximum number of folders in a device: 99 Uncluding the root)
- Maximum number of files in a device: 65025
- Maximum number of files per folder 25
- MP3 and WMA files

MP3 (MPEG Audio LAYER 3) is a standard audio compression format.

Files can be compressed to approximately 1/10 of their original size using MP3 compression.

WMA (Windows Media Audio) is a Microsoft audio compression format.

This format compresses audio data to a size smaller than that of the MP3 format.

There is a limit to the MP3 and WMA file standards that can be used and to the media/formats on which the files are recorded.

- MP3 file compatibility
 - Compatible standards MP3 (MPEG1 AUDIO LAYERII, III, MPEG2 AUDIO LAYERII, III, MPEG2.5)
 - Compatible sampling frequencies MPEG1 AUDIO LAYERII, III: 32, 44.1, 48 (kHz) MPEG2 AUDIO LAYERII, III: 16, 22.05, 24 (kHz) MPEG2.5: 8, 11.025, 12 (kHz)
 - Compatible bit rates (compatible with VBR) MPEG1 AUDIO LAYERII, III: 32-320 (kbps) MPEG2 AUDIO LAYERII, III: 32-160 (kbps) MPEG2.5: 32-160 (kbps)

Aut or • Compatible channel modes: stereo, joint stereo, dual channel and monaural

- WMA file compatibility
 - Compatible standards WMA Ver. 9
 - Compatible sampling frequencies HIGH PROFILE 32, 44.1, 48 (kH
 - Compatible bit rates HIGH PROFILE 32-320 (kbc
- File names

The only files that can be recognized as MP3/WMA and played are those with the extension .mpB or .wma.

ID3 and WMA (ad

ID3 tags can be added to MP3 files, making it possible to record the track title, artist name, etc.

The system is compatible with ID3 Ver. 1.0, 1.1, and Ver. 2.2, 2.3, 2.4 ID3 tags. (The number of characters is based on ID3 Ver. 1.0 and 1.1.)

WMA tags can be added to WMA files, making it possible to record the track title and artist name in the same way as with ID3 tags.

MP3 and WMA playback

- When a device containing MP3 or WMA files is connected, all files in the USB memory device are checked. Once the file check is finished, the first MP3 or WMA file is played. To make the file check finish more quickly, we recommend that you do not include any files other than MP3 or WMA files or create any unnecessary folders.
- When the USB device is connected and the audio source is changed to USB memory mode, the USB device will start playing the first file in the first folder. If the same device is removed and reinserted (and the contents have not been changed), the USB device will resume play from the same point in which it was last used.

Extensions

If the file extensions .mp3 and .wma are used for files other than MP3 and WMA files, they will be skipped (not played).

- Playback
 - To play MP3 files with steady sound quality, we recommend a fixed bit rate of at least 128 kbps and a sampling frequency of 44.1 kHz.
 - There is a wide variety of freeware and other encoding software for MP3 and WMA files on the market, and depending on the status of the encoding and the file format, poor sound quality or noise at the start of playback may result. In some cases, playback may not be possible at all.
 - Microsoft, Windows, and Windows Media are registered trademarks of Microsoft Corporation in the U.S.A. and other countries.

CAUTION

Caution while driving

Do not connect USB memories or operate the controls.

NOTICE

If the armrest cannot be fully closed

Depending on the size and shape of the USB memory that is connected to the system, the armrest may not close fully. In this case, do not forcibly close the armrest as this may damage the USB memory or the terminal, etc.

To prevent damage to USB memories

- Do not leave USB memories in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the player.
- Do not push down on or apply unnecessary pressure to the USB memory while it is connected as this may damage the USB memory or its terminal.
- is connected as this may damage the USB memory or its terminal. Do not insert foreign objects into the port as this may damage the USB memory or its terminal.

3-2. Using the audio system **Bluetooth**[®] **audio system**

The Bluetooth[®] audio system enables you to enjoy music played on a portable digital audio player (portable player) from the vehicle speakers via wireless communication.

This audio system supports Bluetooth[®], a wireless data system capable of playing portable audio music without cables. If your portable player does not support Bluetooth[®], the Bluetooth[®] audio system will not function.

Title	Page
Using the Bluetooth $^{ extsf{R}}$ audio system	R 397
Operating a Bluetooth [®] enabled portable player	P. 400
Setting up a Bluetooth $^{\mathbb{R}}$ enabled portable player	P. 403
Bluetooth [®] audio system setup	P. 407
4O-	

Conditions under which the system will not operate

- \bullet If using a portable player that does not support Bluetooth $^{\circledast}$
- If the portable player is switched off
- If the portable player is not connected
- If the portable player's battery is low
- If the portable player is behind the seat or in the glove box or console box
- If metal is covering or touching the player

When transferring ownership of the vehicle

Be sure to initialize the system to prevent personal data from being improperly accessed. (\rightarrow P. 438)

About Bluetooth[®]

Bluetooth®

Bluetooth is a registered trademark of Bluetooth SIG. Inc.

Compatible models

- hction Bluetooth[®] specifications: Ver. 1.1, or higher (Recommended: Ver. 1.2 or high
- Following profiles:
 - A2DP (Advanced Audio Distribution Profile) Ver. 1.0, or higher (Conformed: Ver. 1.2)
 - AVRCP (Audio/Video Remote Control Profile) Ver. 1.0 or higher (Conformed: Ver. 1.3)

Portable players must correspond to the above specifications in order to be connected to the Bluetooth audio system. However, please note that some functions may be limited depending on the type of portable player.

CAUTION

Caution while driving

Do not connect portable players or operate the controls.


■ Caution regarding interference with electronic devices

- Your audio unit is fitted with Bluetooth[®] antennas. People with implanted pacemakers or cardiac defibrillators should maintain a reasonable distance between themselves and the Bluetooth[®] antennas. The radio waves may affect the operation of such devices.
- Before using Bluetooth[®] devices, users of any electrical medical device other than implanted pacemakers and implanted cardiac defibrilators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the opera-

To prevent damage to portable players in may become high, resulting Do not leave portable players in the vehicle. The temperature inside the vehicle Hor

3-2. Using the audio system Using the Bluetooth[®] audio system

Audio unit

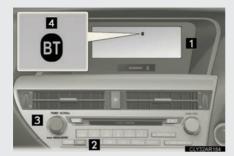

1 Display

A message, name, number, etc. is displayed.

Lower-case characters and special characters cannot be displayed.

- 2 Displays information that is too long to be displayed at one time on the display (press and hold)
- **3** Selects items such as menu and number
 - Drn: Selects an item
- NotForReP Press: Inputs the selected item
 - 4 Bluetooth[®] connection condition

If "BT" is not displayed, the Bluetooth[®] audio system cannot be used.

Using the Bluetooth[®] audio system for the first time

Before using the Bluetooth[®] audio system, it is necessary to register a Bluetooth[®] enabled portable player in the system. Follow the procedure below to register (pair) a portable player:



Refer to the manual that comes with the portable player for the operation of the portable player.

If the portable player has a $\mathsf{Bluetooth}^{\texttt{R}}$ phone, the phone can be registered at the same time.

STEP 7 When "Pair Phone?" is displayed, select "Yes" or "No" using



. (Bluetooth[®] phone \rightarrow P. 418)

First menu	Second menu	Third menu	Operation detail
"Setup"	"BT•A Setup"	"Pair Audio"	Registering a portable audio player
		"Select Audio"	Selecting a portable audio player to be used
		"Change Name"	Changing the registered name of a portable player
		"List Audios"	Listing the registered portable players
		"Set Passkey"	Changing the passkey
		"Delete And	Deleting a registered portable player
	"System Setup"	"Guidance Vol"	Setting voice guidance volume
		Bevice Name"	Displaying the Bluetooth $^{\mathbb{R}}$ device address and name
		"Initialize"	Initializing the system
	4		

Menu list of the Bluetooth® audio system

Operations that cannot be performed while driving

lacksquare Operating the system using




- Registering a portable player to the system
- Changing the passkey

→P. 406

3-2. Using the audio system Operating a Bluetooth[®] enabled portable player



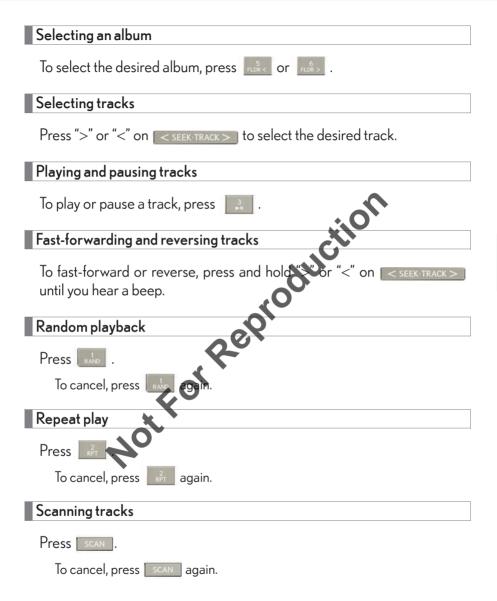

Switching the display

Press TEXT

Each time the button is pressed, the display changes in the following order: Elapsed time \rightarrow Album title \rightarrow Track title \rightarrow Artist name

■ Bluetooth[®] audio system functions

Depending on the portable player that is connected to the system, certain functions Error messages "Memory Error": This indicates a problem in the astern. may not be available.

Display

Error messages

3-2. Using the audio system Setting up a Bluetooth[®] enabled portable player

Registering a portable player in the Bluetooth[®] audio system allows the system to function. The following functions can be used for registered portable players:

Functions and operation procedures

To enter the menu for each function, follow the steps below.



Interior features

Registering a portable player

Select "Pair Audio" using



, and perform the procedure for regis-

tering a portable player. $(\rightarrow P. 398)$

Selecting a portable player to be used




RX270/RX350: If "From Car" is selected, the portable player will be automatically connected whenever the "ENGINE START STOP" switch is in either ACCESSORY or IGNITION ON mode.

RX450h: If "From Car" is selected, the portable player will be automatically connected whenever the "POWER" switch is in either ACCES-SORY or ON mode.



When listing is complete, the system returns to "BT•A Setup".

Interior features

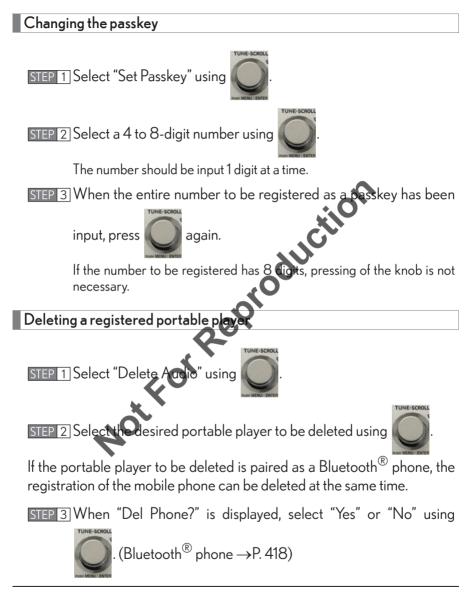


The number of portable players that can be registered


Up to 2 portable players can be registered in the system.

3-2. Using the audio system Bluetooth[®] audio system setup

System setup items and operation procedures To enter the menu of each setting, follow the steps below.

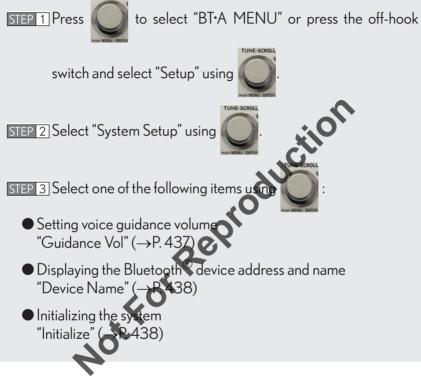

3-2. Using the audio system Optimal use of the audio system

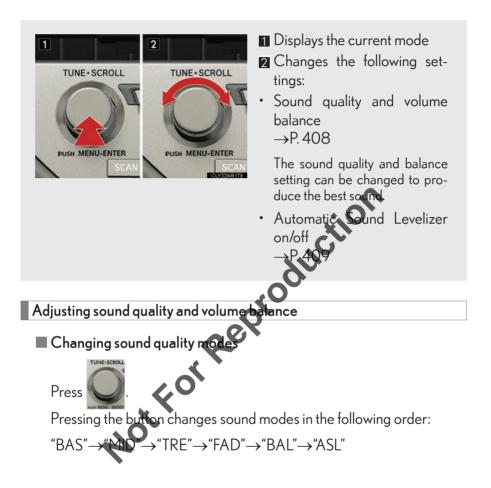

Adjusting sound quality



adjusts the level.

Mode displayed	Sound qual- ity mode	Level	Turn counter- clockwise	Turn clock- wise
"BAS"	Bass*	-5 to 5		
"MID"	Mid-range*	-5 to 5	Low	High
"TRE"	Treble*	-5 to 5	:0	•
"FAD"	Front/rear volume balance	F7 to R7	Shitts to rear	Shifts to front
"BAL"	Left/right volume balance		Shifts to left	Shifts to right

*: The sound quality level is adjusted individually in each audio mode.

Turning the Automatic Sound Levelizer (ASL) on/off




counter-

clockwise turns off the ASL.

Turning

ASL automatically adjusts the volume and tone quality according to the noise level as you drive your vehicle.

This port can be used to connect a portable audio device and listen to it through the vehicle's speakers.

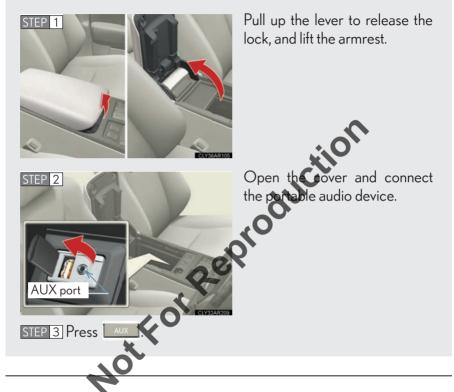

Operating portable audio devices connected to the audio system

The volume can be adjusted using the vehicle's audio controls. All other adjustments must be made on the portable audio device itself.

When using a portable audio device connected to the power outlet

Noise may occur during playback. Use the power source of the portable audio device.

Caution while driving

Do not connect portable audio device or operate the controls.

<u>∧</u> NOTICE

If the armrest cannot be fully closed


Depending on the size and shape of the portable audio device that is connected to the system, the armrest may not close fully. In this case, do not forcibly close the armrest as this may damage the portable audio device or the terminal, etc.

To prevent damage to portable audio device

- Do not leave portable audio device in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the player.
- Do not push down on or apply unnecessary pressure to the portable audio device while it is connected as this marchamage the portable audio device or its terminal.
- Do not insert foreign objects into the port as this may damage the portable audio device or its terminal.

3-2. Using the audio system Using the steering wheel audio switches

Some audio features can be controlled using the switches on the steering wheel.

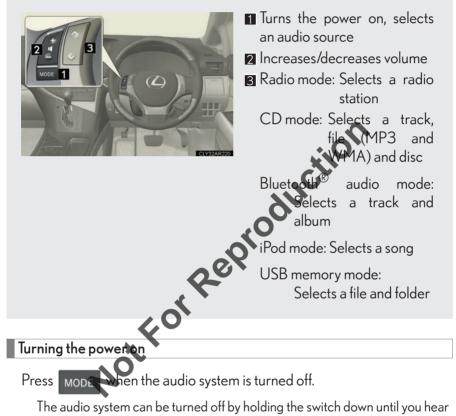

The audio system can be turned off by holding the switch down until you hear a beep.

Changing the audio source

Press MODE when the audio system is turned on. The audio source changes as tollows each time the button is pressed. If no discs are inserted in the player, that mode will be skipped.


```
FM1 \rightarrow FM2 \rightarrow CD player \rightarrow Bluetooth^{(R)} audio \rightarrow AUX \rightarrow
iPod or USB memory \rightarrow AM \rightarrow FM1
```


Adjusting the volume

Press "+" on to increase the volume and "-" to decrease the vol-

ume.

Hold down the button to continue increasing or decreasing the volume.

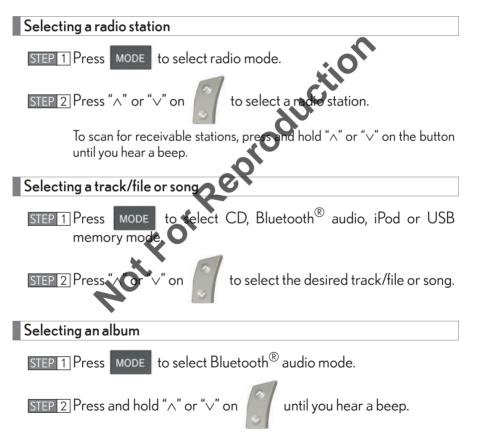

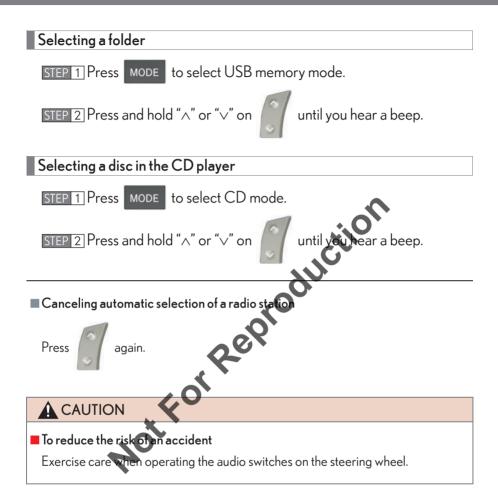

3-2. Using the audio system Hands-free system for mobile phones

The hands-free system is a function that allows you to use your mobile phone without touching it.

This system supports Bluetooth[®] mobile phones. Bluetooth[®] is a wireless data system that allows the mobile phone to wirelessly connect to the hands-free system and make/receive calls.

Hands-free system guick guide STEP 1 Setting a mobile phone. $(\rightarrow P. 422)$ STEP 2 Adding an entry to the phone book. (Up to 20 pames can be stored) (\rightarrow P. 440) STEP 3 Dialing by inputting a name. (\rightarrow P. 427) Citor C stored) (\rightarrow P. 440)

Title	Page
Using the hands-free system Using the hands-free phone system for the first time	P. 422
Making a phone call Making a phone call Dialing by inputting a name Speed dialing Redial Call back Receiving a phone call Answering the phone Refusing the call Transferring a call Using the call history memory Dialing Storing data in the phone book Deleting	pction P. 426
Setting a mobile phone ■Functions and operation procedures	P. 430
Security and system setup Security setting items and operation procedures System setup items and operation procedures	P. 434

Title	Page		
Using the phone book			
Adding a new phone number			
Changing the registered name in the phone book			
■Listing the registered data	P. 440		
Setting speed dials			
Deleting speed dials	20		
	uction		
Conditions under which the system will not operate			
• If using a mobile phone that does not supported			
If the mobile phone is switched off			
If you are outside service range			
 If the mobile phone is not connected 			
 If the mobile phone's better) is low 			
ullet If the mobile phone is behind the seat or in the glo	ove box or console box		
ullet If metal is covering or touching the phone			
When using the hands-free system			
The audio system and voice guidance are muted	when making a call.		
ullet If both parties speak at the same time, it may be d	ifficult to hear.		
ullet If the incoming call volume is overly loud, an echo	may be heard.		
ullet Try to face toward the microphone as much as po	ssible when speaking.		
ullet In the following circumstances, it may be difficult t	to hear the other party:		
When driving on unpaved roads			
When driving at high speedsWhen a window is open			
When the air conditioning is blowing direct	tly on the microphone		
When the air conditioning is set to high			

When transferring ownership of the vehicle

Be sure to initialize the system to prevent personal data from being improperly accessed. (\rightarrow P. 438)

About Bluetooth[®]



Bluetooth is a registered trademark of Bluetooth SIG. Inc.

Compatible models

Compatible with HFP (Hands Free Profile) Ver. 1200 igher (Conformed: Ver. 1.5) and OPP (Object Push Profile) Ver. 1.1.

If your mobile phone does not support bir you cannot enter the Bluetooth® phone. If your mobile phone supports QPP alone, you cannot use the Bluetooth $^{\operatorname{\mathbb{R}}}$ phone.

CAUTION

For Caution while driving

Do not use a mobile hone or connect the Bluetooth[®] phone.

- Caution regarding interference with electronic devices
 - Your audio unit is fitted with Bluetooth[®] antennas. People with implanted pacemakers or cardiac defibrillators should maintain a reasonable distance between themselves and the Bluetooth[®] antennas. The radio waves may affect the operation of such devices.
 - Before using Bluetooth[®] devices, users of any electrical medical device other than implanted pacemakers and implanted cardiac defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.

MOTICE

To prevent damage to mobile phones


Do not leave mobile phones in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the phone.



Interior features

3-2. Using the audio system Using the hands-free system (for mobile phones)

Audio unit

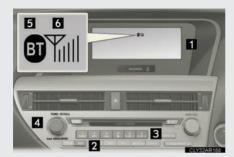

1 Display

A message, name, phone number, etc. is displayed.

Lower-case characters and special characters cannot be displayed.

- **2** Displays information that is too long to be displayed at one time on the display (press and hold
- 3 Selects speed dials
- 4 Selects items such as menu and number
 - Turn: Selects an item


Press: Inputs the selected item

NotforRef 5 Bluetooth[®] connection condition

If "BT" is not displayed, the hands-free phone system cannot be used.

6 Reception level

Steering wheel switches

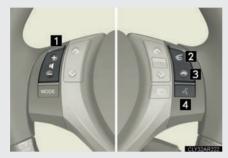

1 Volume

During an incoming call: Adjusts the ring tone volume

During an ongoing call: Adjusts the receiver volume

The voice guidance volume cannot be adjusted using this button.

2 Off-hook switch

Turns the hands-free system on/starts a call

- 3 On-hook switch
- Turns the hands-free system off/ends a call/refuses a call
- 4 Talk switch

Turns the voice command system on (press)/turns the voice command system off (press and hold)





Using the hands-free phone system for the first time

Before using the hands-free phone system, it is necessary to register a mobile phone in the system. The system will enter phone registration mode automatically when starting the system with no mobile phone registered. Follow the procedure below to register (pair) a mobile phone:

STEP 1 Press the off-hook switch or the talk switch, and select "Pair

Phone" using

STEP 2 Select "Record Name" using istered after the beep.

The name to be registered will be repeated at the

STEP 3 Select "Confirm" using

A passkey will be displayed.

STEP 4 Input the passkey into the mobile phone.

Refer to the manual that comes with the mobile phone for the operation of the phone.

, and **s**

name to be reg-

If the mobile phone has a Bluetooth $^{\ensuremath{\mathbb{R}}}$ audio player, the audio player can be registered at the same time.

STEP 5 When "Pair Audio?" is displayed, select "Yes" or "No" using



. (Bluetooth[®] audio player \rightarrow P. 395)

r lend list of the hands-life phone system			
First menu	Second menu	Third menu	Operation detail
"Callback"	-	-	Dialing a number stored in the incoming call history memory
"Redial"	-	-	Dialing a number stored in the outgoing call history memory
"Phonebook"	"Add Entry"	-	Adding a new prione number
	"Change Name"	-	Changing the registered name in the phone book
	"Delete Entry"	.0	Deleting the registered data
	"Del Spd Dial"	2epi	Deleting speed dials
	"List Names"	ort	Listing the registered data
	"Speed Dial"	-	Setting speed dials
	~		

Menu list of the hands-free phone system

First menu	Second menu	Third menu	Operation detail
"Setup"	"Security"	"Set PIN"	Setting a PIN code
		"Phbk Lock"	Locking the phone book
		"Phbk Unlock"	Unlocking the phone book
	"Phone Setup"	"Pair Phone"	Registering a mobile phone
		"Select Phone"	Selecting a mobile phone to be used
		"Change Name"	Changing the registered name of a mosile phone
		"List Phones"	Listing the registered mobile phones
		"Set Passkey"	Changing the passkey
		"Delete Phone"	Deleting a registered mobile phone
	"System Setup"	"Guidance Vol"	Setting voice guidance volume
		"Device Name"	Displaying the Bluetooth $^{\ensuremath{\mathbb{R}}}$ device address and name
		"Initialize"	Initializing the system

Automatic volume adjustment

When vehicle speed reaches 80 km/h (50 mph) or more, the volume automatically increases. The volume returns to the previous volume setting when vehicle speed drops to 70 km/h (43 mph) or less.

Operations that cannot be performed while driving

• Operating the system using


Registering a mobile phone to the system


Changing the passkey

 $\rightarrow P.432$

NotforReproduction

3-2. Using the audio system Making a phone call

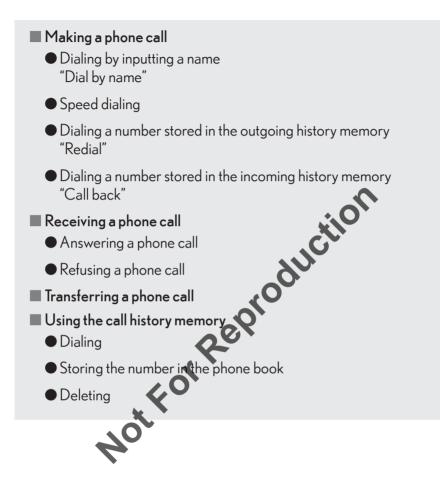

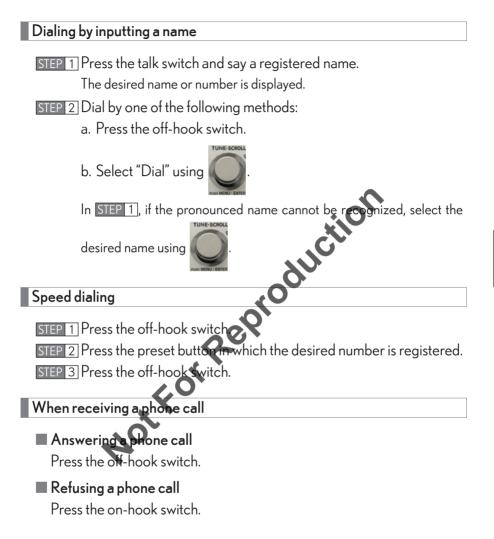

Transferring a phone call

A call can be transferred between the mobile phone and system while dialing, receiving a call, or during a call. Use one of the following methods:

a. Operate the mobile phone.


Refer to the manual that comes with the mobile phone for the operation of the phone.

- b. Press the off-hook switch^{*}.
- *: This operation can be performed only when transferring a call from the mobile phone to the system during a call.

Using the call history memory

Follow the procedure below to use a number stored in the call history memory:

STEP 1 Press the off-hook switch and select "Redial" (when using a number stored in the outgoing call history memory) or "Call back" (when using a number stored in the incoming call history mem-

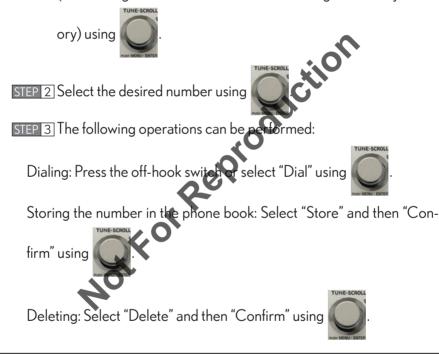

Call history

Up to $5\ \mathrm{numbers}\ \mathrm{can}\ \mathrm{be}\ \mathrm{stored}\ \mathrm{in}\ \mathrm{each}\ \mathrm{of}\ \mathrm{the}\ \mathrm{outgoing}\ \mathrm{and}\ \mathrm{incoming}\ \mathrm{call}\ \mathrm{history}\ \mathrm{memories}.$

When talking on the phone


- Do not talk simultaneously with the other party.
- •Keep the volume of the received voice down. Otherwise, voice echo will increase.


3-2. Using the audio system Setting a mobile phone

Registering a mobile phone in the hands-free phone system allows the system to function. The following functions can be used for registered mobile phones:

Functions and operation procedures

To enter the menu for each function, follow the steps below.

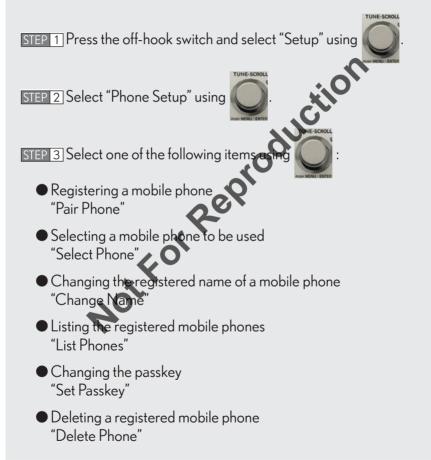

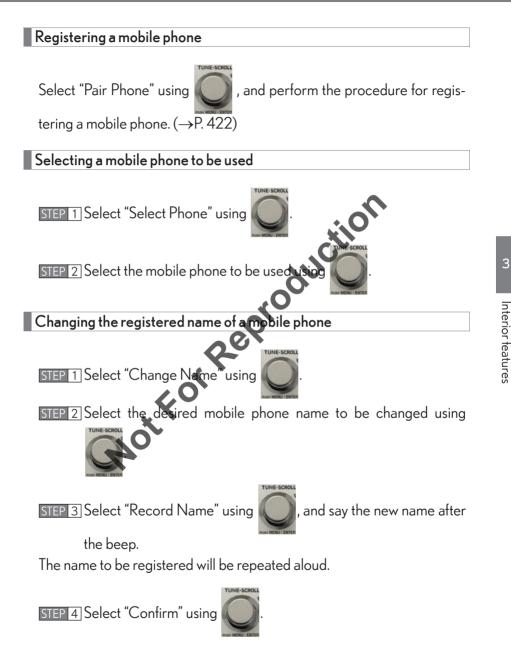

Listing the registered mobile phones

Select "List Phones" using



The list of registered mobile phones

will be read aloud.

When listing is complete, the system returns to "Phone Setup".

Changing the passkey

STEP 1 Select "Set Passkey" using


action STEP 2 Select a 4 to 8-digit number using

The number should be input 1 digit at a time.


to be registered as a passkey has been STEP 3 When the entire number


> input, press again.


If the number to be registered has 8 digits, pressing of the knob is not neces

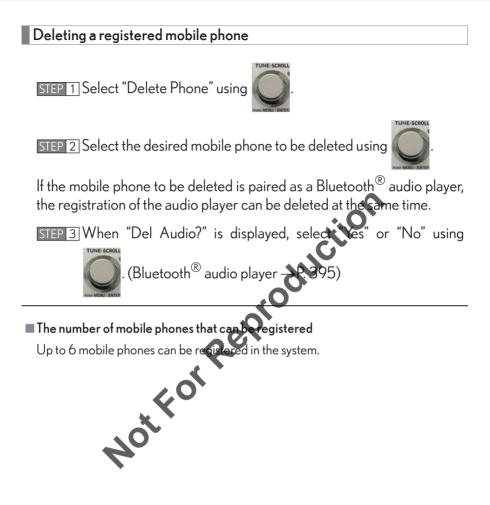



3-2. Using the audio system Security and system setup

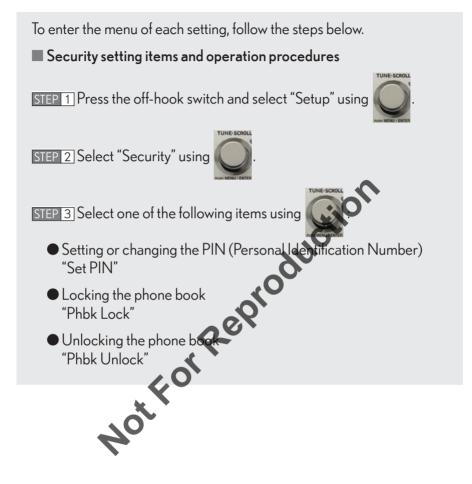

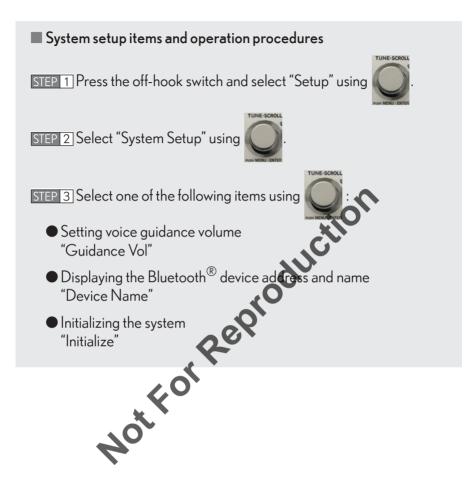

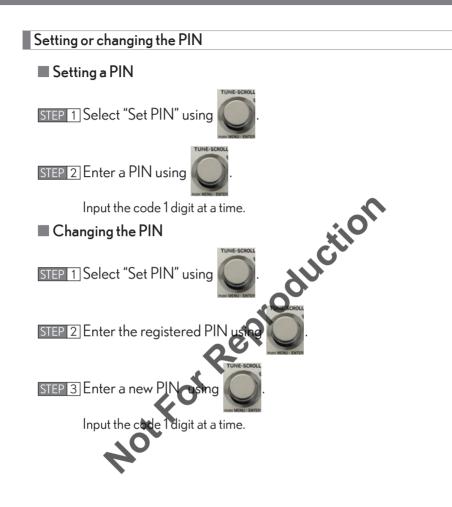

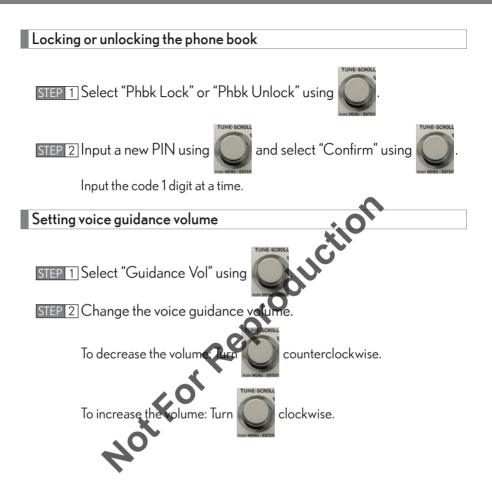

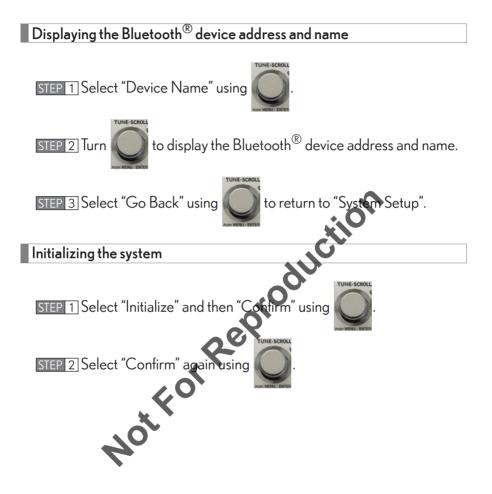

Initialization

• The following data in the system can be initialized:

- Phone book
- Outgoing and incoming call history
- Speed dials
- Registered mobile phone data
- Security code
- Registered Bluetooth[®] enabled portable player data
- Passkeys for the mobile phones
- Passkey for the Bluetooth[®] audio players
- Guidance volume
- Receiver volume
- ction Once the initialization has been completed, the data cannot be restored to its original state. Dialing by inputting a name
 Speed to it

When the phone book is locked

- Speed dialing
- Dialing a number stored in the call history memory
- Using the phone book

To enter the menu of each setting, follow the steps below.

STEP 1 Press the off-hook switch and select "Phonebook" using

on



STEP 2 Select one of the following items using

- Adding a new phone number "Add Entry"
- Changing the registered name in the phone bo "Change Name"
 Listing the registered data "List Names"
 Setting speed dials "Speed Dial"
- "Speed Dial"
- Deleting the registered "Delete Entry
- Deleting speed dials "Del Spa

Adding a new phone number

The following methods can be used to add a new phone number:

Transferring data from the mobile phone

Inputting a phone number using




• Selecting a phone number from the outgoing or incoming call history


Adding procedure


STEP 1 Select "Add Entry" using




STEP 2 Use one of the following methods to input a telephone number: Transferring data from the mobile phone:

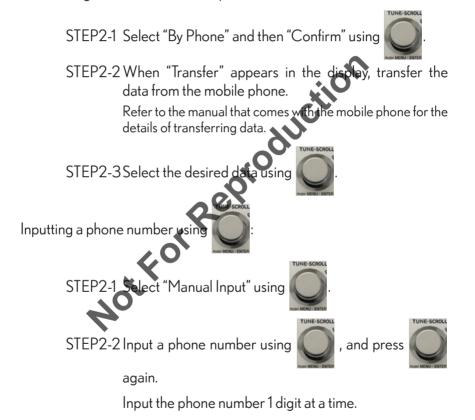


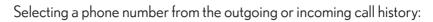


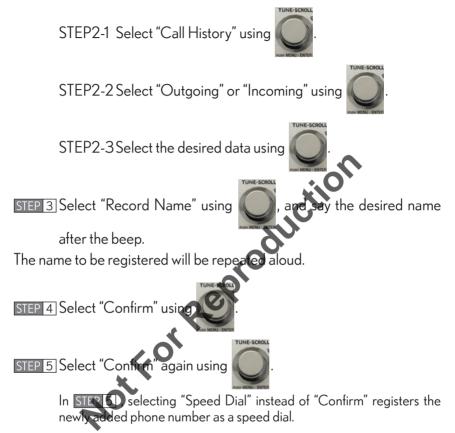

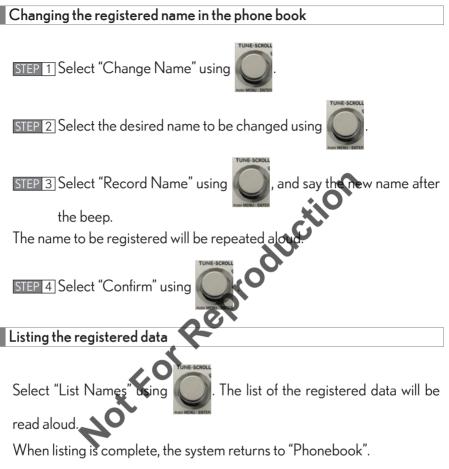

Pressing the off-hook switch while an entry is being read aloud selects the entry, and calls the registered phone number.

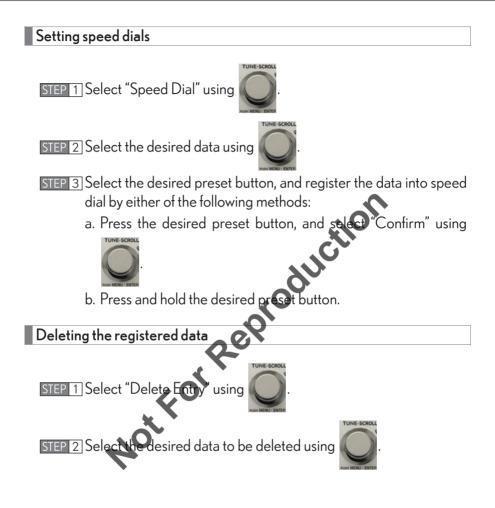

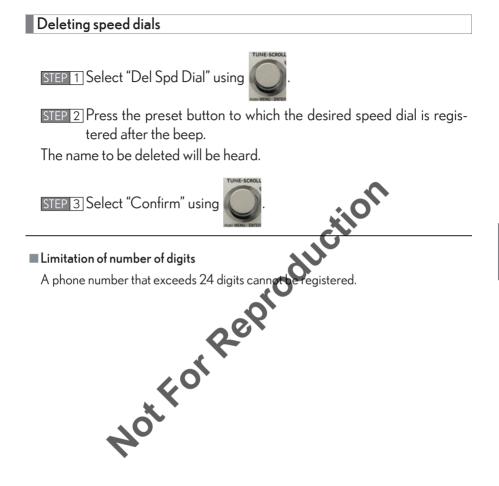

Interior features

3-3. Using the interior lights Interior lights list



3-3. Using the interior lights

Interior lights and personal lights

Interior lights



Illuminated entry system

▶ RX270/RX350

The lights automatically turn on/off according to "ENGINE START STOP" switch mode, the presence of the electronic key, whether the doors are locked/unlocked. and whether the doors are open/closed.

▶ RX450h

The lights automatically turn on/off according to "POWER" switch mode, the presence of the electronic key, whether the doors are locked/unlocked, and whether the doors are open/closed.


To prevent 12-volt battery discharge

When the "ENGINE START STOP" switch (RX270/RX350) or the "POWER" writen the EINGINE START STOP switch (RX2/0/RX350) or the "POWER" switch (RX450h) is turned off, the lights will go off automatically after 20 minutes.
Personal lights
Interior lights
Door courtesy lights
Scuff lights (if equipped)
Footwell lights

Customization

Settings (e.g. the time encoded before the lights turn off) can be changed. (Customizable features \rightarrow P. 695)

3-4. Using the storage features List of storage features

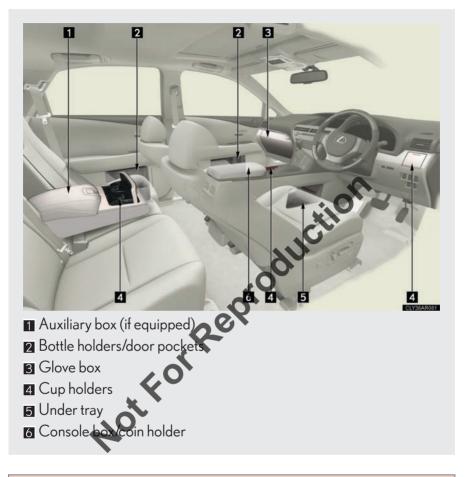

CAUTION

Items that should not be left in the storage spaces

Do not leave glasses, lighters or spray cans in the storage spaces, as this may cause the following when cabin temperature becomes high:

- Glasses may be deformed by heat or cracked if they come into contact with other stored items.
- Lighters or spray cans may explode. If they come into contact with other stored items, the lighter may catch fire or the spray can may release gas, causing a fire hazard.

Glove box

The glove box can be opened by pressing the lock release button and locked and unlocked using the mechanical key.



Bottle holders/door pockets

Bottle holders/door pockets

► Front



The front door pockets can be opened and closed.



Injuries may result in the event of an accident or sudden braking.

Items unsuitable for the bottle holder

Do not place anything other than a bottle in the bottle holders. Other items may be thrown out of the holders in the event of an accident or sudden braking and cause injury.

NOTICE

When stowing a bottle


Put the cap on before stowing the bottle. Do not place open bottles in the bottle holders. The contents may spill.

Cup holders



3-4. Using the storage features

Cup h<u>olders</u>

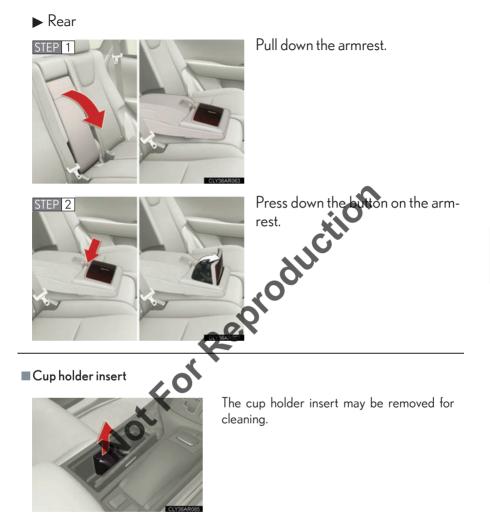

A CAUTION

Items unsuitable for the cup holder

Do not place anything other than cups or beverage cans in the cup holders. Even when the lid is closed, items must not be stored in the cup holders. Other items may be thrown out of the holders in the event of an accident or sudden braking and cause injury. If possible, cover hot drinks to prevent burns.

To prevent burns

Put a lid containers with hot liquids inside.


When not in use

Keep the cup holders closed. Injuries may result in the event of an accident or sudden blaking.

Console box

Console box



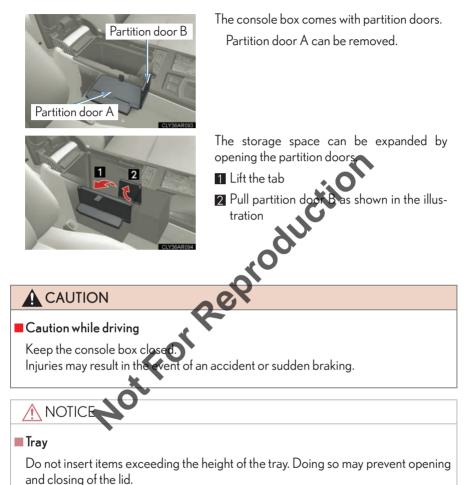

3-4. Using the storage features

Coin holder an<u>d auxiliary box</u>

Coin holder



ACAUTION

Caution while driving

Do not leave open while driving.

Items stored in the auxiliary box may fall out and cause death or serious injury in case of an accident or sudden stop.

Under tray




CAUTION

Items unsuitable for the under tray


Observe the following precautions when putting items in the under tray. Failure to do so may cause items to be thrown out of the tray in the event of sudden braking or steering. In these cases, the items may interfere with pedal operation or cause driver distraction, resulting in an accident.

- Do not store items in the tray that can easily shift or roll out.
- Do not stack items in the tray higher than the tray's edge.
- Do not put items in the tray that may protrude over the tray's edge.

3-5. Other interior features **Sun visors**

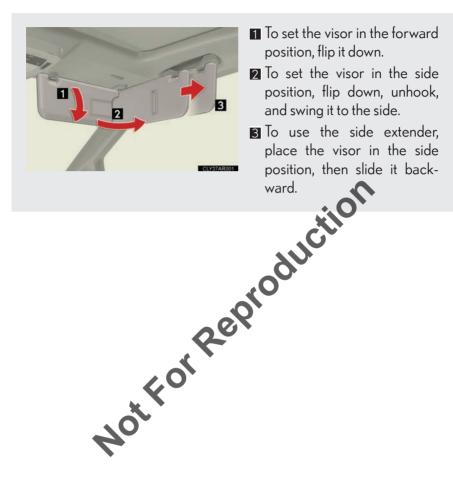

3-5. Other interior features Vanity mirrors

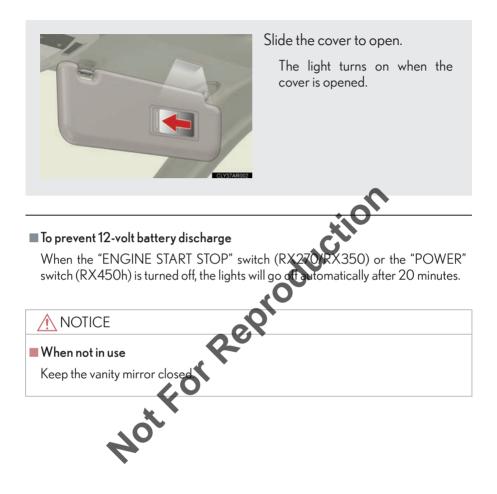

The clock can be adjusted by pressing the buttons.

▶ Without a navigation system



Refer to the "Navigation System Owner's Manual". The clock is displayed when RX270/RX350h

The clock is displayed when

▶ RX270/RX350h

The clock is displayed when the "ENGINE START STOP" switch is in ACCES-SORY or IGNITION ON mode.

▶ RX450h

when the "POWER" switch is in ACCESSORY or ON The clock is displayed mode.


When the 12-volt battery is disconnected

The time display will automatically be set to 1:00.

3-5. Other interior features Outside temperature display*

The temperature display shows temperatures within the range of -40°C (-40°F) and 50°C (122°F).

► Without a navigation system

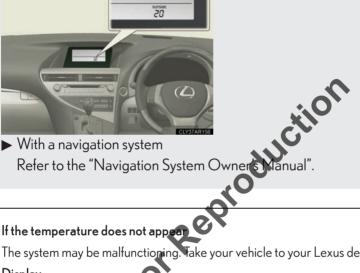

With a navigation system

If the temperature does not appear

The system may be malfunctioning. Take your vehicle to your Lexus dealer.

Display

In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change:

- When the **vehicle** is stopped, or moving at low speeds (less than 25 km/h [16 mph])
- When the outside temperature has changed suddenly (at the entrance/exit of a garage, tunnel, etc.)

3-5. Other interior features Multi-display light control*

The brightness of the multi-display can be adjusted to four levels.



Press and release the "DISP" switch until the brightness of the display is adjusted to the desired level.


Instrument panel linked brightness control

Juction When the headlight switch is turned on, the brightness of the multi-display will be reduced in accordance with the brightness of the instrument panel. (->P. 227)



The power outlets can be used for $12\ V$ accessories that run on less than $10\ A.$

▶ Inside the console

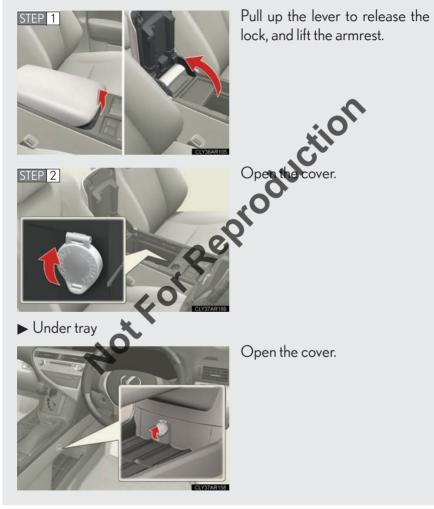



3-5. Other interior features Heated steering wheel*

The heated steering wheel heats the leather portions on the left and right of the steering wheel.



Turns the heater on/off

The indicator light comes on when the heater is operating.

The "POWER" switch is in ON mode

To prevent 12-volt battery discharge

The heated steering whee will automatically turn off after about 30 minutes.

If the indicator light flashes

Press the button to turn the heated steering wheel off and then press the button again. If the indicator light still flashes, a malfunction may be occurring. Turn the heated steering wheel off and have the vehicle inspected by your Lexus dealer.

CAUTION Burns Care should be taken to prevent injury if anyone in the following categories comes in contact with the steering wheel when the heated steering wheel is on: • Babies, small children, the elderly, the sick and the physically challenged Persons with sensitive skin woith of the second sec Persons who are fatigued • Persons who have taken alcohol or drugs that induce sleep (sleeping drugs, cold remedies, etc.)


3-5. Other interior features Seat heaters and ventilators^{*}

The seat heaters and ventilators heat the seats and maintain good airflow by blowing air from the seats.

Seat heaters



Seat heaters/ventilators

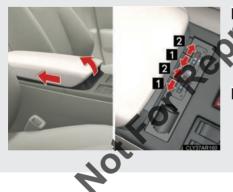

1 Turns the seat heater on

The indicator light comes on. The higher the number is, the warmer the seat becomes.

ction

The indicator light comes on. The higher the number is, the warmer the seat becomes.

2 Blows air from the seat

The indicator light comes on. The higher the number is, the stronger the airflow becomes.

Operating condition

▶ RX270/RX350


The "ENGINE START STOP" switch is in IGNITION ON mode.

▶ RX450h

The "POWER" switch is in ON mode.

When not in use


Set the knob at "O". The indicator light turns off.

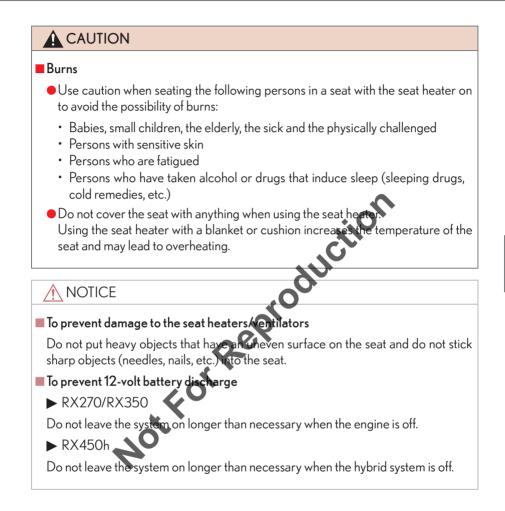

3-5. Other interior features Armrest



3-5. Other interior features **Coat hooks**

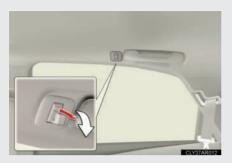

To use the coat hook, push it in.


CAUTION

Items that must not be hung on the hook

Auction Do not hang a coat hanger or other hard or sharp object on the hook. If the SRS Do not hang a coat hanger or other hard or sharp object on the hook. If the SRS curtain shield airbags deploy, these items may become projectiles that cause death or serious injury.


3-5. Other interior features Assist grips

An assist grip installed on the ceiling can be used to support your body while sitting on the seat.

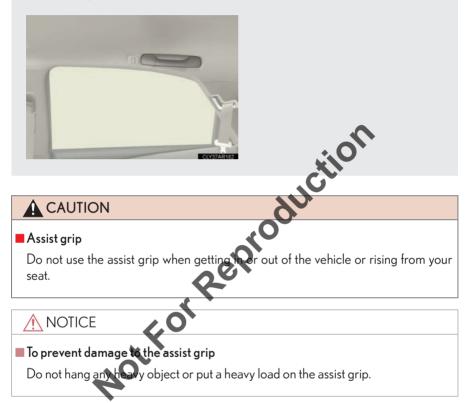

3-5. Other interior features **Floor mat**

Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

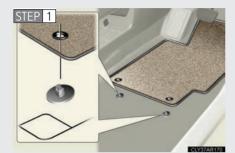

Insert the retaining hooks (clips) into the floor mat eyelets.



Turn the upper knob of each retaining hook (clip) to secure the foor mats in place.

Nways align the Δ marks.

The shape of the retaining hooks (clips) may differ from that shown in the illustration.

Ret

Observe the following precautions.

Failure to do so may cause the driver's floor mat to slip, possibly interfering with the pedals while driving. An unexpectedly high speed may result or it may become difficult to stop the vehicle, leading to a serious accident.

When installing the driver's floor mat

- Do not use floor mats designed for other models or different model year vehicles, even if they are Lexus Genuine floor mats.
- Only use floor mats designed for the driver's seat.
- Always install the floor mat securely using the retaining hooks (clips) provided.
- Do not use two or more floor mats on top of each other.
- Do not place the floor mat bottom-side up or upside-down.

Before driving

- Check that the floor mat is securely fixed in the correct place with all the provided retaining hooks (clips). Be especially careful to perform this check after cleaning the floor.
- RX270/RX350: With the engine stopped and the shift lever in P, fully depress each pedal to the floor to make sure it does not interfere with the floor mat.


RX450h: With the hybrid system stopped and the shift lever in P, fully depress each pedal to the floor to make sure it does not interfere with the floor mat.

3-5. Other interior features Luggage compartment features

Cargo hooks Pull the hook to use. The cargo hooks are provided for securing loose items. ion Auxiliary boxes Deck side boxes Pull the strap upwards when lifting the cover up. Ret


Interior features



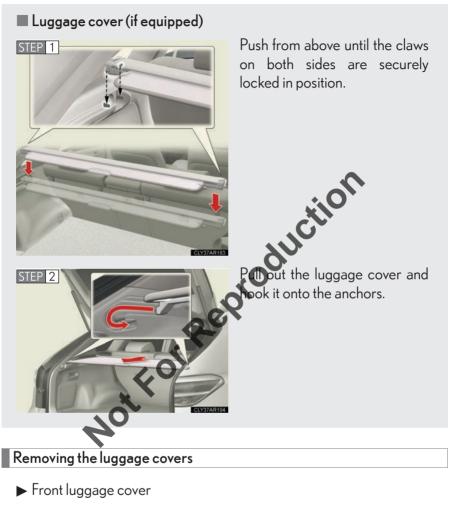



Press the buttons to remove the luggage cover.

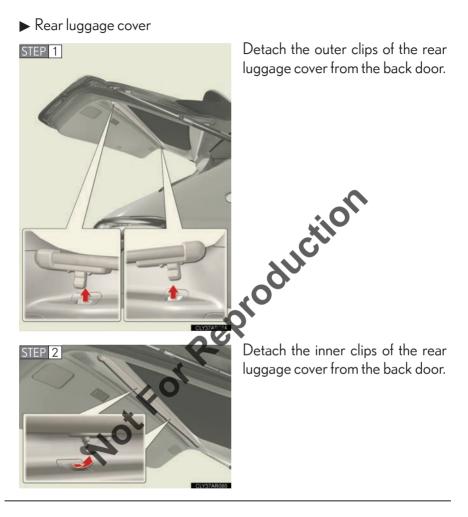

■ Installing the rear luggage cover

- Ensure that the luggage cover is in the proper installation position. Push the clips of the rear luggage cover into the indentions on the back door until they are locked into place.
- Check that the rear luggage cover is securely attached.

CAUTION

When the cargo hooks are not in use

To avoid injury, always return the cargo hooks to their stowed positions.



Interior features

NotforReproduction

Maintenance and care

4

4-1. Maintenance and care

Cleaning and protecting	
the vehicle exterior	482
Cleaning and protecting	
the vehicle interior	485

4-2. Maintenance

Maintenance	
requirements	488

4-3. Do-it-yourself

ning and protecting	maintenance	
vehicle exterior 482	Do-it-yourself service	
ning and protecting	precautions	490
vehicle interior 485	Hood	494
	Positioning a floor jack	495
ntenance	Engine compartment	
ntenance	12-volt battery	. 519
uirements 488	lires	526
	(irs inflation pressure	
	Wheels	
0	Air conditioning filter	
001	Electronic key battery	536
oth	Checking and replacing fuses (RX270/RX350)	
10tFO'	Checking and replacing fuses (RX450h)	550
40	Light bulbs	

Perform the following to protect the vehicle and maintain it in prime condition:

- Working from top to bottom, liberally apply water to the vehicle body, wheel wells and underside of the vehicle to remove any dirt and dust.
- Wash the vehicle body using a sponge or soft cloth, such as a chamois

• For hard-to-remove marks, use car wash soap and rinse thoroughly with water.

• Wipe away any water.

• Wax the vehicle when the waterproof coating deteriorates.

If water does not bead on a clean surfect apply wax when the vehicle body is cool.

Automatic car washes

- Before washing the vehicle.
 - Fold the mirrors
 - Turn off the power back door system (if equipped).
- Brushes used in automatic car washes may scratch the vehicle surface and harm your vehicle's paint.

High pressure car washes

- Do not allow the nozzles of the car wash to come within close proximity of the windows.
- Before using the car wash, check that the fuel filler door on your vehicle is closed properly.

Aluminum wheels

- Remove any dirt immediately by using a neutral detergent. Do not use hard brushes or abrasive cleaners. Do not use strong or harsh chemical cleaners. Use the same mild detergent and wax as used on the paint.
- Do not use detergent on the wheels when they are hot, for example after driving for long distance in the hot weather.
- Wash detergent from the wheels immediately after use.

Bumpers

Do not scrub with abrasive cleaners.

When cleaning the windshield



Set the wine switch to off.

If the wiper switch is in **AUTO**, the wipers may operate unexpectedly in the following structions, and may result in hands being caught or other serious injuries and cause damage to the wiper blades.

• When the upper pert of the windshield where the raindrop sensor is located is touched by hand

• When a wet rag or similar is held close to the raindrop sensor

- If something bumps against the windshield
- If you directly touch the raindrop sensor body or if something bumps into the raindrop sensor
- Precautions regarding the exhaust pipe

Exhaust gasses cause the exhaust pipe to become quite hot.

When washing the vehicle, be careful not to touch the pipe until it has cooled sufficiently, as touching a hot exhaust pipe can cause burns.

NOTICE

To prevent paint deterioration and corrosion on the body and components (aluminum wheels etc.)

• Wash the vehicle immediately in the following cases:

- · After driving near the sea coast
- · After driving on salted roads
- · If you see coal tar or tree sap on the paint surface
- · If you see dead insects, insect droppings or bird droppings on the paint
- After driving in an area contaminated with soot, oily smoke, mine dust, iron powder or chemical substances
- If the vehicle becomes heavily soiled in dust or mud 🔊
- If liquids such as benzene and gasoline are spilled on the paint surface
- If the paint is chipped or scratched, have it repaired immediately.
- To prevent the wheels from corroding, remove any dirt and store in a place with low humidity when storing the wheels.

Cleaning the exterior lights

- Wash carefully. Do not use organic substances or scrub with a hard brush. This may damage the surfaces of the rights.
- Do not apply wax on the surfaces of the lights. Wax may cause damage to the lenses.

To prevent damage to the windshield wiper arms

When lifting the wiper arms away from the windshield, pull the driver side wiper arm upward first, and repeat for the passenger side. When returning the wipers to their original position, do so from the passenger side first.

When using an automatic car wash

Set the wiper switch to the off position.

If the wiper switch is in **AUTO**, the wipers may operate and the wiper blades may be damaged.

The following procedures will help protect your vehicle's interior and keep it in top condition:

Protecting the vehicle interior

Remove dirt and dust using a vacuum cleaner. Wipe dirty surfaces with a cloth dampened with lukewarm water.

Cleaning the leather areas

- Remove dirt and dust using a vacuum cleaner.
- Wipe any excess dirt and dust with a soft cloth dampened with diluted detergent.

Use a diluted water solution of approximately 5% neutral wool detergent.

- Wring out any excess water from the oth and thoroughly wipe off all remaining traces of detergent
- Wipe the surface with a dry soft cloth to remove any remaining moisture. Allow the leather to dry in a shaded and ventilated area.

Cleaning the synthetic leather areas

- Remove loose dirt using a vacuum cleaner.
- Apply a mild soap solution to the synthetic leather using a sponge or soft cloth
- Allow the solution to soak in for a few minutes. Remove the dirt and wipe off the solution with a clean, damp cloth.

Caring for leather areas

Lexus recommends cleaning the interior of the vehicle at least twice a year to maintain the quality of the vehicle's interior.

Shampooing the carpets

There are several commercial foaming-type cleaners available. Use a sponge or brush to apply the foam. Rub in overlapping circles. Do not apply water. Excellent results are obtained by keeping the carpet as dry as possible.

Seat belts

Clean with mild soap and lukewarm water using a cloth or sponge Also check the ductic belts periodically for excessive wear, fraying or cuts.

CAUTION

Water in the vehicle

• RX270/RX350: Do not splash or spill moved in the vehicle.

Doing so may cause electrical components etc. to malfunction or catch fire.

•RX450h: Do not splash or spin travid in the vehicle, such as on the floor, in the hybrid battery (traction battery) air vents or in the luggage compartment. Doing so may cause the wrid battery, electrical components, etc. to malfunction or catch fire.

• Do not get any of the SRS components or wiring in the vehicle interior wet. $(\rightarrow P. 148)$

An electrical malfunction may cause the airbags to deploy or not function properly, resulting in death or severe injury.

Cleaning the interior (especially instrument panel)

Do not use polish wax or polish cleaner. The instrument panel may reflect off the windshield, obstructing the driver's view and leading to an accident, resulting in death or serious injury.

🕂 NOTICE

Cleaning detergents

- Do not use the following types of detergent, as they may discolor the vehicle interior or cause streaks or damage to painted surfaces:
 - Non-seat portions: Organic substances such as benzene or gasoline, alkaline or acidic solutions, dye, or bleach
 - · Seats: Acidic solutions, such as thinner, benzene, or alcohol
- Do not use polish wax or polish cleaner. The instrument panel's or other interior part's painted surface may be damaged.

Preventing damage to leather surfaces

Observe the following precautions to avoid damage to and deterioration of leather surfaces:

- Remove any dust or dirt from leather surfaces immediately.
- Do not expose the vehicle to direct sunlight or extended periods of time. Park the vehicle in the shade, especially during summer.
- Do not place items made of vinyl, plastic, or that contain wax on the upholstery, as they may stick to the leather surface if the vehicle interior heats up significantly.

Water on the floor

Do not wash the vehicle floor with water.

Vehicle systems such as the audio system may be damaged if water comes into contact with electrical components under the floor of vehicle. Water may also cause the body to rust.

Cleaning the inside of the rear window

- Do not use glass cleaner to clean the rear window, as this may cause damage to the rear window defogger heater wires or antenna. Use a cloth dampened with lukewarm water to gently wipe the window clean. Wipe the window in strokes running parallel to the heater wires or antenna.
- Be careful not to scratch or damage the heater wires or antenna.

To ensure safe and economical driving, day-to-day care and regular maintenance are essential. Lexus recommends performing the following maintenance:

Scheduled maintenance

Scheduled maintenance should be performed at specified intervals according to the maintenance schedule.

For full details of your maintenance schedule, read the "Warranty and Service Booklet".

Do-it-yourself maintenance

What about do-it-yourself maintenance?



Many maintenance items are easy to do yourself if you have a little mechanical ability and a few basic automotive tools.

Note, however, that some maintenance tasks require special tools and skills. These are best performed by qualified technicians. Even if you are an experienced do-it-yourself mechanic, we recommend that repairs and maintenance be conducted by your Lexus dealer who will keep a record of maintenance on your Lexus. This record could be helpful should you ever require Warranty Service.

Where to go for service?

It makes good sense to take your vehicle to your local Lexus dealer for service.

Lexus technicians are well-trained specialists receiving the latest service information through technical bulletins, service tips, and in-dealership training programs. They learn to work on Lexus before they work on your vehicle, rather than while they are working on it. Doesn't that seem like the best way?

Your Lexus dealer has invested a lot of money in special Lexus tools and service equipment. It helps them to do the job better and at less cost.

Your Lexus dealer's service department will perform all of the scheduled maintenance on your vehicle - reliably and economically.

Does your vehicle need repairs?

Be on the alert for changes in performance and sounds, and visual tip-offs that indicate service is needed. Some important clues are:

- Engine missing, stumbling or pinging
- Appreciable loss of power
- Strange engine noises
- A fluid leak under the vehicle (However, water dripping from the air conditioning system after use is normal.)
- Change in exhaust sound (This may indicate a dangerous carbon monoxide leak. Drive with the windows open and have the exhaust system checked immediately.)
- Flat-looking tires, excessive tire squeal when cornering, preven tire wear
- Vehicle pulls to one side when driving straight one level road
- Strange noises related to suspension movement
- Loss of brake effectiveness, spongy feeling brake pedal, pedal almost touches the floor, vehicle pulls to one side whet b aking
- Engine coolant temperature continually higher than normal

If you notice any of these clues, take your vehicle to your Lexus dealer as soon as possible. Your vehicle may need adjustment or repair.

CAUTION

If your vehicle is not properly maintained

Improper maintenance could result in serious damage to the vehicle and possible serious injury or death.

Handling of the 12-volt battery

12-volt battery posts, terminals and related accessories contain lead and lead compounds which are known to cause brain damage. Wash your hands after handling. (\rightarrow P. 514, 519)

If you perform maintenance by yourself, be sure to follow the correct procedures as given in these sections.

ltems	Parts and tools
12-volt battery condition (→P. 514, 519)	 Warm water (RX270/RX350) Baking soda (RX270/RX350) Grease Conventional wrench (for terminal clamp bolts) Distilled water (RX270/RX350)
Engine coolant level (RX270/RX350) (→P. 509 2	 "Toyota Super Long Life Coolant" or a similar high quality ethylene glycor based non-silicate, non- antine, non-nitrite and non-borate coolant with long-life hybrid organic acid technology. "Toyota Super Long Life Coolant" is pre- mixed with 50% coolant and 50% deionized water. Funnel (used only for adding cool- ant)
Engine/power control unit coolant level (RX450h) (→P. 511)	 "Toyota Super Long Life Coolant" or a similar high quality ethylene glycol-based non-silicate, non- amine, non-nitrite and non-borate coolant with long-life hybrid organic acid technology. "Toyota Super Long Life Coolant" is pre- mixed with 50% coolant and 50% deionized water. Funnel (used only for adding cool- ant)

ltems	Parts and tools	
Engine oil level (→P. 503)	 "Toyota Genuine Motor Oil" or equivalent Rag or paper towel Funnel (used only for adding engine oil) 	
Fuses (→P. 538, 550)	Fuse with same amperage rating as original	
Light bulbs (→P. 567)	 Bulb with same number and wattage rating as original Phillips-head-screwdriver Flathead screwdriver Wrench 	
Radiator and condenser $(\rightarrow P. 51)$		
Tire inflation pressure (-P. 529)	Tire pressure gaugeCompressed air source	
Washer fluid $(\rightarrow P. 517)$	 Water or washer fluid containing antifreeze (for winter use) Funnel (used only for adding water or washer fluid) 	

The engine compartment contains many mechanisms and fluids that may move suddenly, become hot, or become electrically energized. To avoid death or serious injury, observe the following precautions:

When working on the engine compartment

- RX450h: Make sure that the indicator on the "POWER" switch and the "READY" indicator are both off.
- Keep hands, clothing and tools away from the moving fans and engine drive belt.
- RX270/RX350: Be careful not to touch the engine, radiator exhaust manifold, etc. right after driving as they may be hot. Oil and other fluids may also be hot.
- RX450h: Be careful not to touch the engine, power control unit, radiator, exhaust manifold, etc. right after driving as they may be hot. Oil and other fluids may also be hot.
- Do not leave anything that may burn easily, such as paper and rags, in the engine compartment.
- RX270/RX350: Do not smoke, cause sparks or expose an open flame to fuel or the 12-volt battery. Fuel and 12-volt battery fumes are flammable.
- RX450h: Do not smoke, cause sparks or expose an open flame to fuel. Fuel fumes are flammable.
- RX270/RX350: Be extremely cautious when working on the 12-volt battery. It contains poisonous and corrosive sulfuric acid.
- Take care because brake fluid can harm your hands or eyes and damage painted surfaces.

If fluid gets on your hands or in your eyes, flush the affected area with clean water immediately.

If you still experience discomfort, consult a doctor.

CAUTION

When working near the electric cooling fan or radiator grille

► RX270/RX350

Be sure the "ENGINE START STOP" switch is off.

With the "ENGINE START STOP" switch in IGNITION ON mode, the electric cooling fan may automatically start to run if the air conditioning is on and/or the coolant temperature is high. $(\rightarrow P. 514)$

▶ RX450h

Be sure the "POWER" switch is off.

With the "POWER" switch in ON mode, the electric cooling fan may automatically start to run if the air conditioning is on and/or the coolanttemperature is high. $(\rightarrow P.514)$

Safety glasses

Wear safety glasses to prevent flying or falling material, fluid spray, etc. from getting Repr in your eyes.

NOTICE

If you remove the air cleaner liter

Driving with the air cleaner filter removed may cause excessive engine wear due to dirt in the air. Also, a backfire could cause a fire in the engine compartment.

If the fluid level is low or high

It is normal for the brake fluid level to go down slightly as the brake pads wear or when the fluid level in the accumulator is high.

If the reservoir needs frequent refilling, it may indicate a serious problem.

4-3. Do-it-yourself maintenance **Hood**

Release the lock from the inside of the vehicle to open the hood.




4-3. Do-it-yourself maintenance Positioning a floor jack

When raising your vehicle with a floor jack, position the jack correctly. Improper placement may damage your vehicle or cause injury.

Front




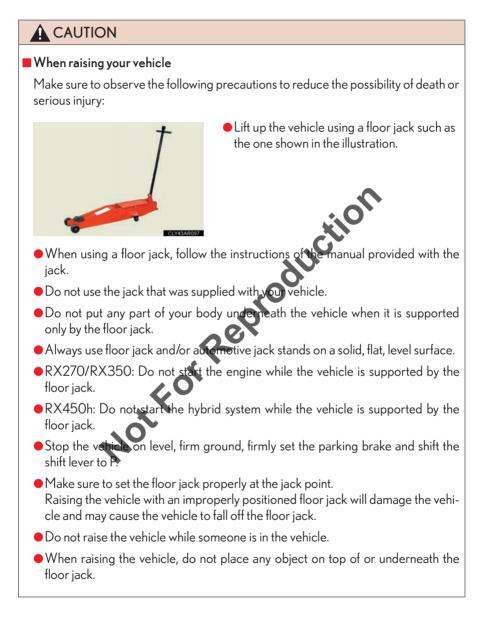

4-3. Do-it-yourself maintenance Engine compartment






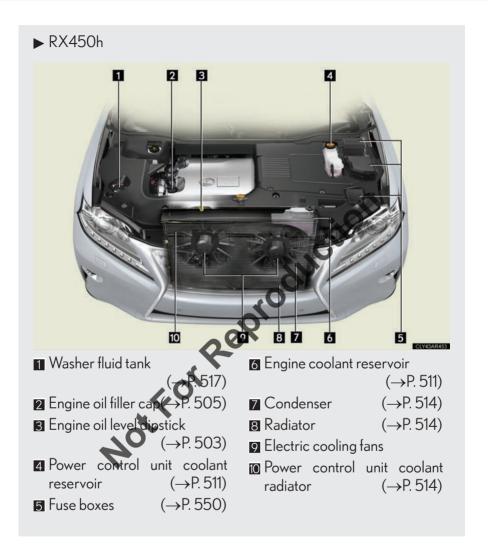


Engine compartment cover

- Removing the engine compartment covers (RX270/RX350)
- ► Outside

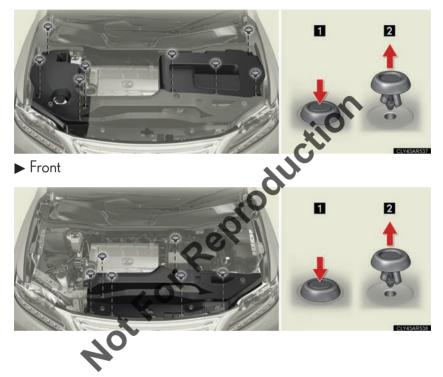

Removing the engine compartment covers (RX450h)

► Outside

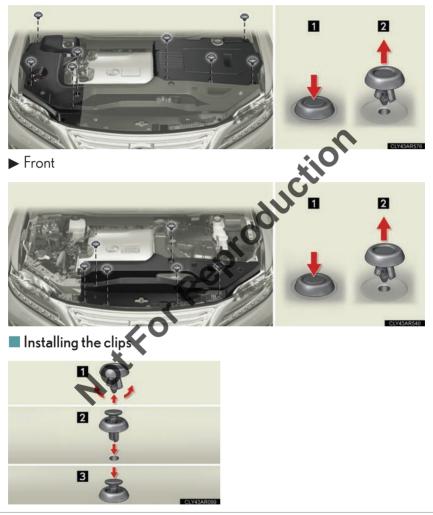

NOTICE

After installing an engine compartment cover

Make sure that the cover is securely installed in its original position.

12-volt battery cover (RX270/RX350)



Removing the 12-volt battery cover.

When installing the 12-volt battery cover

When installing the 12-volt battery cover Securely install the cover over the 12-volt battery. Failure to do so may cause water to enter the engine compartment when it rans or the vehicle is washed, resulting in a malfunction.

Engine oil

With the engine at operating temperature and turned off, check the oil level on the dipstick.

Checking the engine oil


STEP 1 Park the vehicle on level ground. After warming up the engine and turning it off (RX270/RX350) or warming up the engine and turning off the hybrid system (RX450h), wait more than 5 minutes for the oil to drain back into the bottom of the engine.

▶ RX270




Holding a requinder the end, pull the dipstick out.




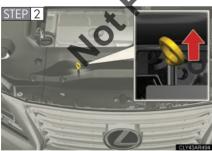

Holding a rag under the end, pull the dipstick out.



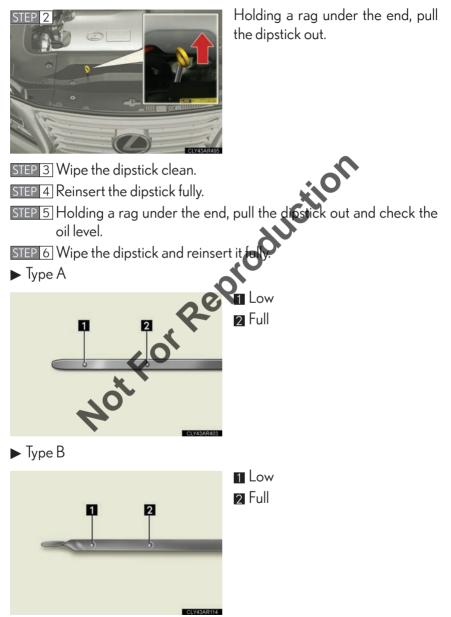

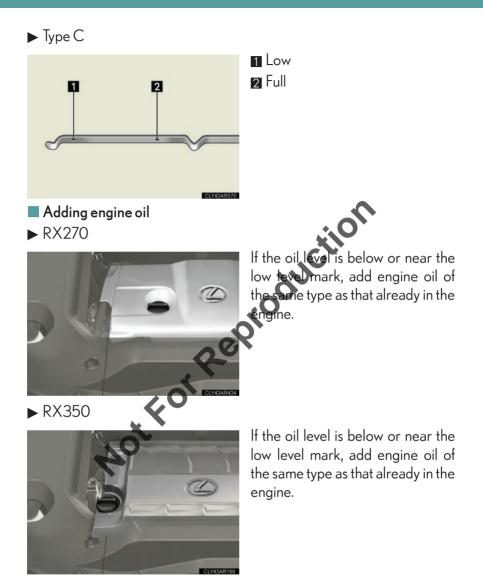

▶ RX450h



If the oil level is below or near the low level mark, add engine oil of the same type as that already in the engine.

Make sure to check the oil type and prepare the item needed before adding oil.

Engine oil selection	→P.679
Oil quantity (Low \rightarrow Full)	1.5 L (1.6 qt., 1.3 lmo.qt.)
ltems	Clean furnel

STEP 1 Remove the oil filler cap by turning it counterclockwise. STEP 2 Add engine of slowly, checking the dipstick.

STEP 3 Install the of filler cap by turning it clockwise.

Engine oil consumption

- The amount of engine oil consumed depends on the oil viscosity, the guality of the oil and the way the vehicle is driven.
- More oil is consumed under driving conditions such as high speeds and frequent acceleration and deceleration.
- A new engine consumes more oil.
- When judging the amount of oil consumption, keep in mind that the oil may have become diluted, making it difficult to judge the true level accurately.
- Oil consumption: Max. 1.0 L per 1000 km (1.1 gt./600 miles) 0.9 lmp. gt./600 miles)
- If your vehicle consumes more than 1.0 L (1.1 qt., 0.9 mo at.) every 1000 km produ (600 miles), contact your Lexus dealer.

A CAUTION

Used engine oil

- Used engine oil contains potentially harmful contaminants which may cause skin disorders such as inflammation or skin cancer, so care should be taken to avoid prolonged and repeated contact. To remove used engine oil from your skin, wash thoroughly with soap and water.
- Dispose of used of and filters only in a safe and acceptable manner. Do not dispose of used al and filters in household trash, in sewers or onto the ground. Call your Lexus dealer, service station or auto parts store for information concerning recycling or disposal.

Do not leave used engine oil within the reach of children.

NOTICE

To prevent serious engine damage

Check the oil level on a regular basis.

- When replacing the engine oil
 - Be careful not to spill engine oil on the vehicle components.
 - Avoid overfilling, or the engine could be damaged.
 - Check the oil level on the dipstick every time you refill the vehicle.
 - Be sure the engine oil filler cap is properly tightened.

vehicle.

Engine coolant (RX270/RX350)

The coolant level is satisfactory if it is between the "FULL" and "LOW" lines on the reservoir when the engine is cold.



Coolant selection

Only use "Toyota Super Long Life Coolant" or a similar high quality ethylene glycol based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology.

"Toyota Super Long Life Coolant" is a mixture of 50% coolant and 50% deionized water. (Minimum temperature: -35°C [-31°F])

For more details about coolant, contact your Lexus dealer.

If the coolant level drops within a short time after replenishing

Visually check the radiator, hoses, radiator cap, drain cock and water pump. If you cannot find a leak, have your Lexus dealer test the cap and check for leaks in the cooling systems.

CAUTION

When the engine is hot

Do not remove the radiator cap.

The cooling system may be under pressure and may spray hot coolant if the cap is removed, causing serious injuries, such as burns.

NOTICE

When adding engine coolant

Coolant is neither plain water nor straight antifreeze. Therefore t mixture of water and antifreeze must be used to provide proper lubrication, corrosion protection and cooling. Be sure to read the antifreeze or coolant label.

If you spill coolant




Coolant (RX450h)

The coolant level is satisfactory if it is between the "FULL" and "LOW" lines on the reservoir when the engine and hybrid system are cold.

► Engine coolant reservoir



Power control unit coolant reservoir

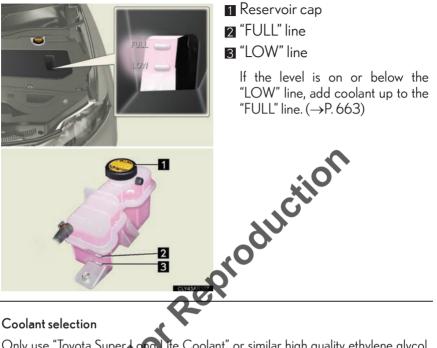

Coolant selection

Only use "Toyota Super Long Life Coolant" or similar high guality ethylene glycol based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology.

"Toyota Super Long life Coolant" is a mixture of 50% coolant and 50% deionized water. (Minimum temperature: -35°C [-31°F])

For more details about coolant, contact your Lexus dealer.

If the coolant level drops within a short time of replenishing

Visually check the radiators, hoses, engine/power control unit coolant reservoir caps, drain cock and water pump.

If you cannot find a leak, have your Lexus dealer test the cap and check for leaks in the cooling systems.

CAUTION

When the engine and hybrid system are hot

Do not remove the coolant reservoir cap.

The cooling system may be under pressure and may spray hot coolant if the cap is removed, causing serious injuries, such as burns.

▲ NOTICE

When adding coolant

Coolant is neither plain water nor straight antifreeze. Therefore t mixture of water and antifreeze must be used to provide proper lubrication, corrosion protection and cooling. Be sure to read the antifreeze or coolant label.

If you spill coolant

Be sure to wash it off with water to prevent damage to parts or paint.



Radiator and condenser

Check the radiator and condenser and clear away any foreign objects. If either of the above parts are extremely dirty or you are not sure of their condition, have your vehicle checked by your Lexus dealer.

A CAUTION

■ When the engine (RX270/RX350) or hybrid system (RX450h) is hot

Do not touch the radiator or condenser as they may be hot and cause serious injuroductio ries, such as burns.

12-volt battery (RX270/RX350)

Check the 12-volt battery as follows.


12-volt battery exterior

Make sure that the 12-volt battery terminals are not corroded and that there are no loose connections, cracks, or loose clamps.



1 Terminals 2 Hold-down clamp

Checking 12-volt battery fluid

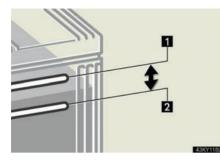

Check that the level is between "UPPER LEVEL" and "LOWER LEVEL".

"UPPER LEVEL" "LOWER LEVEL"

If the fluid level is at or below "LOWER LEVEL", add distilled water.

Before recharging

When recharging, the 12-volt battery produces hydrogen gas which is flammable and explosive. Therefore, observe the following before recharging:

- If recharging with the 12-volt battery installed on the vehicle, be sure to disconnect the ground cable.
- Make sure the power switch on the charger is off when connecting and disconnecting the charger cables to the 12-volt battery.

After recharging/reconnecting the 12-volt battery

In some cases, the engine may not start. Follow the procedure below to initialize the system.

- STEP 1 Shift the shiftNever to P, and turn the "ENGINE START STOP" switch off.
 - STEP 2 Open and close any of the doors.
- STEP 3 Start the engine. (If the engine does not start first time, repeat the procedure.)

If the engine will not start even after multiple attempts at the above method, contact your Lexus dealer.

Chemicals in the 12-volt battery

Batteries contain poisonous and corrosive sulfuric acid and may produce hydrogen gas which is flammable and explosive. To reduce the risk of death or serious injury, take the following precautions while working on or near the 12-volt battery:

- Do not cause sparks by touching the 12-volt battery terminals with tools.
- Do not smoke or light a match near the 12-volt battery.

Avoid contact with eyes, skin and clothes.

• Never inhale or swallow electrolyte.

- Wear protective safety glasses when working near the 12 volt battery.
- Keep children away from the 12-volt battery.
- Where to safely charge the 12-volt battery

Always charge the 12-volt battery in an open area. Do not charge the 12-volt battery in a garage or closed room where there is insufficient ventilation.

Emergency measures regarding electrolyt

• If electrolyte gets in your eyes

Flush your eyes with clean water for at least 15 minutes and get immediate medical attention. If possible, continue to apply water with a sponge or cloth while traveling to the nearest medical facility.

If electrolyte gets on your skin

Wash the affected area thoroughly. If you feel pain or burning, get medical attention immediately.

If electrolyte gets on your clothes It can soak through clothing on to your skin. Immediately take off the clothing and follow the procedure above if necessary.

• If you accidentally swallow electrolyte Drink a large quantity of water or milk. Get emergency medical attention immediately.

A NOTICE

When recharging the 12-volt battery

Never recharge the 12-volt battery while the engine is running. Also, be sure all accessories are turned off.

Washer fluid

▶ RX270/RX350



If any washer does not work or the warning message appears on the multi-information display, the washer tank may be empty. Add washer fluid.

▶ RX450h



If any washer does not work or the warning message appears on the multi-information display, the washer tank may be empty. Add washer fluid.

CAUTION

When adding washer fluid

► RX270/RX350

Do not add washer fluid when the engine is hot or running as washer fluid contains alcohol and may catch fire if spilled on the engine etc.

▶ RX450h

Do not add washer fluid when the hybrid system is hot or operating as washer fluid contains alcohol and may catch fire if spilled on the hybrid system etc.

NOTICE

Do not use any fluid other than washer fluid

UCTIO Do not use soapy water or engine antifreeze instead of washer fluid. Doing so may cause streaking on the vehicle's painted surfaces.

Diluting washer fluid

Dilute washer fluid with water as peed Refer to the freezing temperatures tisted on the label of the washer fluid bottle. NotFor

518

4-3. Do-it-yourself maintenance 12-volt battery (RX450h)

Location

STEP 2



The 12-volt battery is located on the left-hand side of the luggage compartment.

Removing the 12-volt battery cover


► Vehicles with a compact spare tire






Pull the ever upward to fold back the front part of the deck

Pull the folded deck board upright.

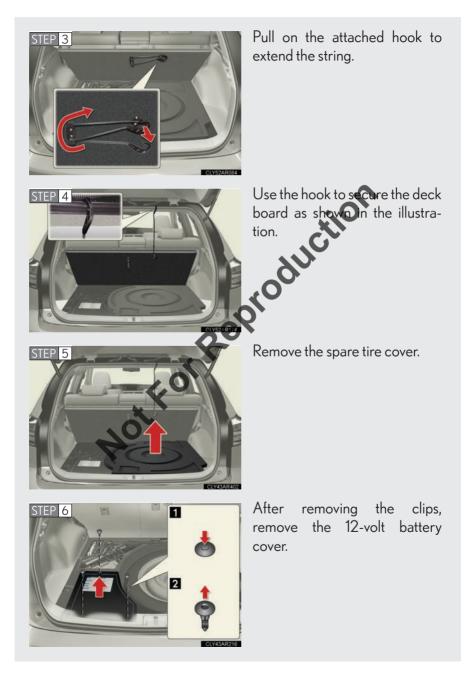

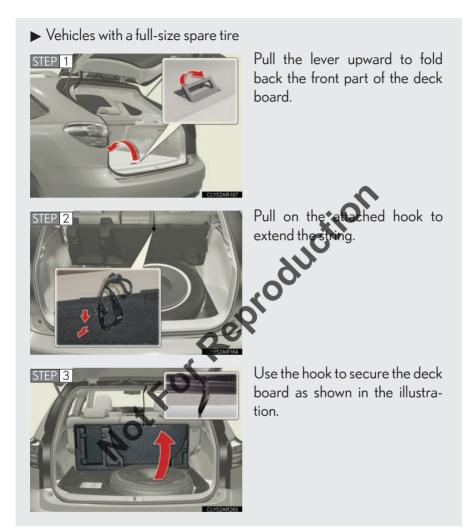



After removing the clips, remove the 12-volt battery cover.

Exterior

Make sure that the 12-volt battery terminals are not corroded and that there are no loose connections, cracks or loose clamps.



Terminals
 Hold-down clamp

Installing the 12 yolt battery cover



Install the 12-volt battery cover with the clips.

Before recharging

When recharging, the 12-volt battery produces hydrogen gas which is flammable and explosive. Therefore, observe the following precautions before recharging:

- If recharging with the 12-volt battery installed on the vehicle, be sure to disconnect the ground cable.
- Make sure the power switch on the charger is off when connecting and disconnecting the charger cables to the 12-volt battery.

After recharging/reconnecting the 12-volt battery

The hybrid system may not start. Follow one or both of the following procedures:

- After opening and closing the driver's door, wait 10 seconds and then attempt to start the hybrid system. (If the system does not start the first time, repeat the procedure.)
- With the shift lever in P and the "POWER" switch off, open and close any door and then attempt to start the hybrid system.

If the system will not start even after multiple attempts at both methods, contact your Lexus dealer.



Chemicals in the 12-volt battery

The 12-volt battery contain poisonous and corrosive sulfuric acid and may produce hydrogen gas which is flammable and explosive. To reduce the risk of death or serious injury, take the following precautions while working on or near the 12-volt battery:

- Do not cause sparks by touching the 12-volt battery terminals with tools.
- Do not smoke or light a match near the 12-volt battery.

Avoid contact with eyes, skin and clothes.

- Never inhale or swallow electrolyte.
- Wear protective safety glasses when working near the 2-volt battery.
- Keep children away from the 12-volt battery.
- Where to safely charge the 12-volt battery

Always charge the 12-volt battery in an open area. Do not charge the 12-volt battery in a garage or closed room where there is insufficient ventilation.

How to recharge the 12-volt battery

Only perform a slow charge (5 r or less). The 12-volt battery may explode if charged at a quicker rate.

Emergency measures regarding electrolyte

• If electrolyte gets in your eyes

Flush your eyes with clean water for at least 15 minutes and get immediate medical attention II possible, continue to apply water with a sponge or cloth while traveling to the nearest medical facility.

• If electrolyte gets on your skin

Wash the affected area thoroughly. If you feel pain or burning, get medical attention immediately.

• If electrolyte gets on your clothes

It can soak through clothing on to your skin. Immediately take off the clothing and follow the procedure above if necessary.

• If you accidentally swallow electrolyte Drink a large quantity of water or milk. Get emergency medical attention immediately.

CAUTION

When replacing the 12-volt battery

Use a 12-volt battery designed for the RX450h. Failure to do so may cause gas (hydrogen) to enter the passenger compartment, causing a fire or explosion.

For replacement of the 12-volt battery, contact your Lexus dealer.

NOTICE

When recharging the 12-volt battery

When recharging the 12-volt battery Never recharge the 12-volt battery while the hybrid system coperating. Also, be sure all accessories are turned off.

4-3. Do-it-yourself maintenance **Tires**

Replace or rotate tires in accordance with maintenance schedules and treadwear.

Checking tires 1 New tread 3 1 2 Treadwear indicator R Worn tread The location of treadwear indicators is shown by the "TWI" or " Δ " marks, etc. molded on the sidewall of each tire. Check spare tire condition and pressure if not rotated. Tire rotation Vehicles with a compact spare tire Rotate the tires in the order shown To equalize tire wear and help extend tire life. Lexus recommends that tire rotation is car-Front ried out approximately every 5000 km (3000 miles). Vehicles with a full-size spare tire Rotate the tires in the order shown. To equalize tire wear and help extend tire life, Lexus recommends that tire rotation is car-Front ried out approximately every

CLY43AR061

5000 km (3000 miles).

When to replace your vehicle's tires

Tires should be replaced if:

- You have tire damage such as cuts, splits, cracks deep enough to expose the fabric, and bulges indicating internal damage
- A tire goes flat repeatedly or cannot be properly repaired due to the size or location of a cut or other damage

If you are not sure, consult with your Lexus dealer.

■ Tire life

Any tires over 6 years old must be checked by a gualified technician even if it has seldom or never been used or damage is not obvious.

■ If the tread on snow tires wears down 4 mm (0.16 in.)

The effectiveness of the tires as snow tires is lost.

When inspecting or replacing tires Observe the following precaution damage to parts of the which Observe the following precautions to prevent accidents. Failure to do so may cause damage to parts of the drive train, as well as dangerous handling characteristics, which may lead to an accident resulting in death or serious injury.

- Do not mix tires or different makes, models or tread patterns. Also, do not mix tires of remarkably different treadwear.
- Do not use tire sizes other than those recommended by Lexus.
- Do not mix differently constructed tires (radial, bias-belted or bias-ply tires).
- Do not mix summer, all season and snow tires.
- Do not use tires that have been used on another vehicle. Do not use tires if you do not know how they were used previously.

NOTICE

Driving on rough roads

Take particular care when driving on roads with loose surfaces or potholes. These conditions may cause losses in tire inflation pressure, reducing the cushioning ability of the tires. In addition, driving on rough roads may cause damage to the tires themselves, as well as the vehicle's wheels and body.

If tire inflation pressure of each tire becomes low while driving

Do not continue driving, or your tires and/or wheels may be ruined.

ruined. In the second s

Make sure to maintain proper tire inflation pressure. Tire inflation pressure should be checked at least once per month. However, Lexus recommends that tire inflation pressure be checked once every two weeks. $(\rightarrow P. 691)$

Effects of incorrect tire inflation pressure

Driving with incorrect tire inflation pressure may result in the following:

- Reduced fuel efficiency
- Reduced driving comfort and tire life
- Reduced safety
- Damage to the drive train

If a tire needs frequent inflating, have it checked by your Lexus dealer

Instructions for checking tire inflation pressure

When checking tire inflation pressure, observe the following:

Check only when the tires are cold.


If your vehicle has been parked for at least 3 hours or has not been driven for more than 1.5 km or 1 mile, you will get an accurate cold tire inflation pressure reading.

ction

Always use a tire pressure gauge.

The appearance of the tire can be misleading. In addition, tire inflation pressure that is even just flow pounds off can degrade ride and handling.

- Do not reduce tire inflation pressure after driving. It is normal for tire inflation pressure to be higher after driving.
- Never exceed the vehicle capacity weight. Passengers and luggage weight should be placed so that the vehicle is balanced.

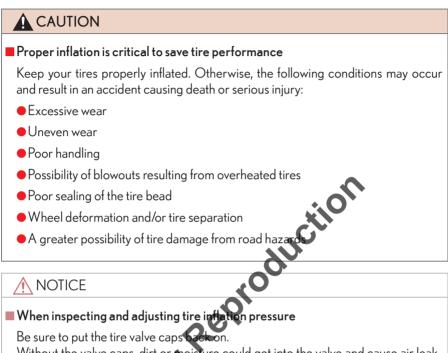

Without the valve caps, dirt or moisture could get into the valve and cause air leakage, which could result in an accident. If the caps are lost, replace them as soon as possible. If a wheel is bent, cracked or heavily corroded, it should be replaced. Otherwise, the tire may separate from the wheel or cause a loss of handlina control.

Wheel selection

When replacing wheels, care should be taken to ensure that they are equivalent to those removed in load capacity, diameter, rim width. and inset*.

Replacement wheels are available at your Lexus dealer.

Lexus does not recommend using the following:
Wheels of different sizes or types
Used wheels
Review to the following:

Bent wheels that have been straightened

Aluminum wheel precautions

• Use only Lexus wheel nuts and wrenches designed for use with your aluminum wheels.

• When rotating, repairing or changing your tires, check that the wheel nuts are still tight after driving 1600 km (1000 miles).

• Be careful not to damage the aluminum wheels when using tire chains.

• Use only Lexus genuine balance weights or equivalent and a plastic or rubber hammer when balancing your wheels.

CAUTION

When replacing wheels

- Do not use wheels that are a different size from those recommended in the Owner's Manual, as this may result in loss of handling control.
- Never use an inner tube in a leaking wheel which is designed for a tubeless tire. Doing so may result in an accident, causing death or serious injury.



4-3. Do-it-yourself maintenance Air conditioning filter

The air conditioning filter must be cleaned or changed regularly to maintain air conditioning efficiency.


Removal method

STEP 1 Set the air conditioning system to recirculated mode.

 $(\rightarrow P.347)$

The air conditioning filter case cannot be removed with the system in outside air mode.

STEP 2 RX270/RX350: Turn the "ENGINE START STOP" switch off. RX450h: Turn the "POWER" switch off.

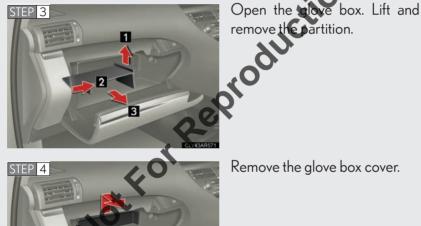

STEP 6



ûUР

Remove the filter cover.

Remove the air conditioning filter and replace it with a new one.

The "DP" mark shown on the filer should be pointing up.

Cleaning method

If the filter is dirty, clean by blowing compressed air through the filter from the underside.

Hold the air gun 5 cm (2 in.) from the filter and blow for approximately 2 minutes at 500 kPa (5.0 kgf/cm² or bar, 72 psi).

If an air gun is not available, have the filter cleaned by your Lexus dealer.

Checking interval

Inspect, clean and replace the air conditioning filter according to the maintenance schedule. In dusty areas or areas with heavy traffic flow, early replacement may be required. (For scheduled maintenance information, please refer to the "Warranty and Service Booklet".)

■ If air flow from the vents decreases dramatically

The filter may be clogged. Check the filter and replace if necessary.

NOTICE To prevent damage to the system When using the air conditioning system, make sure that a filter is always installed. When cleaning the filter, do not clean with water.


4-3. Do-it-yourself maintenance Electronic key battery

Replace the battery with a new one if it is discharged. • You will need the following items: • Flathead screwdriver • Small Phillips-head screwdriver • Lithium battery (CR1632) • Replacing the battery Take out the mechanical konting items: • Take out the mechanical konting items: • Conting i



Remove the depleted battery.

Insert a new battery with the "+" terminal facing up.

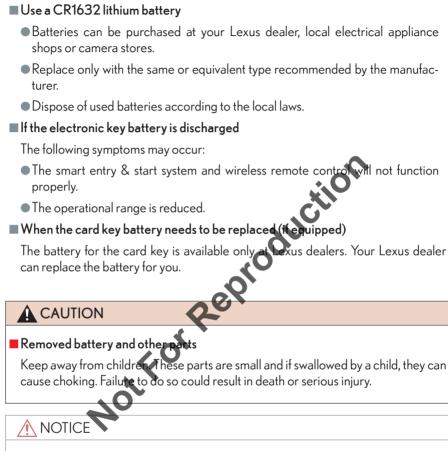


For normal operation after replacing the battery

Observe the following precautions to prevent accidents:

- Always work with dry hands. Moisture may cause the battery to rust.
- Do not touch or move any other component inside the remote control.
- Do not bend either of the battery terminals.

4

4-3. Do-it-yourself maintenance Checking and replacing fuses (RX270/RX350)

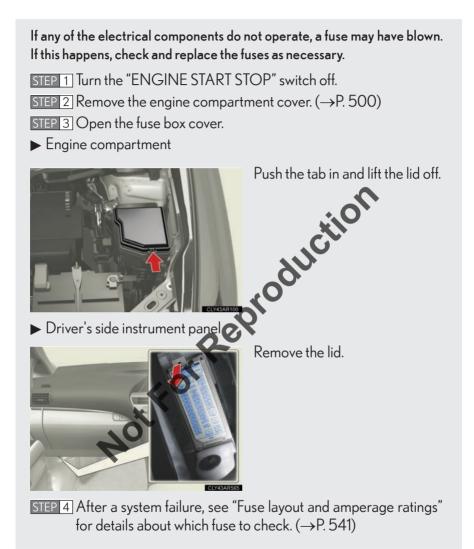



STEP 6 Check if the fuse has blown. ► Type A

Type B Type B Type D Type D

Remove the fuse with the pullout tool.


1 Normal 2 Blown Juse


Replace the blown fuse with a new fuse of an appropriate amperage rating. The amperage rating can be found on the fuse box lid.

1 Normal fuse

2 Blown fuse

Replace the blown fuse with a new fuse of an appropriate amperage rating. The amperage rating can be found on the fuse box lid.

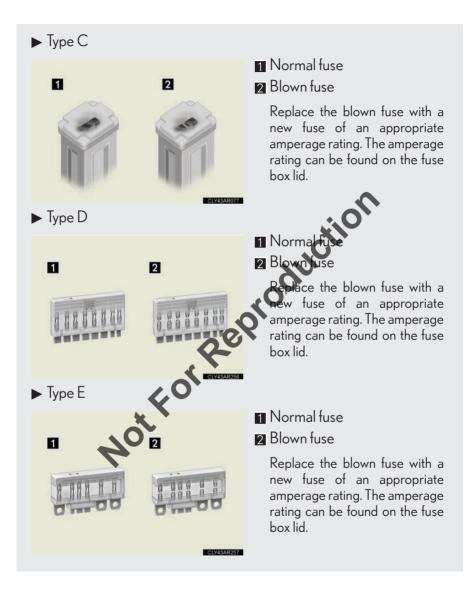

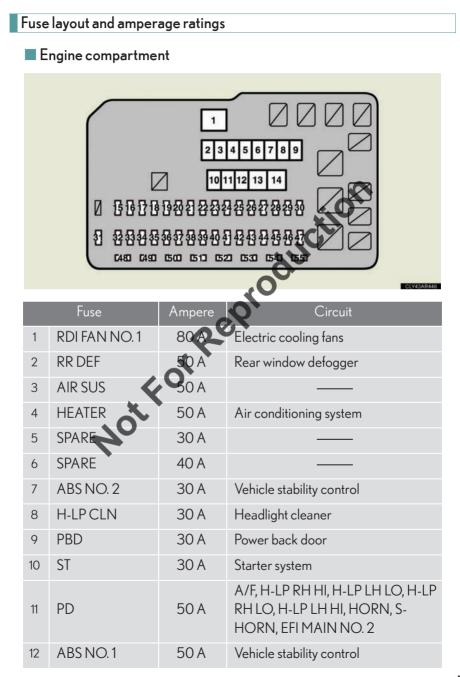

	Fuse	Ampere	Circuit
13	EPS	60 A	Electric power steering system
14	ALT	140 A	IG1 MAIN, TOWING BATT, DEICER, TOWING, STOP, RDI FAN NO. 1, FILTER, RR DEF, AIR SUS, HEATER, ABS NO. 2, H-LP CLN, PBD, ECU-IG1 NO. 1, ECU-IG1 NO. 3, GAUGE NO. 1, ECU-IG1 NO. 2, EPS, FR WIP, RR WIP, FR WASH, RR WASH, RH S-HTR LHS-HTR, TAIL, PANEL, D/L ALTE, FR FOG, FR DOOR, FL DOOR, RR DOOR, RL DOOR, FSB, P-SEAT LH, P-SEAT RH, THSTE, AIR SUS, FUEL OPN, DR LCCK, OBD, RR FOG, S/ROOF, 4WD, INVERTER, ECU-ACC, P/ POINT, CIG, RADIO NO. 2
15	AMP1	30 A	Audio system
16	EFI MAIN	30 A	Multiport fuel injection system/ sequential multiport fuel injection sys- tem, electronic controlled transmis- sion, EFI NO. 1, EFI NO. 2, F/PMP
17	AMP2	30 A	Audio system
18	IG2 MAIN	30 A	IGN, GAUGE NO. 2, ECU IG 2
19	IP J/B	25 A	Power door lock system
20	STR LOCK	20 A	Starter system
21	RAD NO. 3	15 A	Meters and gauges, navigation sys- tem, audio system
22	HAZ	15 A	Emergency flashers


	Fuse	Ampere	Circuit
23	ETCS	10 A	Multiport fuel injection system/ sequential multiport fuel injection sys- tem
24	RAD NO.1	10 A	Audio system, navigation system
25	AM2	7.5 A	Starter system
26	ECU-B NO. 2	7.5 A	Air conditioning system, audio system, vehicle stability control system, power windows
27	MAYDAY/TEL	7.5 A	MAYDAY/TEL
28	IMMOBI	7.5 A	ІММОВІ
29	ALT-S	7.5 A	Charging system
30	DRL	7.5 A	Daytime running light system
31	IGN	10	Nultiport fuel injection system/ sequential multiport fuel injection sys- tem
32	DOMENOT	10 A	Vanity mirror lights, luggage compart- ment lights, interior lights, personal lights, door courtesy lights, footwell lights, scuff lights
33	ECU-B NO.1	10 A	Tilt and telescopic steering, multiplex communication system, meters and gauges, driving position memory, power seats, power back door, head- up display, outside rear view mirror, steering sensor
34	EFI NO.1	10 A	Multiport fuel injection system/ sequential multiport fuel injection sys- tem, electronic controlled transmis- sion

Maintenance and care

	Fuse	Ampere	Circuit
35	A/F*1	10 A	Multiport fuel injection system/ sequential multiport fuel injection sys- tem
	WIP-S ^{*2}	7.5 A	Cruise control
36	ECU-IG1 NO. 4	10 A	Adaptive front-lighting system, air conditioning system, rear window defogger, vehicle stability control sys- tem, electric cooling tens
37	BK/UP LP	7.5 A	Back-up lights
38	ECU-IG1NO.5	15 A	Air conditioning system
39	ECU-IG1 NO. 6	10 A	Adaptive cont-lighting system, head light cleaner, cruise control, vehicle stability control, air conditioning sys- tem
40	EFI NO. 2	O'é A	Multiport fuel injection system/ sequential multiport fuel injection sys- tem
41	EFI NO. 2	15 A	Multiport fuel injection system/ sequential multiport fuel injection sys- tem
42	DEICER	25 A	Windshield wipers and washer
43	STOP	7.5 A	Vehicle stability control, vehicle dynamics integrated management, stop lights, electronic controlled transmission, multiport fuel injection system/sequential multiport fuel injec- tion system, shift lock control system, starter system
44	TOWING BATT	20 A	Trailer battery

	Fuse	Ampere	Circuit	
45	TOWING	30 A	Trailer lights	
46	FILTER	10 A		
47	IG1MAIN	30 A	ECU-IG1NO. 6, BK/UP LP, ECU- IG1NO. 5, ECU-IG1NO. 4	
48	H-LP RH HI	15 A	Right-hand headlight (high beam)	
49	H-LP LH HI	15 A	Left-hand headlight (high beam)	
50	BIXENON	10 A		
51	H-LP RH LO	15 A	Right-hand headlight (low beam)	
52	H-LP LH LO	15 A	Left-hand headlight (low beam)	
53	HORN	10 A	Horn	
54	EFI MAIN NO. 2 ^{*1} A/F ^{*2}	20 A	Multiport fuel injection system/ sequential multiport fuel injection sys- tem	
55	S-HORN	75 A	S-HORN	
55 S-HORN *1: RX270 *2: RX350				

Driver's side instrument panel

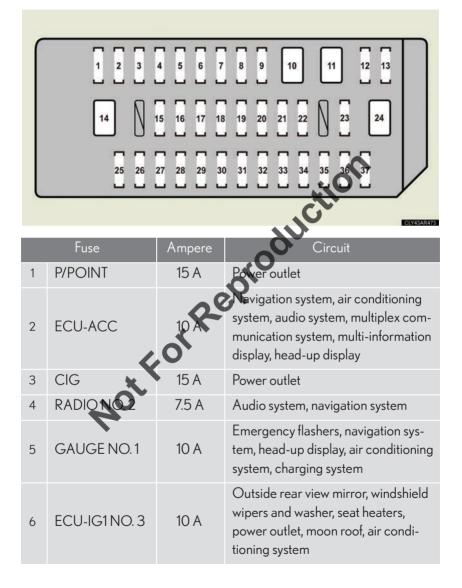

	Fuse	Ampere	Circuit
7	ECU-IG1NO.1	10 A	Multiplex communication system, steering sensor, shift lock control sys- tem, tilt and telescopic steering, auto- matic transmission system, power back door, pre-crash safety system, vehicle stability control system
8	S/ROOF	30 A	Moon roof
9	FUEL OPN	7.5 A	Fuel filler door opener
10	PSB	30 A	Pre-crash seat belt
11	TI & TE	30 A	Tilt and telescopic steering system
12	DRLOCK	10 A	DRLOCK
13	FR FOG	15 A	Front log lights
14	P-SEAT LH	30 A	Power seat (left-side)
15	4WD	7.5 A	AWD system
16	INVERTER	2 0 A	Power outlet
17	RRFOG	7.5 A	Rear fog lights
18	D/L ALL O	25 A	Multiplex communication system, power door lock system, power back door
19	EPS	10 A	Electric power steering system
20	ECU-IG1NO.2	10 A	Lexus parking assist-sensor, AWD system, pre-crash seat belt
21	PANEL	10 A	Switch illumination, navigation system, automatic transmission system, audio system, multi-information display, air conditioning system, multiplex com- munication system


	Fuse	Ampere	Circuit
22	TAIL	10 A	Front position lights, tail lights, license plate lights, front fog lights, towing converter, rear fog lights
23	AIR SUS	20 A	
24	P-SEAT RH	30 A	Power seat (right-side)
25	OBD	7.5 A	On-Board diagnosis
26	FR DOOR	25 A	Front power window (right-side), out- side rear view mirror
27	RRDOOR	25 A	Rear power window (right-side)
28	FLDOOR	25 A	Front power window (left-side), out- side reactive mirror
29	RLDOOR	25 A	Rear power window (left-side)
30	FR WASH	25 A	Windshield wipers and washer
31	RR WIP	15 A	Windshield wipers and washer
32	RR WASH	CO A	Windshield wipers and washer
33	FR WIP	30 A	Windshield wipers and washer
34	ECUIG2	10 A	Multiport fuel injection system/ sequential multiport fuel injection sys- tem, SRS airbag system, stop lights, electronic controlled transmission, steering lock system
35	GAUGE NO. 2	7.5 A	Gauge and meters
36	RH S-HTR	15 A	Seat heater (right-side)
37	LH S-HTR	15 A	Seat heater (left-side)

After a fuse is replaced

- If the lights do not turn on even after the fuse has been replaced, a bulb may need replacement. (→P. 567)
- If the replaced fuse blows again, have the vehicle inspected by your Lexus dealer.

If there is an overload in the circuit

The fuses are designed to blow, protecting the wiring harness from damage.

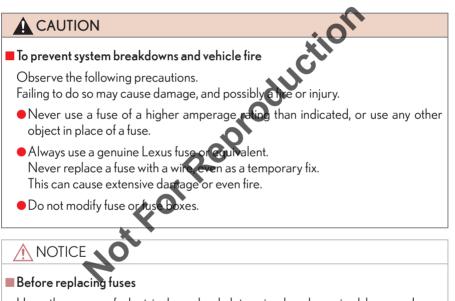


Have the cause of electrical overload determined and repaired by your Lexus dealer.


4-3. Do-it-yourself maintenance Checking and replacing fuses (RX450h)

If any of the electrical components do not operate, a fuse may have blown. If this happens, check and replace the fuses as necessary. STEP 1 Turn the "POWER" switch off. STEP 2 Remove the engine compartment cover. $(\rightarrow P. 500)$ STEP 3 Open the fuse box cover. ► Engine compartment (type A fuse box) Push the tab in and lift the lid off. Engine compartment (type B fuse pox) Push the tab in and lift the lid off. CLY43AR360



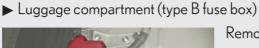


Remove the terminal cover.

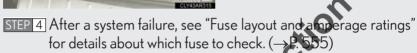





Remove the fuse with the pull-

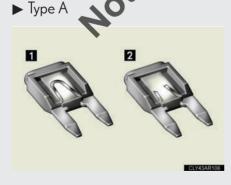

- Normal fuse
- 2 Blown fuse


Replace the blown fuse with a new fuse of an appropriate amperage rating. The amperage rating can be found on the fuse box lid.

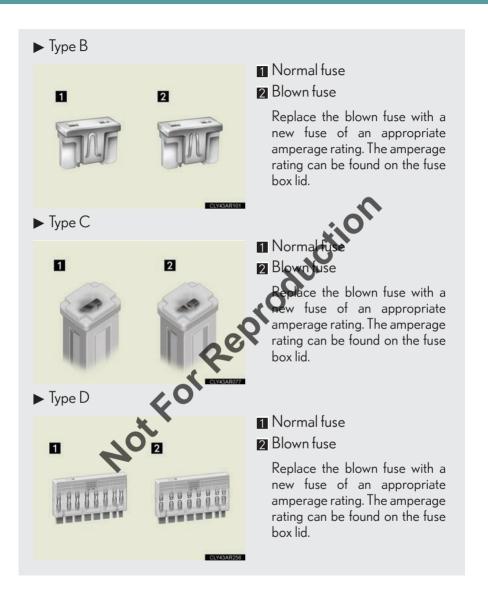

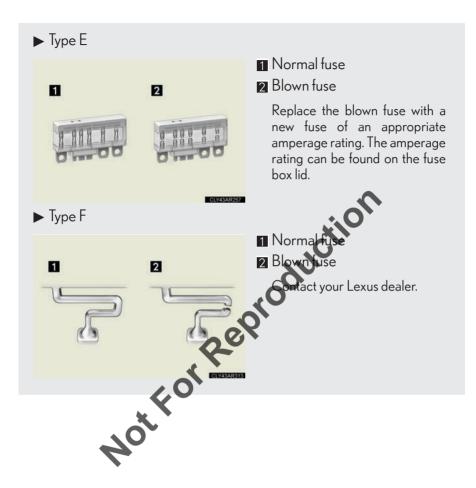


Fuse layout and amperage ratings

Engine compartment (type A fuse box)

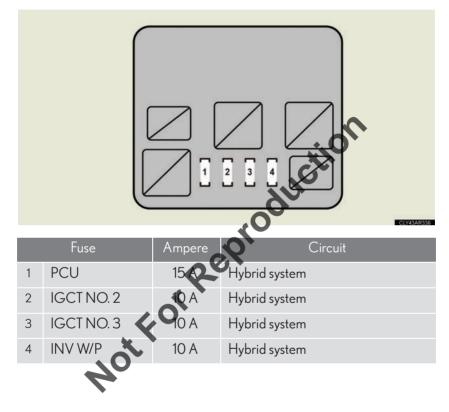

4



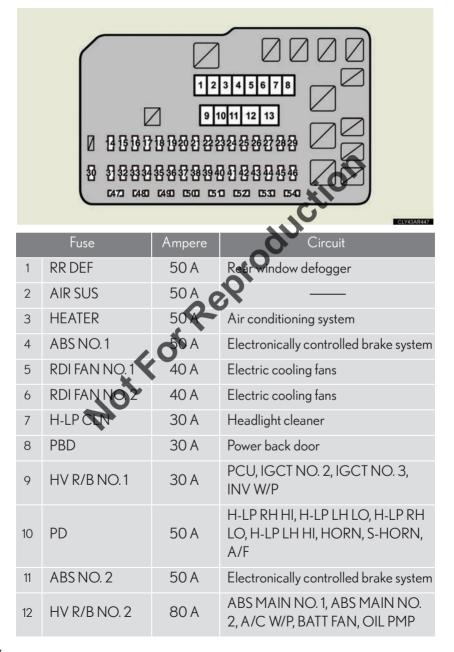


	Fuse	Ampere	Circuit
13	DCDC	150 A	IG1 MAIN, TOWING BATT, DEICER, TOWING, STOP, RDI FAN NO. 1, FILTER, RR DEF, AIR SUS, HEATER, RDI FAN NO. 2, H-LP CLN, PBD, ECU-IG1 NO. 1, ECU- IG1 NO. 3, GAUGE NO. 1, ECU-IG1 NO. 2, EPS, FR WIP, RR WIP, FR WASH, RR WASH, RH S-HTR, LH S- HTR, TAIL, PANEL DAL ALT B, FR FOG, FR DOOR, NEDOOR, RR DOOR, RL DOOR, PSB, P-SEAT LH, P-SEAT, RH, SI&TE, AIR SUS, FUEL OPN, LIRLOCK, OBD, RR FOG, S/ ROOP, 4WD, INVERTER, ECU- ASC, P/POINT, CIG, RADIO NO. 2, ABS NO. 1
14	AMP1	30 A	Audio system
15	EFIMAIN	3 0 A	Multiport fuel injection system/ sequential multiport fuel injection sys- tem, EFI NO. 1, EFI NO. 2, F/PMP
16	AMP2	30 A	Audio system
17	IG2 MAIN	30 A	IGN, GAUGE NO. 2, ECU IG2
18	IP J/B	25 A	Power door lock system
19	STR LOCK	20 A	Starter system
20	RAD NO. 3	15 A	Meters and gauges, navigation sys- tem, audio system
21	HAZ	15 A	Emergency flashers
22	ETCS	10 A	Multiport fuel injection system/ sequential multiport fuel injection sys- tem

	Fuse	Ampere	Circuit
23	RAD NO.1	10 A	Audio system, navigation system
24	AM2	7.5 A	Starter system
25	ECU-B NO. 2	7.5 A	Air conditioning system, electric power steering system, audio system, electronically controlled brake sys- tem, power windows
26	MAYDAY/TEL	7.5 A	MAYDAY/TEL
27	IMMOBI	7.5 A	IMMOBI
28	ABS MAIN NO. 3	15 A	Brake system
29	DRL	7.5 A	Daytime running light system
30	IGN	10 A	Multiport fuel injection system/ sequential multiport fuel injection sys- tem
31	DOME	O _{IO A}	Vanity mirror lights, luggage compart- ment lights, interior lights, personal lights, door courtesy lights, footwell lights, scuff lights
32	ECU-B NO.1	10 A	Tilt and telescopic steering, multiplex communication system, meters and gauges, driving position memory, power seats, power back door, head- up display, outside rear view mirror, steering sensor
33	EFI NO.1	10 A	Multiport fuel injection system/ sequential multiport fuel injection sys- tem
34	WIP-S	7.5 A	Cruise control


	Fuse	Ampere	Circuit
35	ECU-IG1NO. 4	10 A	Adaptive front-lighting system, air conditioning system, rear window defogger, electronically controlled brake system, electric cooling fans
36	BK/UP LP	7.5 A	Back-up lights
37	ECU-IG1NO.5	15 A	Air conditioning system
38	ECU-IG1NO.6	10 A	Adaptive front-lighting system, head light cleaner, cruise control, air condi- tioning system
39	EFI NO. 2	10 A	Multiport fuel injection system/ sequential multiport fuel injection sys- tem
40	F/PMP	15 A	Multiport fuel injection system/ sequential multiport fuel injection sys- tem
41	DEICER	2 5 A	Windshield wipers and washer
42	DEICER	7.5 A	Vehicle dynamics integrated manage- ment, stop lights, multiport fuel injec- tion system/sequential multiport fuel injection system, shift lock control sys- tem, starter system, cruise control
43	TOWING BATT	20 A	Trailer battery
44	TOWING	30 A	Trailer lights
45	FILTER	10 A	
46	IG1MAIN	30 A	ECU-IG1NO. 6, BK/UP LP, ECU- IG1NO. 5, ECU-IG1NO. 4
47	H-LP RH HI	15 A	Right-hand headlight (high beam)
48	H-LP LH HI	15 A	Left-hand headlight (high beam)

	Fuse	Ampere	Circuit
49	BIXENON	10 A	
50	H-LP RH LO	15 A	Right-hand headlight (low beam)
51	H-LP LH LO	15 A	Left-hand headlight (low beam)
52	HORN	10 A	Horn
53	A/F	20 A	Multiport fuel injection system/ sequential multiport fuel injection sys- tem
54	S-HORN	7.5 A	S-HORN

s-HORN S-HORN Reproduct

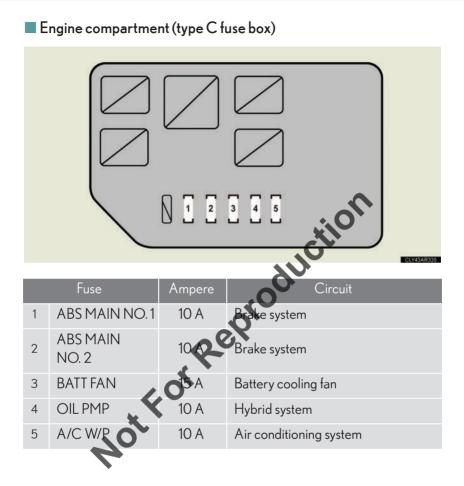


Driver's side instrument panel

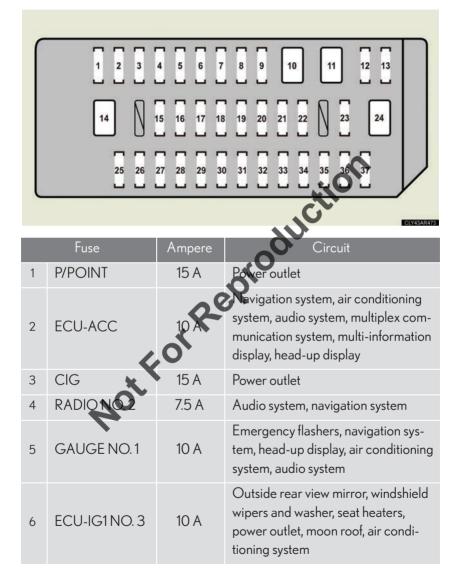

	Fuse	Ampere	Circuit
7	ECU-IG1NO.1	10 A	Multiplex communication system, steering sensor, shift lock control sys- tem, tilt and telescopic steering, vehi- cle dynamics integrated management, power back door, pre-crash safety system
8	S/ROOF	30 A	Moon roof
9	FUEL OPN	7.5 A	Fuel filler door opener
10	PSB	30 A	Pre-crash seat bet
11	TI & TE	30 A	Tilt and telescopic steering system
12	DRLOCK	10 A	DRLOCK
13	FR FOG	15 A	Front log lights
14	P-SEAT LH	30 A	Power seat (left-side)
15	4WD	7.5 A	AWD system
16	INVERTER	2 0 A	Power outlet
17	RRFOG	7.5 A	Rear fog lights
18	D/L ALL O	25 A	Multiplex communication system, power door lock system, power back door
19	EPS	10 A	Electric power steering system
20	ECU-IG1NO.2	10 A	Lexus parking assist-sensor, pre-crash seat belt, capacitor
21	PANEL	10 A	Switch illumination, navigation system, hybrid transmission system, audio sys- tem, multi-information display, air con- ditioning system, multiplex communication system

	Fuse	Ampere	Circuit
22	TAIL	10 A	Front position lights, tail lights, license plate lights, front fog lights, towing converter, rear fog lights
23	AIR SUS	20 A	
24	P-SEAT RH	30 A	Power seat (right-side)
25	OBD	7.5 A	On-board diagnosis
26	FR DOOR	25 A	Front power window (right-side), out- side rear view mirror
27	RRDOOR	25 A	Rear power window (right-side)
28	FLDOOR	25 A	Front power window (left-side), out- side reactive mirror
29	RLDOOR	25 A	Rear power window (left-side)
30	FR WASH	25 A	Windshield wipers and washer
31	RR WIP	15 A	Windshield wipers and washer
32	RR WASH	C OA	Windshield wipers and washer
33	FR WIP	30 A	Windshield wipers and washer
34	HOL ECUIG2	10 A	Multiport fuel injection system/ sequential multiport fuel injection sys- tem, SRS airbag system, stop lights, electronically controlled brake sys- tem, steering lock system, hybrid sys- tem
35	GAUGE NO. 2	7.5 A	Gauge and meters
36	RH S-HTR	15 A	Seat heater (right-side)
37	LH S-HTR	15 A	Seat heater (left-side)

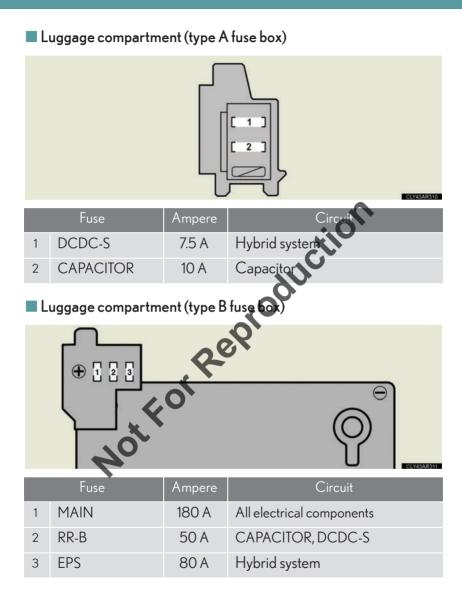


After a fuse is replaced

- If the lights do not turn on even after the fuse has been replaced, a bulb may need replacement. (→P. 567)
- If the replaced fuse blows again, have the vehicle inspected by your Lexus dealer.

If there is an overload in the circuit

The fuses are designed to blow, protecting the wiring harness from damage.

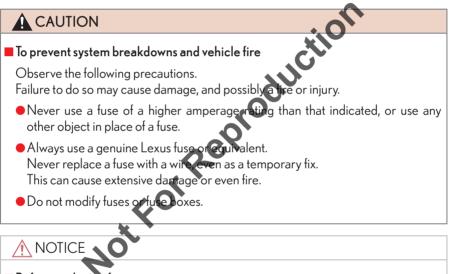


Before replacing fuses


Have the cause of electrical overload determined and repaired by your Lexus dealer as soon as possible.


4-3. Do-it-yourself maintenance Light bulbs

You may replace the following bulbs by yourself. The difficulty level of replacement varies depending on the bulb. If necessary bulb replacement seems difficult to perform, contact your Lexus dealer.

For more information about replacing other light bulbs, contact your Lexus dealer.

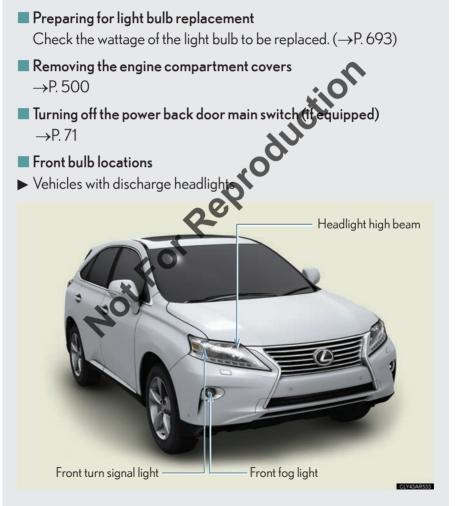

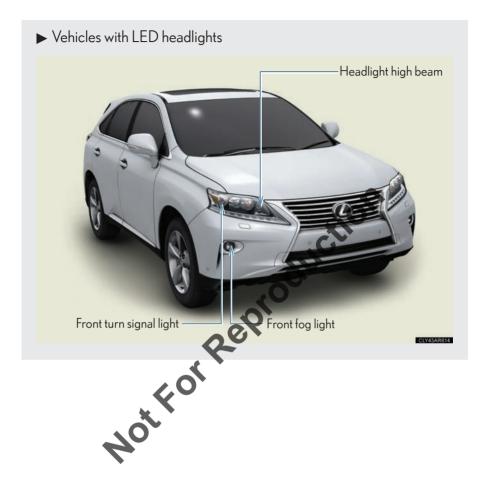

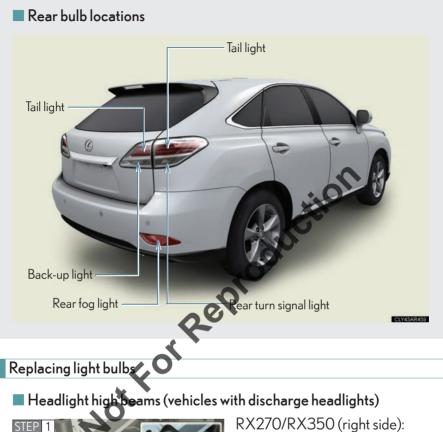


Headlight high beams (vehicles with discharge headlights)



RX270/RX350 (right side):

- 1 Open the cap.
- 2 Move the washer fluid filler opening to allow easy access to the light bulbs.

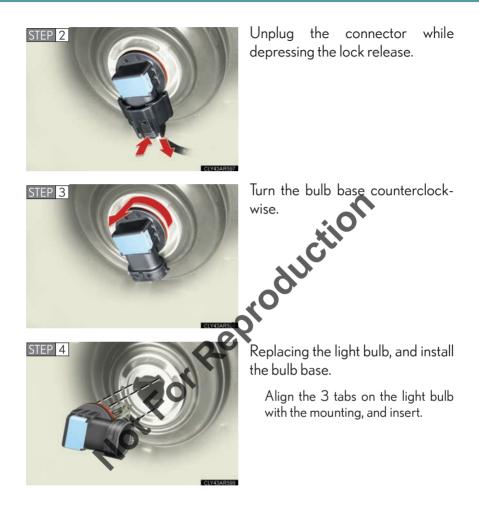




- Turn and secure the bulb base.
- Connect the connector.

Shake the bulb base gently to check that it is not loose, turn the headlight high beams on once and visually confirm that no light is leaking through the mounting.

STEP 6 RX270/RX350: When replacing the right side bulb, install by conducting STEP 1 with the directions reversed

Headlight high beams (vehicles with LED headlights)

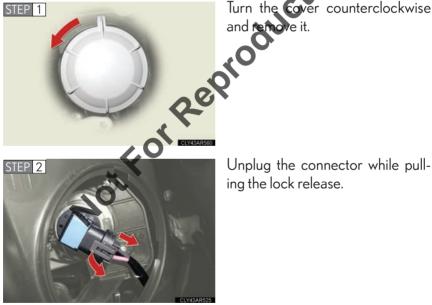

Turn the cover counterclockwise

4





STEP 5



Turn the bulb base counterclock-wise.


Replacing the light bulb, and install the bulb base.

Align the 3 tabs on the light bulb with the mounting, and insert.

- Turn and secure the bulb base.
- 2 Connect the connector.

Shake the bulb base gently to check that it is not loose, turn the headlight high beams on once and visually confirm that no light is leaking through the mounting.

Turn the cover clockwise.

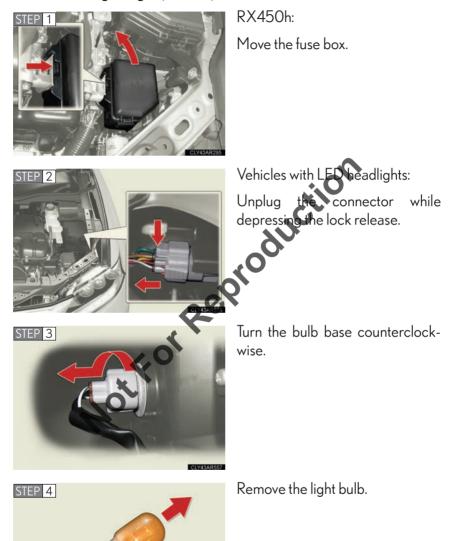

Maintenance and care



Front fog lights





To allow enough working clearance, turn the steering wheel to the opposite side of the bulb to be replaced.

Remove the fender liner bolt and clips, and then partly remove the fender liner.





Unplug the connector while depressing the lock release.



STEP 3


Turn the bulb base counterclockwise.

575



Replacing the light bulb, and install the bulb base.

Align the 3 tabs on the light bulb with the mounting, and insert.

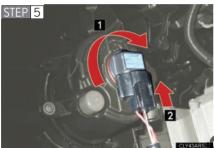

1 Turn and secure the bulb base.

2 Connect the connector.

Shake the bulb base gently to check that it is not loose, turn the front or lights on once and visually controm that no light is leaking through the mounting.

STEP 6 When replacing a light build, install by conducting STEP 1 with the directions reversed

Rear turn signal and tail lights



Remove the access hole cover.

Use flathead screwdriver а wrapped in a cloth.




Turn the bulb base counterclock-1 Tail ligh n signal light


Remove the light bulb.

1 Tail light


2 Rear turn signal light

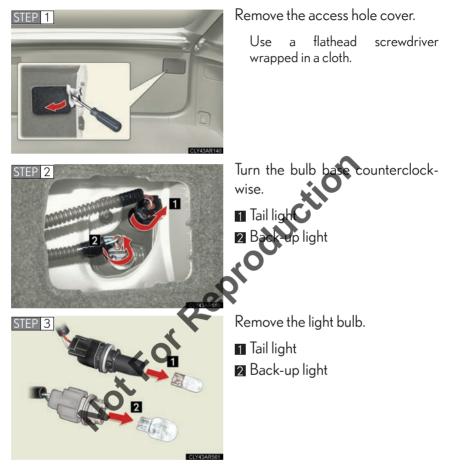

Tail and back-up lights

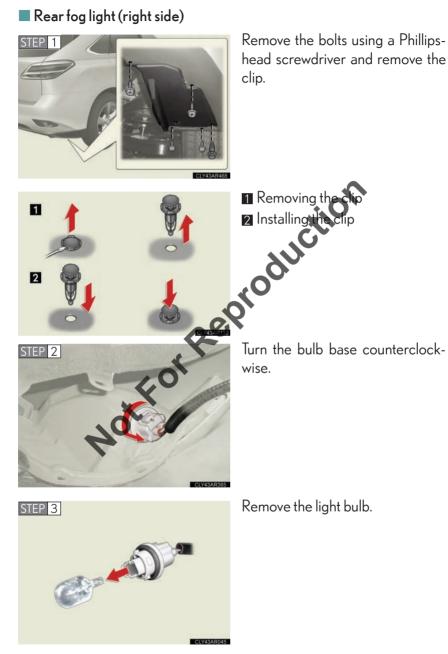

STEP 2

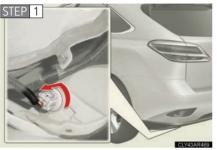

Rear fog light (left side)

Turn the bulb base counterclockwise.





Lights other than the above

If any of the lights listed below has burnt out, have it replaced by your Lexus dealer.

Headlight low beams

• Daytime running lights

- Front position lights
- Side turn signal lights
- Stop lights
- High mounted stoplight
- License plate lights

Discharge headlights (if equipped)

If voltage to the discharge bulbs is insufficient, the bulbs may not come on, or may go out temporarily. The discharge bulbs will come on when normal power is restored.

LED bulbs


The headlight low beams (if equipped), daytime running lights, front position lights, side turn signal lights, stop lights, high mounted stoplight and license plate lights. consist of a number of LEDs. If any of the LEDs burn out, take your vehicle to your Lexus dealer to have the light replaced.

Condensation build-up on the inside of the lens

Contact your Lexus dealer for more information in the following situations. Temporary condensation build-up on the inside of the headlight lens does not indicate a malfunction.

- Large drops of water are built up on the inside of the lens.
 Water has built up inside the headlight.

4

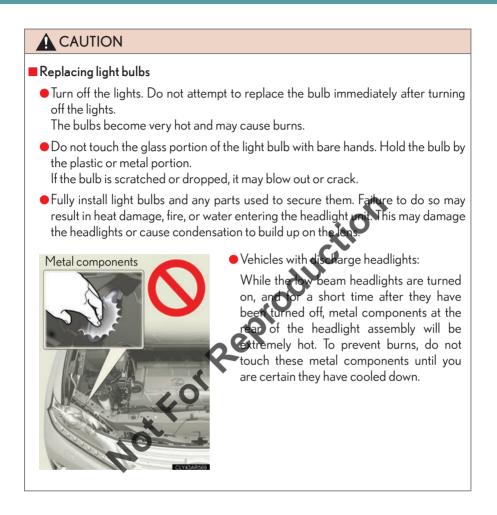

CAUTION

Discharge headlights (if equipped)

- Contact your Lexus dealer before replacing discharge headlights (including light bulbs).
- Do not touch the discharge headlight's high voltage socket when the headlights are turned on.

An extremely high voltage of 30000 V will be discharged and could result in serious injury or death by electric shock.

• Do not attempt to take apart or repair the low beam discharge headlight bulbs, connectors, power supply circuits, or related components. Doing so could result in electric shock and serious injury or death. o prevent damage or fire Take sure bulbs are fully seated and locked. connectors, power supply circuits, or related components.

To prevent damage or fire

Make sure bulbs are fully seated and locked.

4

NotforReproduction

5

5-1. Essential information

Emergency flashers	586
If your vehicle needs to	
be towed	587
If you think something is	
wrong	594
Fuel pump shut off	
system	595

5-2. Steps to take in an emergency

If a warning light turns	
on or a warning buzzer	2
sounds	. 596
If a warning message is	, Ť
displayed	. 602
If you have a flattire	627
If the engine will not start	. 640
If the hybrid system will	
not start	. 642
If the shift lever cannot	
be shifted from P	. 644
If you lose your keys	. 645
If the electronic key does	
not operate properly	. 646
If the vehicle 12-volt	
battery is discharged	
(RX270/RX350)	. 650

	If the vehicle 12-volt	
	battery is discharged	
	(RX450h)	655
	If your vehicle overheats	
	(RX270/RX350)	660
	If your vehicle overheats	
	(RX450h)	663
	If the vehicle becomes	
	stuck	668
	Ayour vehicle has to	
.0	be stopped in an	
	emergency	670
×		

5-1. Essential information **Emergency flashers**

The emergency flashers are used to warn other drivers when the vehicle has to be stopped in the road due to a breakdown, etc.



Press the switch

All the turn signal lights will flash. To turn them off, press the switch once again.

Emergency flashers

duction RX270/RX350: If the emergency flashers are used for a long time while the engine is not operating, the 12-volt batter may discharge.

RX450h: If the emergency flashers while the hybrid system is not operating (while the "READ Tindicator is not illuminated), the 12-volt battery may discharge.

Notroi

5-1. Essential information If your vehicle needs to be towed

If towing is necessary, we recommend having your vehicle towed by your Lexus dealer or a commercial towing service, using a lift-type truck or a flatbed truck.

Use a safety chain system for all towing, and abide by all state/provincial and local laws

2WD models: If towing your vehicle with a wheel-lift type truck from the front, the vehicle's rear wheels and axles must be in good conditions. $(\rightarrow P. 590, 593)$

If they are damaged, use a towing dolly or flatbed truck.

AWD models: If towing your vehicle with a wheel-lift type Puck, use a tow-ing dolly. (→P. 590, 593) Before towing

Before towing

The following may indicate a problem with your transmission (RX270/ RX350) or hybrid transmission (RX450h). Contact your Lexus dealer before towing.

• The engine (RX270/RX350) or hybrid system (RX450h) is operating but the vehicle will not move.

• The vehicle makes an abnormal sound.

Emergency towing



► RX270/RX350

If a tow truck is not available in an emergency, your vehicle may be temporarily towed using a cable or chain secured to the emergency towing eyelet(s). This should only be attempted on hard, surfaced roads for short distances at low speeds.


A driver must be in the vehicle to steer and operate the brakes. The vehicle's wheels, drive train, axles, steering and brakes must be in

RX450h If a +-If a tow truck is not available in an emergency, your vehicle may be temporarily towed using a cable or chain secured to the emergency towing eyelet(s). This should only be attempted on hard surfaced roads for short distances at under 30 km/h (18 mph).

> A driver must be in the vehicle to steer and operate the brakes. The vehicle's wheels, drive train, axles, steering and brakes must be in good condition.

Installing towing eyelets


► Type A

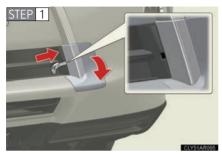

Insert the mechanical key (\rightarrow P. 45) into the groove and release the claws. With the mechanical key inserted, remove the eyelet cover by pulling it towards you.





► Type B

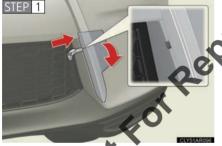


Insert the mechanical key (\rightarrow P. 40) into the groove and release the claws. With the mechanical key inserted, remove the eyelet cover by pulling it towards you.

Insert the towing eyelet into the hole and tighten as much as possible by hand.

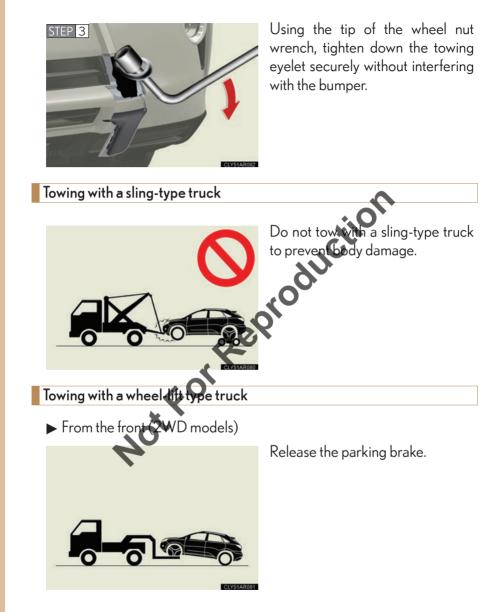

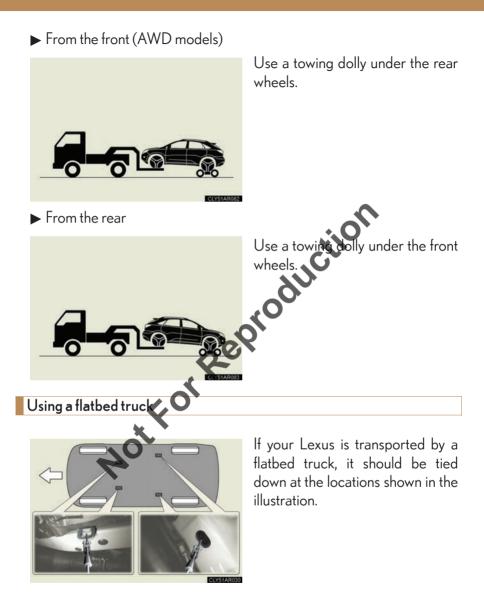

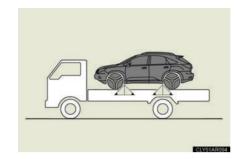

If you use chains or cables to tie down your vehicle, the angles shaded in black must be 45°.

Do not overly tighten the tie downs or the vehicle may be damaged.

Before emergency towing

- STEP 1 Release the parking brake.
- STEP 2 Shift the shift lever to N.
- STEP 3 RX270/RX350: Turn the "ENGINE START STOP" switch to ACCES-SORY (engine off) or IGNITION ON Grigine running) mode. RX450h: Turn the "POWER" switch to ACCESSORY (hybrid system off) or ON (hybrid system operating) mode.

Emergency towing eyelet location

→P. 628

- Caution while towin
 - Use extreme caution when towing the vehicle.

For

Avoid sudden starts or erratic driving maneuvers which place excessive stress on the emergency towing eyelets and the cables or chains. Always be cautious of the surroundings and other vehicles while towing.

- RX270/RX350: If the engine is not running, the power assist for the brakes and steering will not function, making steering and braking more difficult.
- RX450h: If the hybrid system is off, the power assist for the brakes and steering will not function, making steering and braking more difficult.

Installing towing eyelets to the vehicle

Make sure that towing eyelets are installed securely.

If not securely installed, towing eyelets may come loose during towing. This may lead to accidents that cause serious injury or even death.

<u> N</u>OTICE

To prevent causing serious damage to the transmission and Active Torque Control 4WD system (RX350) when towing using a wheel-lift type truck



2WD models: Never tow this vehicle from the rear with the front wheels on the ground. This may cause serious damage to the transmission. If towing from the rear, used towing dolly.



AWD models: Never tow this vehicle with any of the wheelt on the ground. This may cause serious damage to the transmission and Active Durque Control 4WD system (RX3500.) se a towing dolly.

To prevent damaging the vehicle when towing using a wheel-lift type truck


When raising the vehicle, ensure adequate ground clearance for towing at the opposite end of the raised vehicle. Without adequate clearance, the vehicle could be damaged while being towed.

To prevent body damage when towing using a sling-type trunk

Do not tow with a sling-type truck, either from the front or rear.

5

If you notice any of the following symptoms, your vehicle probably needs adjustment or repair. Contact your Lexus dealer as soon as possible.

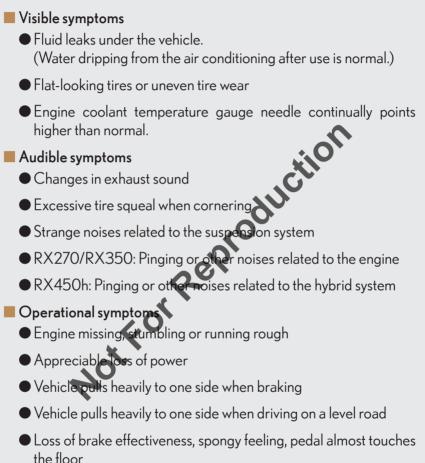

5-1. Essential information Fuel pump shut off system (RX270/RX350)

To minimize the risk of fuel leakage when the engine stalls or when an airbag inflates upon collision, the fuel pump shut off system stops the supply of fuel to the engine.

Follow the procedure below to restart the engine after the system is activated.

STEP 1 Turn the "ENGINE START STOP" switch to ACCESSORY mode or turn it off.

STEP 2 Restart the engine.

NOTICE

Before starting the engine

Notfor

Koduction Inspect the ground under the vehicle. If you find that fuel has leaked onto the ground, the fuel system has been damaged and is in need of repair. Do not restart the engine.

4

5-2. Steps to take in an emergency If a warning light turns on or a warning buzzer sounds...

Calmly perform the following actions if any of the warning lights comes on or flashes. If a light comes on or flashes, but then goes off, this does not necessarily indicate a malfunction in the system.

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.

The following warning indicates a possible problem in the brake system. Immediately stop the vehicle in a safe place and contact your Lexus dealer.

Warning light	Warning light/Dencils	
(!)	 Brake system warning light (warning buzzer)* Low brake fluid Malfunction in the brake system This light also comes on when the parking brake is not released. If the light turns off after the parking brake is fully released the system is operating normally. 	
*: Parking brake engaged warning buzzer		
→P. 608		

Stop the vehicle immediately.

The following warning indicates the possibility of damage to the vehicle that may lead to an accident. Immediately stop the vehicle in a safe place and contact your Lexus dealer.

Warning light	Warning light/Details
	Charging system warning light Indicates a malfunction in the vehicle's charging system

Have the vehicle inspected immediately.

Failing to investigate the cause of the following warnings may lead to the system operating abnormally and possibly cause an accident. Have the vehicle inspected by your Lexus dealer immediately.

Warning light	Warning light/Details
Ċ	Malfunction indicator lamp Indicates a malfunction in: • The hybrid system (RX450h); • The electronic engine control system; • The electronic throttle control system; • The emission control system (RX450h); or • The electronic automatic transmission control system (RX270/RX350)
*	SRS warning light Indicates a malfunction in: • The SRS airbag system; or • The seat belt pretensioner system
	ABS warning light Indicates a malfunction in: The ABS; or The brake assist system
	Brake system warning light (RX450h) Indicates a malfunction in: • The regenerative brake system; or • The electronically controlled brake system
	Electric power steering system warning light (warning buzzer) Indicates a malfunction in the EPS (Electric Power Steering) system

Warning light	Warning light/Details
PCS (Flashes)	 Pre-crash safety system warning light (if equipped) Indicates a malfunction in the pre-crash safety system The warning light will operate as follows, even when the system is not malfunctioning: The light will flash quickly when the system is operating. (→P. 312) The light will turn on when the pre-crash braking is disabled. (→P. 313) The light will turn on when the system cannot temporarily be used. (→P. 608)
	Slip indicator Indicates a malfunction in: • The VSC system; • The TRC system; or • The hill-start assist control system
AFS OFF (Flashes)	"AFS OFF" indicator (if equipped) Indicates a malfunction in the adaptive front-lighting system
	NOT

Follow the correction procedures.

After taking the specified steps to correct the suspected problem, check that the warning light goes off.

Warning light	Warning light/Details	Correction procedure
	Open door warning light (warning buzzer)*1 Indicates that one or more of the doors is not fully closed.	Check that all the doors are closed.
	Low fuel level warning light ► RX270/RX350 Indicates remaining fuel is approximately 10.7 L (2.8 gal., 2.3 Imp. gal.) or less ► RX450h Indicates remaining fuel is approximately 10.1 L (2.7 gal., 2.2 Imp. gal.) or less	Refuel the vehicle.
(On the instru- ment panel)	Driver's seat belt reminder light (vaning buzzer)* ² Warns the driver to fasten his/her seat belt.	Fasten the seat belt.
(On the center panel)	Front passenger's seat belt reminder light (warning buzzer)* ² Warns the front passenger to fasten his/her seat belt.	Fasten the seat belt.

Warning light	Warning light/Details	Correction procedure
	Master warning light A buzzer sounds and the warning light comes on and flashes to indicate that the master warning system has detected a malfunction.	→P.602

*1: Open door warning buzzer:

The open door warning buzzer sounds to alert one or more the doors is not fully closed (with the vehicle having reached a speed of 5 (m) h [3 mph]). $(\rightarrow P.608)$

*²: Driver's and front passenger's seat belt buzzer:

The driver's and front passenger's seat belt buzzer sounds to alert the driver and front passenger that his or her seat belt is no fastened. The buzzer sounds for 30 tront passenger that his or her seat belt is not fastened. The buzzer sounds for 30 seconds after the vehicle reaches a speed of 20 km/h (12 mph). Then, if the seat belt is still unfastened, the buzzer will sound in a different tone for 90 more seconds.



■ If the malfunction indicator lamp comes on while driving

The malfunction indicator lamp will come on if the fuel tank becomes completely empty. If the fuel tank is empty, refuel the vehicle immediately. The malfunction indicator lamp will go off after several trips.

If the malfunction indicator lamp does not go off, contact your Lexus dealer as soon as possible.

Front passenger detection sensor, passenger seat belt reminder and warning buzzer

• If luggage is placed on the front passenger seat, the front passenger detection sensor may cause the warning light to flash and the warning buzzer to sound even if a passenger is not sitting in the seat.

• If a cushion is placed on the seat, the sensor may not betect a passenger, and the warning light may not operate properly.

Electric power steering system warning light (warning buzzer)

When the 12-volt battery charge becomes insufficient or the voltage temporarily drops, the electric power steering system warning light may come on and the warning buzzer may sound.

Customization

The vehicle speed linked seat belt reminder buzzer can be disabled. (Customizable features - P. 695)

When the electric power steering system warning light comes on

The steering wheel may become extremely heavy.

If the steering wheel becomes heavier than usual when operating, hold firmly and operate using more force than usual.

When trouble arises

5-2. Steps to take in an emergency If a warning message is displayed

If a warning is shown on the multi-information display, stay calm and perform the following actions:



Master warning light

The master warning light also comes on or flashes in order to indicate that a message is currently being displayed on the multi-information display.

Multi-information display

If any of the warning lights comes on again after the following actions have been performed, contact your Lexus dealer.


Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.

The following warning indicates a possible problem in the brake system. Immediately stop the vehicle in a safe place and contact your Lexus dealer.

Warning message	Details
BRAKE MALFUNCTION	 Indicates the following: The brake fluid level is low; or, The brake system is malfunctioning. A buzzer also sounds.
CHECK BRAKE SYSTEM (RX450h)	 Indicates a malfunction in: The regenerative brake system; or, The electronically controlled brake system A buzzer also sounds.


Stop the vehicle immediately.


A buzzer sounds and a warning message is shown on the multi-information display. The following warning indicates the possibility of damage to the vehicle that may lead to an accident. Immediately stop the vehicle in a safe place and contact your Lexus dealer.

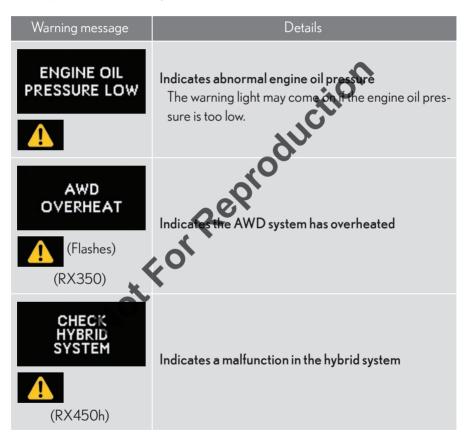


Have the vehicle inspected by your Lexus dealer immediately.

A buzzer sounds and a warning message is shown on the multi-information display. Failure to investigate the cause of the following warnings may lead to the system operating abnormally and possibly cause an accident. Have the vehicle inspected by your Lexus dealer immediately.

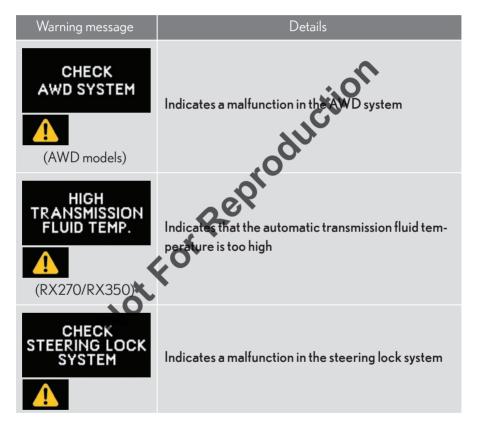

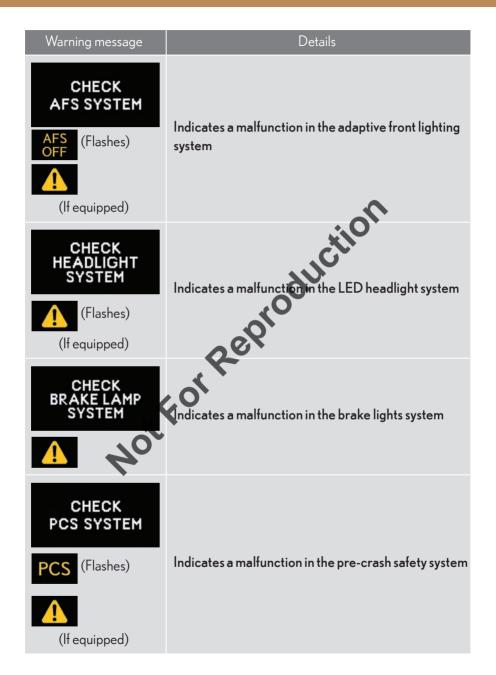

Warning message	Details
(If equipped)	Indicates a malfunction in the Lexus parking assist- sensor The malfunctioning assist-sensor is flashing.
	Indicates a malfunction in the cruist control system or the radar cruise control system (If equipped) Press the "ON-OFF" button once to deactivate the system, and then press the button again to reactivate the system.
	Indicates a malfunction in the automatic headlight leveling system
CHECK SRS SYSTEM AIRBAG	Indicates a malfunction in: • The SRS airbag system; or, • The seat belt pretensioner system
CHECK ABS	Indicates a malfunction in:The ABS; or,The brake assist system.

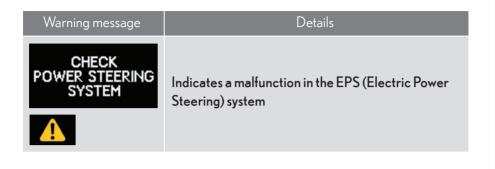



Follow the correction procedures.

A buzzer sounds and a warning message is shown on the multi-information display. After taking the specified steps to correct the suspected problem, check that the warning message goes off.

Warning message	Details	Correction procedure
	Indicates that one or more of the doors is not fully closed The system also indi- cates which doors are not fully closed. If the vehicle reaches a speed of 5 km/h (3 mph) abuzzer sounds to indicate that the door(s) are not yet fully closed.	Make sure that all the doors are closed.
HOOD OPEN	Indicates that the hood is not fully closed If the vehicle reaches a speed of 5 km/h (3 mph), a buzzer sounds to indicate that the hood is not yet fully closed.	Close the hood.

Warning message	Details	Correction procedure
	Indicates that the back door is not fully closed If the vehicle reaches a speed of 5 km/h (3 mph), a buzzer sounds to indicate that the back door is not yet fully closed.	Close the back door.
MOONROOF OPENED (Flashes) (If equipped)	Indicates that the moon roof is not fully closed (with the "ENGINE START STOP" switch (RX270/RX350) or "POWER" switch (RX450h) off, and the driver's door open)	Close the moon roof.
RELEASE PARKING BRAKE	Indicates that the parking brace is still engaged If the vehicle reaches a speed of 5 km/h (3 mph), flashes and a buzzer sounds to indicate that the parking brake is still engaged.	Release the parking brake.
LOW WASHER FLUID	Indicates that the washer fluid level is low	Add washer fluid.

Warning message	Details	Correction procedure
LOW ENGINE OIL LEVEL	Indicates that engine oil level is low A buzzer also sounds.	Check the level of engine oil, and add if necessary.
AWD DISABLED (Flashes) (RX350)	Indicates that the AWD system is not currently functional A buzzer also sounds	Reduce whicle speed or stop the vehicle in a safe place until the warnings clear. In this case, do not stop the engine.
PCS TEMPORARILY NOT AVAILABLE PCS (If equipped)	Indicates that the pre- crash safety system is not currently functional because the grille or the sensor is dirty. This message also appears when the pre- crash safety system is not functional due to over- heating.	 Check the grille and the sensor and clean them if they are dirty. In case of overheating, the system will become functional once the system cools down.
CLEAN SONAR (If equipped)	Indicates that Lexus parking assist-sensor is dirty or covered with ice A buzzer also sounds. The site of the malfunc- tion and the vehicle image are flashing.	Clean the sensor.

Warning message	Details	Correction procedure
CLEAN RADAR SENSOR	Indicates that the radar cruise control sensor is dirty or covered with ice A buzzer also sounds.	Clean the sensor.
CRUISE CONTROL NOT AVAILABLE	Indicates that the radar cruise control system is unable to judge vehicle- to-vehicle distance A buzzer also source	 Switch driving mode to normal. Whe windshield wipers are on, turn them off or set them to a mode other than AUTO or high speed wiper operation.
(Flashes) (If equipped)	Indicates that there is a high possibility of a fron- tal collision (withe same time, will appear on the head-up display (part of the image flashes).	Slow the vehicle by apply- ing the brakes.
BRAKE! PCS (Flashes) (If equipped)	Indicates that there is a high possibility of a fron- tal collision, or that the pre-crash braking func- tion is operating At the same time, BRAKE! will appear on the head-up display (the image flashes).	Slow the vehicle by apply- ing the brakes.

Warning message	Details	Correction procedure
(Flashes) (If equipped)	Indicates that your vehi- cle is nearing the vehicle ahead (in radar cruise mode) At the same time, Will appear on the head-up display (the image flashes).	Slow the vehicle by apply- ing the brakes.
	Indicates that the engine has overheated A buzzer also sources.	Stop and check. (→P. 660, 663)
HYBRID SYSTEM OVERHEAT	Indicates that the hybrid system has overheated. A buzzer also sounds. This message may be displayed when driving under severe operating conditions. (For exam- ple, when driving up a long steep hill.)	Stop and check. (→P. 663)

Warning message	Details	Correction procedure
LOW TRACTION BATTERY SHIFT TO D RANGE (Flashes) (RX450h)	Indicates that the hybrid battery (traction battery) is low.	 If a buzzer sounds intermittently, stop the vehicle in a safe place and shift the shift lever to P to charge the hybrid battery (traction battery). If a buzzer sounds continuously, immediately stop the vehicle in a safe place. Turn the "POWER" switch off and then to ON mode to restart the hybrid system. Ensuring the shift lever is in P, charge the hybrid battery (traction battery).
LOW FUEL	 RX 270/RX350 Indicates that remaining fuel is approximately 10.7 L (2.8 gal., 2.3 lmp. gal.) or less RX450h Indicates that remaining fuel is approximately 10.1 L (2.7 gal., 2.2 lmp. gal.) or less 	Refuel the vehicle.

Warning message	Details	Correction procedure
SHIFT TO RANGE WHEN PARKED	Indicates that the driver's door is opened when the hybrid transmission is out of P with the hybrid sys-	Shift the shift lever to P.
(Flashes) (RX450h)	tem on.	
(Flashes)	Indicates that the accel- erator pedal is depressed while the shift lever is in N.	Release the accelerator pedal and shift the shift lever to D or R.
(RX450h)	while the shift lever is in N.	

Have the malfunction repaired immediately

After taking the specified steps to correct the suspected problem, check that the warning message and light go off.

Interior buzzer	Exterior buzzer	Warning message	Details	Correction procedure
Sounds once		KEY NOT DETECTED (Flashes)	The electronic key is not detected when an attempt is made to start the engine (RX270/ RX350) or hybrid system (RX450h).	Confirm the loca- tion of the elec- tronic key.
		NotForRe		

Interior buzzer	Exterior buzzer	Warning message	Details	Correction procedure
Sounds	Sounds	KEY NOT DETECTED	The electronic key was carried out- side the vehicle and a door other than the driver's door was opened and closed while the "ENGINE START STOP" switch (RX270) RX350) on "POVUER" switch (RX350h) was in a mode other than off.	Bring the elec- tronic key back into the vehicle.
once	3 times	(Flashes)	The driver's door was opened and closed while the electronic key was not in the vehicle, the shift lever was in P and the "ENGINE START STOP" switch (RX270/ RX350) or "POWER" switch (RX450h) was not turned off.	Turn the "ENGINE START STOP" switch (RX270/ RX350) or "POWER" switch (RX450h) off or bring the elec- tronic key back into the vehicle.

Interior buzzer	Exterior buzzer	Warning message	Details	Correction procedure
		KEY NOT DETECTED	An attempt was made to exit the vehicle with the electronic key and lock the doors	Turn the "ENGINE START STOP" switch
Sounds once	Sounds once	TURN POWER OFF (Displayed alternately) (Flashes)	without first turn- ing the "ENGINE START STOP" switch (RX270) RX350) or "POWER" switch (RX450h) off.	(RX270/ RX350) or "ROWER" switch (RX450h) off and lock the doors again.
Sounds once		KEY NOT DETECTED (Flashes)	An attempt was inade to start the engine (RX270/ RX350)or hybrid system (RX450h) without the elec- tronic key being present, or the electronic key was not functioning normally. An attempt was made to drive when the regular key was not inside the vehicle.	Confirm that the electronic key is inside the vehicle.

617

Interior buzzer	Exterior buzzer	Warning message	Details	Correction procedure
Con- tinuous		SHIFT TO RANGE (Flashes)	The driver's door was opened when the shift lever was not in P and the "ENGINE START STOP" switch (RX270/ RX350) or "POWER" switch (RX450h) was not turned off.	Shift the shift lever to P.
Con- tinuous	Con- tinuous	SHIFT TO RANGE KEY NOT DETECTED Displayed alternately) (Flashes)	The driver's door was opened and closed while the electronic key was not in the vehicle, the shift lever was not in P and the "ENGINE START STOP" switch (RX270/ RX350) or "POWER" switch (RX450h) was not turned off.	 Shift the shift lever to P. Bring the elec- tronic key back into the vehicle.

Interior buzzer	Exterior buzzer	Warning message	Details	Correction procedure
Sounds once	Con- tinuous	KEY DETECTED IN VEHICLE (Flashes) (Flashes) (Flashes)	An attempt was made to lock the doors using the smart entry & start system while the electronic key was still inside the vehicle. An attempt was made to lock either from door by opening a door and putting the inside lock button into the lock posi- tion, then closing the door by pull- ing on the outside door handle with the electronic key still inside the vehicle.	Retrieve the elec- tronic key from the vehicle and lock the doors again.

Interior buzzer	Exterior buzzer	Warning message	Details	Correction procedure
Sounds once		DEPRESS BRAKE PEDAL, TOUCH ENGINE SWITCH WITH KEY (Flashes) (RX270/RX350)	• When the doors were unlocked with the mechanical key and then the "ENGINE START STOP" switch was pressed, the electronic key could not be detected in the webicle. The electronic key could not be detected in the vehicle even after the "ENGINE START STOP" switch was pressed two consecutive times.	Touch the elec- tronic key to the "ENGINE START STOP" switch while depressing the brake pedal.

Interior buzzer	Exterior buzzer	Warning message	Details	Correction procedure
Sounds once		DEPRESS BRAKE PEDAL, TOUCH POWER SWITCH WITH KEY (Flashes) (RX450h) (RX450h)	 When the doors were unlocked with the mechanical key and then the "POWER" switch was pressed, the electronic key could not be detected in the vehicle The electronic key could not be detected in the vehicle even after the "POWER" switch was pressed two consecutive times. 	Touch the elec- tronic key to the "POWER" switch while depressing the brake pedal.
Sounds once		SHIFT TO RANGE TO START (Flashes)	An attempt was made to start the engine (RX270/ RX350) or hybrid system (RX450h) with the shift lever in an incorrect position.	Shift the shift lever to P and start the engine (RX270/ RX350) or hybrid system (RX450h).

Interior buzzer	Exterior buzzer	Warning message	Details	Correction procedure
Sounds once		SHIFT TO PRANGE AND PUSH ENGINE SWITCH TO TURN POWER OFF (Flashes) (RX270/RX350)	An attempt was made to turn the "ENGINE START STOP" switch off when the shift lever was not in P.	To turn off the engine, first shift the shift lever to P and then turn the "ENGINE START STOP" switch off.
Sounds once		SHIFT TO PRANGE AND PUSH POWER SWITCH TO TURN POWER OFF (Flashes) (RX450h)	An attempt was made to turn the "POWER" switch off when the shift lever was not in P.	to turn off the hybrid system, first shift the shift lever to P and then turn the "POWER" switch off.
	•	NotforRe	•	

Interior buzzer	Exterior buzzer	Warning message	Details	Correction procedure
		AUTO POWER OFF TO CONSERVE BATTERY BATTERY	Power was turned off dua to the automatic power off function.	 ► RX270/ RX350 Next time when starting the engine, increase the engine speed slightly and main- approximately 5 minutes to recharge the 12- volt battery. ► RX450h Next time when starting the hybrid system, increase the hybrid system speed slightly and maintain that level for approximately 5 minutes to recharge the 12- volt battery.
Sounds once	_	KEY BATTERY LOW	The electronic key has a low battery.	Replace the elec- tronic key battery. $(\rightarrow P. 536)$

When trouble arises

Interior buzzer	Exterior buzzer	Warning message	Details	Correction procedure
Sounds once		DEPRESS BRAKE PEDAL AND PUSH ENGINE SWITCH TO START	The driver's door was opened and closed with the "ENGINE START STOP" switch turned off and then the "ENGINE START STOP" switch was put in ACCES SORX mode twice without the engine being started.	Press the "ENGINE START STOP" switch while depressing the brake pedal.
		(RX270/RX350)	During an engine starting proce- dure in the event that the elec- tronic key was not functioning prop- erly (→P. 647), the "ENGINE START STOP" switch was touched with the electronic key.	Press the "ENGINE START STOP" switch within 10 seconds of the buzzer sounding.

Interior buzzer	Exterior buzzer	Warning message	Details	Correction procedure
Sounds		DEPRESS BRAKE PEDAL AND PUSH POWER SWITCH TO START	The driver's door was opened and closed with the "POWER" switch turned off and then the "POWER" switch was put in ACCESSORY mode twice with- out the hybrid sys- tem being started.	Press the "POWER" switch while depressing the brake pedal.
		(Flashes) (RX450h)	During an hybrid system starting procedure in the event that the electronic key was not functioning properly (→P. 648), the "POWER" switch was touched with the electronic key.	Press the "POWER" switch within 10 seconds of the buzzer sounding.

Sounds onceImage: Construction of the steer ing lock could not be released within 3 seconds of the "ENGINE START STOP" switch (RX270/ RX350) or "POWER" switch (RX450h) while RX350) or "POWER" switch (RX450h) while the steer ing wheel left and right.Press the "ENGINE START STOP" switch (RX270/ RX350) or "POWER" switch (RX450h) while the steer ing wheel left and right.	Interior buzzer	Exterior buzzer	Warning message	Details	Correction procedure
			ACTIVE	could not be released within 3 seconds of the "ENGINE START STOP" switch (RX270/ RX350) or "POWER" switch (RX450k) being	"ENGINE START STOP" switch (RX270/ RX350) or "POWER" switch (RX450h) while bepressing the brake pedal and moving the steer- ing wheel left and

■ Warning message in radar cruise mode (if equipped)

In the following cases, the warning message may not be displayed even if vehicleto-vehicle distance decreases:

- When your vehicle and the vehicle ahead are traveling at the same speed or the vehicle ahead is traveling more quickly than your vehicle
- When the vehicle ahead is traveling at a very low speed
- Immediately after cruise control speed is set
- At the instant the accelerator pedal is depressed

5-2. Steps to take in an emergency If you have a flat tire

Remove the flat tire and replace it with the spare provided.


Before jacking up the vehicle

- Stop the vehicle on a hard, flat surface.
- Set the parking brake.
- Shift the shift lever to P.
- NotforReproduction • RX270/RX350: Stop the engine.

• RX450h: Stop the hybrid system.

• Turn on the emergency flashers.

When trouble arises

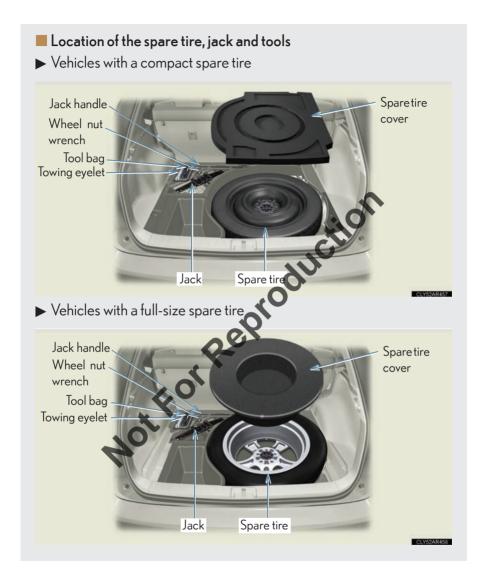

Taking out the jack

► Vehicles with a compact spare tire




Pull the lever upward to fold back the front part of the deck board.




Pull the force deck board upright.



Pull on the attached hook to extend the string.

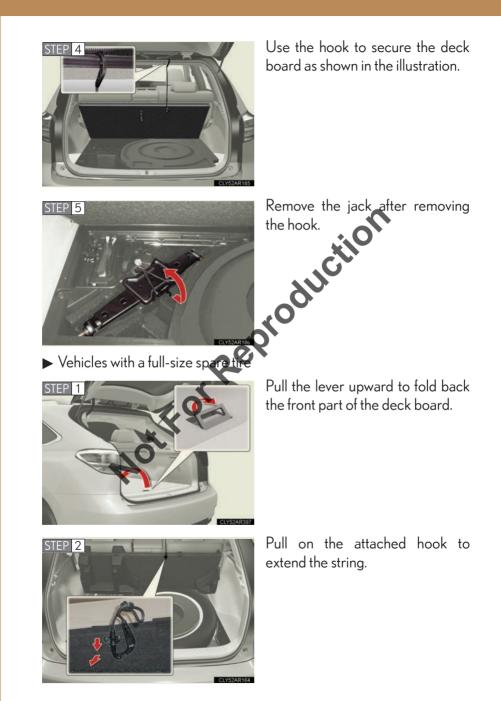

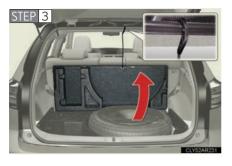

Use the hook to secure the deck board as shown in the illustration.



Remove the jack after removing

Taking out the spare tire

STEP 1 Lift up the deck word. (See "Taking out the jack" for details.)


STEP 2 Remove the spare tire cover.

STEP 3 Loosen the center fastener that secures the spare tire.

► Vehicles with a compact spare tire





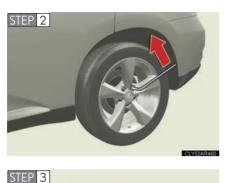

Slightly loosen the wheel nuts (one turn).

Turn the tire jack portion "A" by hand until the notch of the jack is in contact with the jack point.



Raise the vehicle until the tire is slightly raised off the ground.



Remove all the wheel nuts and the tire.

When resting the tire on the ground, place the tire so that the wheel design faces up to avoid scratching the wheel surface.

When trouble arises

Installing the spare tire




Remove any dirt or foreign matter from the wheel contact surface.

If foreign matter is on the wheel contact surface, the wheel nuts may loosen while the vehicle is in motion, causing the tire to come off.

STEP 2 Install the spare tire and loosely tighten each heel nut by hand by approximately the same amount.

► Vehicles with a compact spare tire

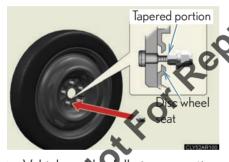


Tighten the nuts until the tapered portion comes into loose contact with the disc wheel seat.






Turn the nuts until the washers come into contact with the wheel.

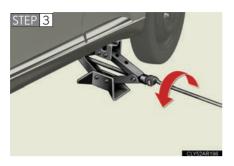

Lower the vehicle.

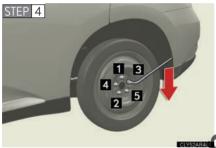

Firmly tighten each wheel nut two or three times in the order shown in the illustration

Tightening torque: 103 Non (10.5 kgf•m, 76 ft•lbf)

STEP 5 Stow the flat tire, tire jack and all tools.

The compact spare tire

 The compact spare trip is identified by the label "TEMPORARY USE ONLY" on the tire sidewall

Use the compact spare tire temporarily, and only in an emergency.

- Make sure to check the tire inflation pressure of the compact spare tire. $(\rightarrow P. 688, 691)$
- If you have a flat front tire on a road covered with snow or ice (vehicles with a compact spare tire)

Install the compact spare tire on one of the rear wheels of the vehicle. Perform the following steps and fit tire chains to the front tires:

- STEP 1 Replace a rear tire with the compact spare tire.
- **STEP 2** Replace the flat front tire with the tire removed from the rear of the vehicle.
- STEP 3 Fit tire chains to the front tires.

Using the tire jack

Improper use of the tire jack may cause the vehicle to suddenly fall off the jack, leading to death or serious injury.

- Do not use the tire jack for any purpose other than replacing tires or installing and removing tire chains.
- Only use the tire jack that comes with this vehicle for replacing a flat tire.
 Do not use it on other vehicles, and do not use other tire jacks for replacing tires on this vehicle.
- Always check that the tire jack is securely set to the jack point
- Do not put any part of your body under the vehicle while it is supported by the jack.
- RX270/RX350: Do not start or run the engine while your vehicle is supported by the jack.
- RX450h: Do not start or run the hybrid system while your vehicle is supported by the jack.
- Do not raise the vehicle while someone is inside.
- When raising the vehicle, do not put an object on or under the jack.
- Do not raise the vehicle to height greater than that required to replace the tire.
- Use a jack stand if it is necessary to get under the vehicle.

Take particular care when lowering the vehicle to ensure that no one working on or near the vehicle may be injured.

CAUTION

Replacing a flat tire

• Observe the following precautions.

Failure to do so may result in serious injury:

• Do not touch the disc wheels or the area around the brakes immediately after the vehicle has been driven.

After the vehicle has been driven the disc wheels and the area around the brakes will be extremely hot. Touching these areas with hands, feet or other body parts while changing a tire, etc. may result in burns.


• Do not attach a heavily damaged wheel ornament, as it may fly off the wheel while the vehicle is moving.

• Failure to follow these precautions could cause the wheel nuts to loosen and the tire to fall off, resulting in death or serious injury

- Never use oil or grease on the wheel bolts or wheel nuts.
 Oil and grease may cause the wheel nuts to be excessively tightened, leading to bolt or disc wheel damage. In addition, the oil or grease can cause the wheel nuts to loosen and the wheel may fall off, causing a serious accident. Remove any oil or grease from the wheel bolts or wheel nuts.
- Have the wheel nuts tightened with a torque wrench to 103 N•m (10.5 kgf•m, 76 ft•lbf) as soon as possible after changing wheels.
- When installing a tire, only use wheel nuts that have been specifically designed for that wheel.
- If there are any gracks or deformations in the bolt screws, nut threads or bolt holes of the wheel, have the vehicle inspected by your Lexus dealer.

Replacing a flat tire for vehicles with power back door

In cases such as when replacing tires, make sure to turn off the power back door main switch (\rightarrow P. 71). Failure to do so may cause the back door to operate unintentionally if the power back door switch is accidentally touched, resulting in hands and fingers being caught and injured.

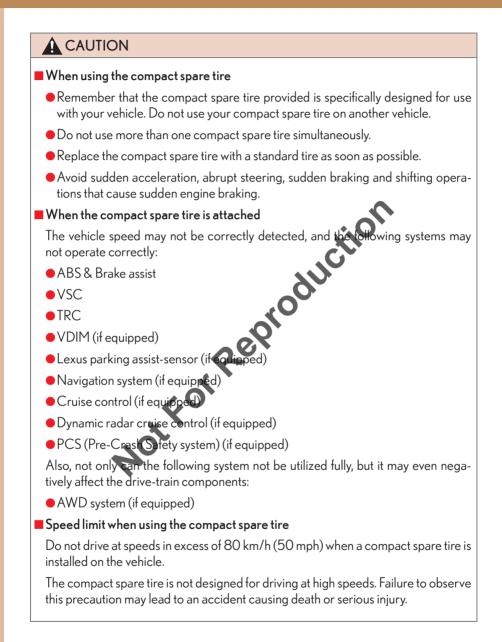

A NOTICE

Do not drive the vehicle with a flat tire

Do not continue driving with a flat tire.

Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair.

Be careful when driving over bumps with the compact spare tire installed on the vehicle.

The vehicle becomes lower when driving with the compact spare tire compared to when driving with standard tires. Be careful when driving over meven road surfaces.

Driving with tire chains and the compact spare tire

Do not fit tire chains to the compact spare tire. Tire chains may damage the vehicle body and adversaly affect driving performance.

5-2. Steps to take in an emergency If the engine will not start (RX270/RX350)

If the engine will not start even though correct starting procedures are being followed (\rightarrow P. 193), consider each of the following points. The engine will not start, even though the starter motor operates normally. One of the following may be the cause of the problem: • There may not be sufficient fuel in the vehicle's tank. Refuel the vehicle. • The engine may be flooded. Try to restart the engine again following correct starting procedures. $(\rightarrow P. 193)$ ullet There may be a malfunction in the engine immobilizer system. $(\rightarrow P. 131)$ The starter motor turns over slowly the interior lights and headlights are dim, or the horn does not sound or sounds at a low volume. One of the following may be the cause of the problem: • The 12-volt battery may be discharged. (\rightarrow P. 650) • The 12-volt battery terminal connections may be loose or corroded. The starter motor does not turn over. The engine starting system may be malfunctioning due to an electrical problem such as an open circuit or a blown fuse. However, an interim measure is available to start the engine. $(\rightarrow P. 641)$

The starter motor does not turn over, the interior lights and headlights do not turn on, or the horn does not sound.

One of the following may be the cause of the problem:

• One or both of the 12-volt battery terminals may be disconnected.

• The 12-volt battery may be discharged. (\rightarrow P. 650)

• There may be a malfunction in the steering lock system.

Contact your Lexus dealer if the problem cannot be repaired, or if ductif repair procedures are unknown.

Emergency start function

When the engine does not start, the following steps can be used as an interim measure to start the engine "ENGINE START STOP" switch is functioning normally:

STEP 1 Set the parking brake.

STEP 2 Shift the shift lever to P.

STEP 3 Turn the ENGINE START STOP" switch to ACCESSORY mode.

STEP 4 Press and hold the "ENGINE START STOP" switch for about 15 seconds while depressing the brake pedal firmly.

Even if the engine can be started using the above steps, the system may be malfunctioning. Have the vehicle checked by your Lexus dealer.

When trouble arises

5-2. Steps to take in an emergency If the hybrid system will not start (RX450h)

Reasons for the hybrid system not starting vary depending on the situation. Check the following and perform the appropriate procedure:
■ The hybrid system will not start even though the correct starting procedure is being followed. (→P. 199) One of the following may be the cause of the problem:
ullet The electronic key may not be functioning properly. ($ ightarrow$ P. 646)
ullet There may be a malfunction in the immobilizer system. ($ ightarrow$ P. 133)
ullet There may be a malfunction in the steering lock system.
● The hybrid system may be malfunctioning due to an electrical problem such as an open circuit or a blown fuse. However, depending on the type of malfunction, an interim measure is available to start the hybrid system. (→P.643)
The interior lights and headlights are dim, or the horn does not sound or sounds at a low volume. One of the following may be the cause of the problem:
• The 12-volt battery may be discharged. (\rightarrow P. 655)
 The 12-volt battery terminal connections may be loose or cor- roded.
The interior lights and headlights do not turn on, or the horn does not sound.
One of the following may be the cause of the problem:
 One or both of the 12-volt battery terminals may be discon- nected.
ullet The 12-volt battery may be discharged. ($ ightarrow$ P. 655)
Contact your Lexus dealer if the problem cannot be repaired, or if repair procedures are unknown.

Emergency start function

When the hybrid system does not start, the following steps can be used as an interim measure to start the hybrid system if the "POWER" switch is functioning normally:

STEP 1 Set the parking brake.

STEP 2 Shift the shift lever to P.

STEP 3 Turn the "POWER" switch to ACCESSORY mode.

STEP 4 Press and hold the "POWER" switch for about 15 seconds while depressing the brake pedal firmly.

Even if the hybrid system can be started using the above steps, the system may be malfunctioning. Have the vehicle inspected by your Lexus dealer.

5-2. Steps to take in an emergency If the shift lever cannot be shifted from P

If the shift lever cannot be shifted with your foot on the brake pedal, there may be a problem with the shift lock system (a system to prevent accidental operation of the shift lever). Have the vehicle inspected by your Lexus dealer immediately.

The following steps may be used as an emergency measure to ensure that the shift lever can be shifted:

STEP 1 Set the parking brake.

STEP 2 RX270/RX350: Turn the "ENGINE START STOP" switch to ACCESSORY mode.

RX450h: Turn the "POWER" switch to AGC SORY mode.

STEP 3 Depress the brake pedal.



Press the shift lock override but-

The shift lever can be shifted while the button is pressed.

5-2. Steps to take in an emergency If you lose your keys

New genuine Lexus keys can be made by your Lexus dealer using the other keys and the key number stamped on your key number plate.

NotforReproduction

5-2. Steps to take in an emergency If the electronic key does not operate properly

If communication between the electronic key and vehicle is interrupted (\rightarrow P. 56) or the electronic key cannot be used because the battery is depleted, the smart entry & start system and wireless remote control cannot be used. In such cases, the doors can be opened and the engine (RX270/RX350) or hybrid system (RX450h) can be started by following the procedure below.

Locking and unlocking the side doors and key linked functions



Changing "ENGINE START STOP" switch modes and starting the engine (RX270/RX350)

STEP 1 Ensure that the shift lever is in P and depress the brake pedal.



Touch the Lexus emblem side of the electronic key to the "ENGINE START STOP" switch.

If any of the doors is opened or closed while the key is being touched to the switch, an alarm will sound to increate that the start function cannot detect the electronic key.



STEP 3 To change "ENGINE START STOP" switch modes: Within 10 seconds of the buzzer sounding, release the brake pedal and press the "ENGINE START STOP" switch. Modes can be changed each time the switch is pressed. (→P. 194)

To start the engine: Press the "ENGINE START STOP" switch within 10 seconds of the buzzer sounding, keeping the brake pedal depressed.

In the event that the "ENGINE START STOP" switch still cannot be operated, contact your Lexus dealer.

Changing "POWER" switch modes and starting the hybrid system (RX450h)

STEP 1 Ensure that the shift lever is in P and depress the brake pedal.



Touch the Lexus emblem side of the electronic key to the "POWER" switch.

If any of the doors is opened or closed while the key is being touched to the switch, an alarm will sound to indicate that the start function cannot detect the electronic key.



STEP 3 To change "POWER" switch modes: Within 10 seconds of the buzzer sounding, release the brake pedal and press the "POWER" switch. Modes can be changed each time the switch is pressed (→P. 200)

To start the hybrid system: Press the "POWER" switch within 10 seconds of the buzzer sounding, keeping the brake pedal depressed.

In the event that the hybrid system still cannot be operated, contact your Lexus dealer.

Stopping the engine (RX270/RX350)

Shift the shift lever to P and press the "ENGINE START STOP" switch as you normally do when stopping the engine.

Stopping the hybrid system (RX450h)

Shift the shift lever to P and press the "POWER" switch as you normally do when stopping the hybrid system.

Replacing the key battery

As the above procedure is a temporary measure, it is recommended that the electronic key battery be replaced immediately when the battery is depleted. (→P. 536)

weiter is a terrise of the second sec

5-2. Steps to take in an emergency If the vehicle 12-volt battery is discharged (RX270/RX350)


The following procedures may be used to start the engine if the vehicle's 12-volt battery is discharged.

You can also call your Lexus dealer or a gualified repair shop.

If you have a set of jumper (or booster) cables and a second vehicle with a 12-volt battery, you can jump start your vehicle by following the steps below.

STEP 1 Open the hood. Remove the 12-volt battery cover. (\rightarrow P. 502) ▶ RX270



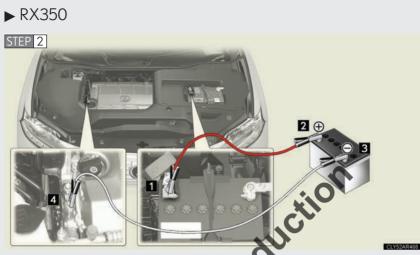

Connect the jumper cables according to the following procedure:

- Connect a positive jumper cable camp to the positive (+) battery terminal on your vehicle.
- Connect a positive jumper cable clamp to the positive (+) battery terminal on the second vehicle.
- Connect a negative cable clamp to the negative (-) battery terminal on the second vehicle.
- Connect the samp at the other end of the negative cable to a solid, stationary, unpainted metallic point away from the 12-volt battery and any moving parts, as shown in the illustration.
- **STEP 3** Start the engine of the second vehicle. Increase the engine speed slightly and maintain that level for approximately 5 minutes to recharge the 12-volt battery of your vehicle.
- STEP 4 Open and close any of the doors with the "ENGINE START STOP" switch off.
- **STEP 5** Maintain the engine speed of the second vehicle and start the engine of your vehicle by turning the "ENGINE START STOP" switch to IGNITION ON mode.

When trouble arises

STEP 6 Once the vehicle's engine has started, remove the jumper cables in the exact reverse order from which they were connected.

Once the engine starts, have the vehicle inspected at your Lexus dealer as soon as possible.

Starting the engine when the 12-volt battery is discharged

The engine cannot be started by push-starting.

To prevent 12- volt battery discharge

- Turn off the headlights and the audio system while the engine is off.
- Turn off any unnecessary electrical components when the vehicle is running at a low speed for an extended period, such as in heavy traffic.

When the 12- volt battery is removed or discharged

The power back door must be initialized, the quipped) $(\rightarrow P. 708)$

Charging the 12-volt battery

The electricity stored in the 12-volt battery will discharge gradually even when the vehicle is not in use due to natural discharge and the draining effects of certain electrical appliances. If the vehicle is left for a long time, the 12-volt battery may discharge, and the engine may be unable to start. (The 12-volt battery recharges automatically during driving.)

Avoiding 12-volt battery fires or explosions

Observe the following precautions to prevent accidentally igniting the flammable gas that may be emitted from the 12-volt battery:

- Make sure each jumper cable is connected to the correct terminal and that it is not unintentionally in contact with any other than the intended terminal.
- Do not allow the + and clamps of the jumper cables to come into contact with each other.
- Do not smoke, use matches, cigarette lighters or allow open flame near the 12volt battery.

12-volt battery precautions

The 12-volt battery contains poisonous and corrosive acidic electrolyte, while related parts contain lead and lead compounds. Observe the following precautions when handling the 12-volt battery:

• When working with the 12-volt battery, always wear safety glasses and take care not to allow any battery fluids (acid) to come into contact with skin, clothing or the vehicle body.

Do not lean over the 12-volt battery.

- In the event that battery (u)d comes into contact with the skin or eyes, immediately wash the affected area with water and seek medical attention.
 - Place a wet sponge or cloth over the affected area until medical attention can be received.
- Always wash your hands after handling the battery support, terminals, and other battery-related parts.

• Do not allow children near the 12-volt battery.

NOTICE

When handling jumper cables

When connecting the jumper cables, ensure that they do not become entangled in the cooling fans or belt.




5-2. Steps to take in an emergency If the vehicle 12-volt battery is discharged (RX450h)

The following procedures may be used to start the hybrid system if the vehicle's 12-volt battery is discharged.

You can call your Lexus dealer or a gualified repair shop.

If you have a set of jumper (or booster) cables and a second vehicle with a 12-volt battery, you can jump start your vehicle by following the steps below.

- STEP 1 Open the hood and remove the engine compartment covers. $(\rightarrow P.501)$
- STEP 2 Remove the fuse box cover and open the exclusive jump starting terminal cover.

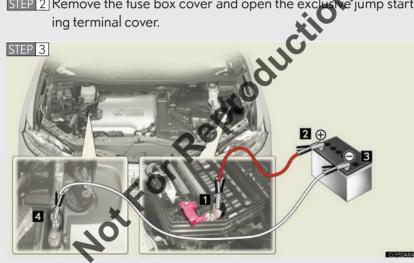

Connect the jumper cables according to the following procedure:

- Connect a positive jumper cable clamp to the exclusive jump starting terminal on your vehicle
- 2 Connect a positive jumper cable clamp to the positive (+) battery terminal on the second vehicle
- Connect a negative cable clamp to the negative (-) battery terminal on the second vehicle
- Connect the clamp at the other end of the negative cable to a solid, stationary, unpainted metallic point away from the exclusive jump starting terminal and any moving parts, as shown in the illustration.

When trouble arises

 STEP 4 Start the engine of the second vehicle. Increase the engine speed slightly and maintain that level for approximately 5 minutes to recharge the 12-volt battery of your vehicle. STEP 5 Open and close any of the doors of your vehicle with the "POWER" switch off.
STEP 6 Maintain the engine speed of the second vehicle and start the hybrid system of your vehicle by turning the "POWER" switch to ON mode.
STEP 7 Make sure the "READY" indicator comes on the indicator does not come on, contact your Lexus dealer
STEP 8 Once the hybrid system has started, remove the jumper cables in the exact reverse order from which they were connected. Once the hybrid system starts, have the vehicle inspected at your Lexus dealer as soon as possible.
Starting the hybrid system when the 12-volt battery is discharged
The hybrid system cannot be started by push-starting.
To prevent 12- volt battery discharge
 Turn off the headlights and the audio system while the hybrid system is off.
 Turn off any unnecessary electrical components when the vehicle is running at a low speed for an extended period, such as in heavy traffic.
When the 12- volt battery is removed or discharged
ullet The power back door must be initialized. (if equipped) ($ o$ P. 708)
• The hybrid system may not start. (\rightarrow P. 523)

Charging the 12-volt battery

The electricity stored in the 12-volt battery will discharge gradually even when the vehicle is not in use, due to natural discharge and the draining effects of certain electrical appliances. If the vehicle is left for a long time, the 12-volt battery may discharge, and the hybrid system may be unable to start. (The 12-volt battery recharges automatically while the hybrid system is operating.)

CAUTION

Avoiding 12-volt battery fires or explosions

Observe the following precautions to prevent accidentally initing the flammable gas that may be emitted from the 12-volt battery:

- Make sure each jumper cable is connected to the correct terminal and that it is not unintentionally in contact with any other than the intended terminal.
- Do not allow the other end of the jumper caple connected to the "+" terminal to come into contact with any other parts or metal surfaces in the area, such as brackets or unpainted metal.
- Do not allow the + and clampeon the jumper cables to come into contact with each other.
- Do not smoke, use matches cigarette lighters or allow open flame near the 12volt battery.

12-volt battery precautions

The 12-volt battery contains poisonous and corrosive acidic electrolyte, while related parts contain lead and lead compounds. Observe the following precautions when handling the 12-volt battery:

- When working with the 12-volt battery, always wear safety glasses and take care
 not to allow any battery fluids (acid) to come into contact with skin, clothing or the
 vehicle body.
- Do not lean over the 12-volt battery.
- In the event that battery fluid comes into contact with the skin or eyes, immediately wash the affected area with water and seek medical attention.
 - Place a wet sponge or cloth over the affected area until medical attention can be received.
- Always wash your hands after handling the battery support, terminals, and other battery-related parts.

• Do not allow children near the 12-volt bater

After recharging the 12-volt battery

Have the 12-volt battery inspected at your Lexus dealer as soon as possible. If the 12-volt battery is deteriorating, continued use may cause the 12-volt battery to emit a malodorous gas, which may be detrimental to the health of passengers.

When replacing the 2-volt battery

→P. 525

🕂 NOTICE

When handling jumper cables

When connecting the jumper cables, ensure that they do not become entangled in the cooling fans or belt.

Avoiding accidental short-circuits

When connecting jumper cables, observe the following precautions:

- Make sure each jumper cable is connected to the correct terminal.
- Do not allow the ends of the jumper cable used for the "+" terminal to come into contact with any other parts or metal surfaces in the area such as brackets or unpainted metal.
- Do not allow the "+" and "-" terminals of the jumper cables to come into contact with each other.
- Exclusive jump starting terminal precaution

The exclusive jump starting terminal is to be used when charging the 12-volt battery from another vehicle in an emergency. It cannot be used to jump start another vehicle.

5-2. Steps to take in an emergency If your vehicle overheats (RX270/RX350)

If your engine overheats:

- STEP 1 Stop the vehicle in a safe place and turn off the air conditioning system.
- STEP 2 Check to see if steam is coming out from under the hood.
 - If you see steam:

Stop the engine. Carefully lift the hood after the steam subsides and then restart the engine.

If you do not see steam:

Leave the engine running and carefully lift the bood.

STEP 3 Check to see if the cooling fan is operating

If the fan is operating:

Wait until the temperature of the engine (shown on the instrument panel) begins to fall and then stop the engine.

If the fan is not operating:

Stop the engine immediately and call your Lexus dealer.



After the engine has cooled down sufficiently, check the engine coolant level and inspect the radiator core (radiator) for any leaks.

If the engine compartment cover needs to be removed: \rightarrow P. 500



Add engine coolant if necessary.

Water can be used in an emergency if engine coolant is unavailable. (\rightarrow P. 682)

Have the vehicle inspected at the nearest Lexus dealer as soon as posductic sible

Overheating

If you observe the following, your vehicle may Poverheating:

- The engine coolant temperature gauge enters the red zone or a loss of power is experienced.
- Steam comes out from under the hood.

CAUTION

To prevent an account or injury when inspecting under the hood of your vehicle


- If steam is seen coming from under the hood, do not open the hood until the steam has subsided. The engine compartment may be very hot, causing serious injuries such as burns.
- Keep hands and clothing away from the fans and drive belt while the engine is running.
- Do not loosen the coolant reservoir cap while the engine and radiator are hot. Serious injury, such as burns, may result from hot coolant and steam released under pressure.

A NOTICE


When adding engine coolant

Wait until the engine has cooled down before adding engine coolant. When adding coolant, do so slowly. Adding cool coolant to a hot engine too quickly can cause damage to the engine.



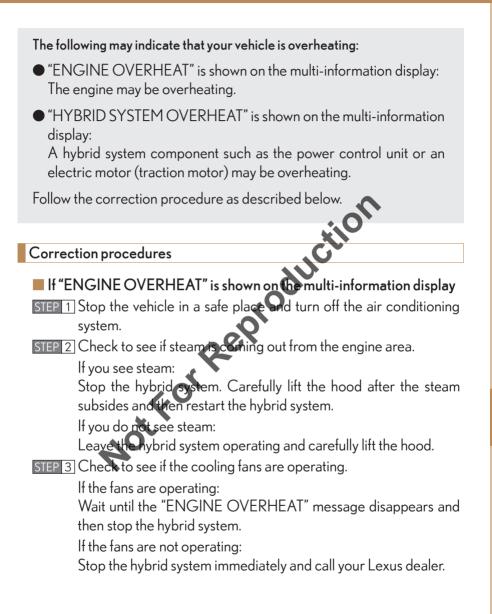


When trouble arises

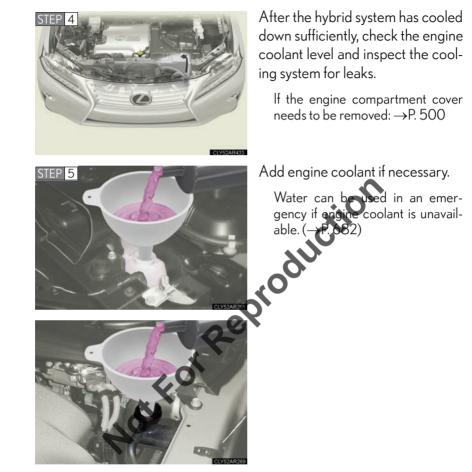

Have the vehicle inspected at the nearest Lexus dealer as soon as possible.

If "HYBRID SYSTEM OVERHEAT" is shown on the multi-information display

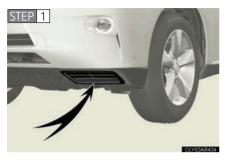

Stop the vehicle in a safe place and turn off the air conditioning system.

Ensure that the opening for the oil cooler is not blocked by dirt or any other foreign substance.

If the opening is not blocked or if the message does not disappear after some time the opening has been cleaned proceed to STEP 2.

STEP 2 Leave the hybrid system operating and carefully lift the hood.

STEP 3 Check if the cooling fans are operating


If the fans are operating:

Wait until the "HYBRID SYSTEM OVERHEAT" message disappears and then stop the hybrid system.

If the message does not disappear, call your Lexus dealer.

If the fans are not operating:

Stop the hybrid system immediately and call your Lexus dealer.

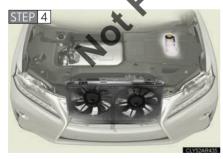

After the hybrid system has cooled down, check the power control unit coolant level and inspect the cooling system for leaks.

If the engine compartment cover needs to be removed: $\rightarrow P.500$



Add power control unit coolant if necessary.

Water can be used in an emergency if power control unit coolant is unavailable. (\rightarrow P. 682)

Have the vehicle inspected at the nearest Lexus dealer as soon as possible.

Overheating

The following symptoms may occur when your vehicle's overheating: Hybrid system output decreases

- Hybrid system output decreases.
- Steam comes out from the engine area Ref

A CAUTION

- To prevent an accident or injury when inspecting under the hood of your vehicle
 - If steam is seen coming from under the hood, do not open the hood until the steam has subsided. The engine compartment may be very hot, causing serious injuries such as burns.
 - Check that the indicator on the "POWER" switch and the "READY" indicator are off
 - For vehicles with a hybrid system, there are times when the gasoline engine automatically starts to run or the cooling fans suddenly start to operate. Do not touch or approach the rotating parts of the belt or fans. Doing so may lead to fingers, clothes or tools getting caught, resulting in injury.
 - Do not loosen the radiator cap while the hybrid system and radiator are hot. Serious injuries, such as burns, may result from hot coolant and steam released under pressure.

NOTICE

When adding engine/power control unit coolant

Wait until the hybrid system has cooled down before adding engine/power control unit coolant.

When adding coolant, do so slowly. Adding cool coolant to a hot hybrid system too guickly can cause damage to the hybrid system.

To prevent damage to the cooling system

Observe the following precautions:

- , such as res. tio • Avoid contaminating the coolant with foreign matter (such as and or dust etc.)
- Do not use commercially available coolant additives.

Carry out the following procedures if the tires spin or the vehicle becomes stuck in mud, dirt or snow:

▶ RX270/RX350

- STEP 1 Stop the engine. Set the parking brake and shift the shift lever to P.
- STEP 2 Remove the mud, snow or sand from around the front wheels.
- STEP 3 Place wood, stones or some other material under the front wheels to help provide traction.

STEP 4 Restart the engine.

- STEP 5 AWD models: Activate all-wheel drive lock mode. $(\rightarrow P. 309)$
- STEP 6 Shift the shift lever to the D or R position and release the parking brake. Then, while exercising caption, depress the accelerator pedal.

▶ RX450h

- STEP 1 Stop the hybrid system. Set the parking brake and shift the shift lever to P.
- STEP 2 Remove the mud show or sand from around the front wheels.
- STEP 3 Place wood, stones or some other material under the front wheels to help provide traction.
- STEP 4 Restart the hybrid system.
- **STEP 5** Shift the shift lever to the D or R position and release the parking brake. Then, while exercising caution, depress the accelerator pedal.

When it is difficult to free the vehicle



Press the VSC off switch to turn off TRC.

CAUTION

When attempting to free a stuck vehicle

uction If you choose to push the vehicle back and forth there it, make sure the surrounding area is clear to avoid striking other vehicles, bjects or people. The vehicle may also lunge forward or lunge back suddenly as it becomes free. Use extreme caution.

When shifting the shift lever


Be careful not to shift the shift lever with the accelerator pedal depressed. This may lead to unexpected rapid acceleration of the vehicle that may cause an accident resulting in death or serious injury.

NOTIC

To avoid damage to the transmission and other components

- Avoid spinning the front wheels and depressing the accelerator pedal more than necessary.
- If the vehicle remains stuck even after these procedures are performed, the vehicle may require towing to be freed.

5-2. Steps to take in an emergency If your vehicle has to be stopped in an emergency

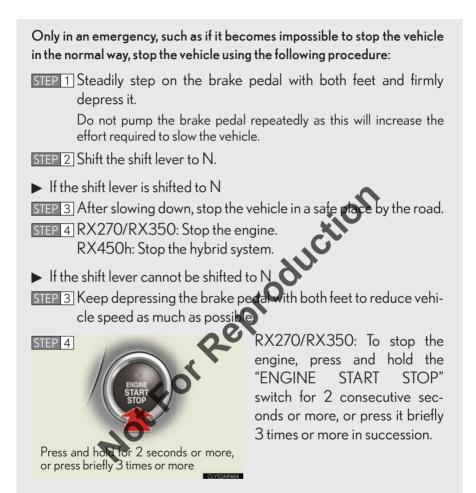

STEP 4



Press and hold for 2 seconds or more. or press briefly 3 times or more

RX450h: To stop the hybrid system, press and hold the "POWER" switch for 2 consecutive seconds or more, or press it briefly 3 times or more in succession

ction **STEP** 5 Stop the vehicle in a safe place by the road.

CAUTION

■ If the engine has to be turned off while driving (12270/RX350)

Power assist for the brakes and steering wheel will be lost, making the brake pedal harder to depress and the steering whee peavier to turn. Decelerate as much as possible before turning off the engine

■ If the hybrid system has to be turned off while driving (RX450h)

Power assist for the brakes and steering wheel will be lost, making the brake pedal harder to depress and the steering wheel heavier to turn. Decelerate as much as possible before turning of the hybrid system.

When trouble arises

NotforReproduction

6-1. Specifications

Maintenance data	
(fuel, oil level, etc.)	674
Fuel information	694

6-2. Customization

	Customizal eatures 695
	ltems to in Vialize 708
	111
	0
orRepr	•
A CX	
.4	
t for	
4	
•	

6-1. Specifications Maintenance data (fuel, oil level, etc.)


Dimensions

	4770 mm (187.8 in.)
	1885 mm (74.2 in.)
	1685 mm (66.3 in.)* ² 1690 mm (66.5 in.)* ³ 1725 mm (67.9 in.) ^{*4}
	2740 mm (107.9 in.)
Front	1630 mm (64.2 in.)
Rear	1625 mm (64.0 in)
oramic roo	f and roof rail
mic roof	<u> </u>
s cor	f and roof rails
	pramic room nic roof s

Vehicle identification

Vehicle identification number

The vehicle identification number (VIN) is the legal identifier for your vehicle. This is the primary identification number for your Lexus. It is used in registering the ownership of your vehicle.

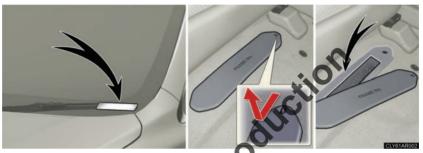

This number is stamped on the top left of the instrument panel.




This number is also on the manufacturer's label.

Engine number

The engine number is stamped on the engine block as shown.

▶ RX270

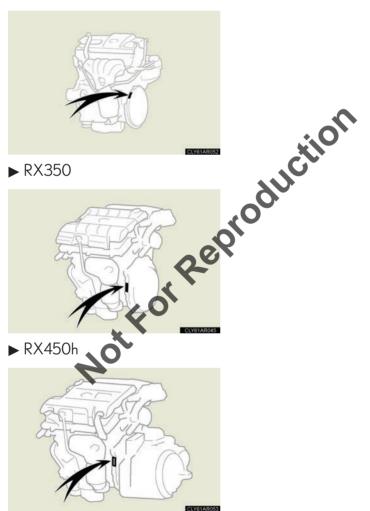

Engine

► RX270

Model	1AR-FE
Туре	4-cylinder in line, 4-cycle, gasoline
Bore and stroke	$90.0 \times 105.0 \text{ mm} \ (3.54 \times 4.13 \text{ in.})$
Displacement	2672 cm ³ (163.0 cu.in.)
Drive belt tension	Automatic adjustment
▶ RX350/RX450h	ctio'
Model	 Automatic adjustment RX350 2GR-FE RX450h 2GR-FXE
Туре	6-cylinder type, 4-cycle, gasoline
Bore and stroke	940 × 83.0 mm (3.70 × 3.27 in.)
Displacement	9 56 cm ³ (210.9 cu.in.)
Drive belt tension	Automatic adjustment
20	
Fuel	

Fuel type	Unleaded gasoline only
Research octane number	 RX270 91 or higher RX350/RX450h 95 or higher
Fuel tank capacity (Reference)	 RX270/RX350 72 L (19.0 gal., 15.8 lmp. gal.) RX450h 65 L (17.1 gal., 14.2 lmp. gal.)

Vehicle specifications

Electric motor (Traction motor) (RX450h)

► Front

Туре	Permanent magnet synchronous motor
Maximum output	123 kW
Maximum torque	335 N•m (34.2 kgf•m, 247 ft•lbf)

▶ Rear

Туре	Permanent magnet synchronour potor
Maximum output	50 kW
Maximum torque	139 N•m (14.2 kgf•m, 103,11•lbf)

Hybrid battery (Traction battery) (RX450h)

Туре	Nickel-metal hydride battery
Voltage	9.6 V/module
Capacity	6.5 Ah (3HR)
Quantity	30 modules
Overall voltage	288 V


Lubrication system

▶ RX270

Oil capacity (Drain and refill — reference*) With filter Without filter

4.4 L (4.6 gt., 3.9 lmp. gt.) 4.0 L (4.2 at., 3.5 lmp, at.)

▶ RX350/RX450h

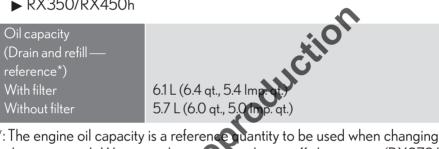

*: The engine oil capacity is a reference quantity to be used when changing the engine oil. Warm up the engine and turn off the engine (RX270/ RX350) or hybrid system (RX450h), wait more than 5 minutes, and check the oil level on the diastick.

Engine oil selection


"Tovota Genuine Motor Oil" is used in your Lexus vehicle. Use Lexus approved "Toyota Genuine Motor Oil" or equivalent to satisfy the following grade and viscosity.

Oil grade:

0W-20, 5W-20, 5W-30 and 10W-30:

API grade SL "Energy-Conserving", SM "Energy-Conserving", SN "Resource-Conserving" or ILSAC multigrade engine oil

15W-40 and 20W-50: API grade SL, SM or SN multigrade engine oil Recommended viscosity (SAE):

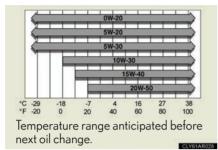

If you use SAE 10W-30 or a higher viscosity engine oil in extremely low temperatures, the engine may become difficult to start, so SAE 5W-30 or lower viscosity engine oil is recommended.


Oil viscosity (OW-20 is explained here as an example):

- The OW in OW-20 indicates the characteristic of the oil which allows cold startability. Oils with a lower value before the Wallow for easier starting of the engine in cold weather.
- The 20 in OW-20 indicates the viscosity characteristic of the oil when the oil is at high temperature. An oil with Obgher viscosity (one with a higher value) may be better suited if the vehicle is operated at high speeds, or under extreme load conditions



How to read oil container labels:

Either or both API registered marks are added to some oil containers to help you select the oil you should use.

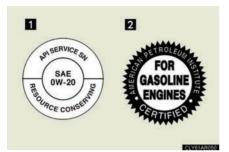

NotforRef

API Service Symbol

Top portion: The oil quality designation by API (American Petroleum Institute) (SN)

Center portion: The SAE viscosity grade (SAE OW-20)

Lower portion "Resource-Conserving" means that the oil has fuelsaving and environmental protection carabilities.

ILSAC Certification Mark

The ILSAC (International Lubricant Standardization and Approval Committee) Certification Mark is displayed on the front of the container.

Cooling system

▶ RX270/RX350

Capacity	 RX270 6.7 L (7.1 qt., 5.9 lmp. qt.) RX350 9.5 L (10.0 qt., 8.4 lmp. qt.)
Coolant type	Use either of the following: • "Toyota Super Long Life Coolant" • A similar high-quality ethylene alycol-based non- silicate, non-amine, non-hitrite, and non-borate coolant with long-life hybrid organic acid technol- ogy Do not use plain water alone.
► RX450h	ept
Capacity Gasoline engine Power control unit	11.71. (12.4 qt., 10.3 lmp. qt.) OL (2.0 qt., 1.7 lmp. qt.)
Coolant type	 Use either of the following: "Toyota Super Long Life Coolant" Similar high-quality ethylene glycol-based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology Do not use plain water alone.

Ignition system

Spark plug

Make

Gap


► RX270
DENSO SK16HR11
▶ RX350/RX450h
DENSO FK20HR11
1.1 mm (0.043 in.)

Iridium-tipped spark plugs



Electrical system

▶ RX270/RX350

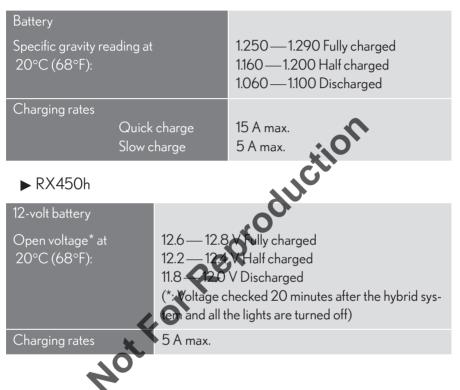

Automatic Transaxle (RX270/RX350)

Fluid capacity*	2WD	6.5 L (6.9 qt., 5.7 lmp. qt.)
	AWD	6.7 L (7.1 qt., 5.9 lmp. qt.)
Fluid type		Toyota Genuine ATF WS

*: The fluid capacity is a reference quantity. If replacement is necessary, contact your Lexus dealer.

NOTICE	2					
Automatic transmission	fluid type					
Using automatic transmission fluid other than "Toyofa Genuine ATF WS" may cause deterioration in shift quality, locking up of your transmission accompanied by vibration, and ultimately damage to the automatic transmission of your vehicle.						
Hybrid transaxle (RX450h)						
Fluid capacity * Front 4.6 L (4.9 qt., 4.0 lmp. qt.) ► Rear 1.8 L (1.9 qt., 1.6 lmp. qt.)						
Fluid type	Toyota Genuine ATF WS					

*: The fluid capacity is a reference quantity. If replacement is necessary, contact your Lexus dealer.

Transmission fluid type

Using transmission fluid other than "Toyota Genuine ATF WS" may ultimately damage the transmission of your vehicle.

6

Transfer (RX350)

Oil capacity

0.8 L (0.8 qt., 0.7 lmp. qt.)

Oil type and viscosity* Toyota Genuine Differential gear oil LT 75W-85 GL-5 or equivalent

*: Your Lexus vehicle is filled with "Toyota Genuine Differential Gear Oil" at the factory. Use Lexus approved "Toyota Genuine Differential Gear Oil" or an equivalent oil of matching quality that satisfies the above specifications. Please contact your Lexus dealer for further details.

Rear differential (RX350)

Oil capacity

Oil type and viscosity*

0.5 L (0.5 gt., 0.4 lmp. qt.)

Toyota Genuine Differential gear oil LT ZW-85 GL-5 or equivalent

*: Your Lexus vehicle is filled with "Torona Genuine Differential Gear Oil" at the factory. Use Lexus approved "Torona Genuine Differential Gear Oil" or an equivalent oil of matching quality that satisfies the above specifications. Please contact your Lexus dealer of further details.



Brakes

Pedal clearance ^{*1}	 RX270/RX350 89 mm (3.5 in.) Min. RX450h 103 mm (4.06 in.) Min.
Pedal free play	 ► RX270/RX350 1—6 mm (0.04 - 0.24 in.) ► RX450h 1—2 mm (0.04 - 0.08 in.)
Parking brake pedal travel ^{*2}	5—8 clicks
Fluid type	SAE J1703 or FMV SNo. 116DOT3
*1: Minimum pedal clearan Ibf)	ce when depressed with a force of 500 N (51 kgf, 112
* ² : Parking brake pedal tra lbf)	vel wh en de pressed with a force of 300 N (31 kgf, 67
Steering	, O *
Free play	Less than 30 mm (1.2 in.)

Tires and wheels (RX270/RX350)

► Type A

Tire size	235/60R18 103V, T165/90D18 107M (spare)				
Tire inflation pressure (front and rear) (recommended cold tire inflation pressure)	Vehicle speed	Vehicle speed Front wheel kPa (kgf/cm ² or bar, psi)			
	More than 160 km/h (100 mph)	240 (2.4, 35)	260 (2.6, 38)		
	160 km/h (100 mph) or less				
Tire inflation pressure (spare) (recommended cold tire inflation pressure)	420 kPa (4.2 kg/cm ² or bar, 60 psi)				
Wheel size	18 × 11/2J, 18 ×	4T (spare)			
Wheel nut torque	103 N•m (10.5 kg	gf•m, 76 ft•lbf)			
Not					

▶ Туре В

Tire size	235/60R18103	V			
Tire inflation pressure	Vehicle speed	Front wheel kPa (kgf/cm ² or bar, psi)	Rear wheel kPa (kgf/cm ² or bar, psi)		
(recommended cold tire inflation pressure)	More than 160 km/h (100 mph)	$\gamma_{\Lambda}(\gamma_{\Lambda},\gamma_{5})$			
	160 km/h (100 mph) or less	220 (2.2, 32)	220 (2.2, 32)		
Wheel size	18×71/2J				
Wheel nut torque	103 N•m (10.5 kgf•m, 70 tt=bf)				
▶ Туре С		001			
Tire size	235/55R19101V, T165/90D18 107M (spare)				
Tire inflation pressure	Vehicle speed	Front wheel kPa (kgf/cm ² or bar, psi)	Rear wheel kPa (kgf/cm ² or bar, psi)		
(front and rear) (recommended cold tre inflation pressure)	More than 160 km/h (100 mph)	250 (2.5, 36)	280 (2.8, 41)		
4	160 km/h (100 mph) or less	220 (2.2, 32)	220 (2.2, 32)		
Tire inflation pressure (spare) (recommended cold tire inflation pressure)	420 kPa (4.2 kgf/cm ² or bar, 60 psi)				
Wheel size	19 × 7 1/2J, 18 ×	4T (spare)			
Wheel nut torque	103 N•m (10.5 kg	gf•m, 76 ft•lbf)			

► Type D

Tire size	235/55R19101	235/55R19101V			
Tire inflation pressure	Vehicle speed	Front wheel kPa (kgf/cm ² or bar, psi)	Rear wheel kPa (kgf/cm ² or bar, psi)		
(recommended cold tire inflation pressure)	More than 160 km/h (100 mph)	250 (2.5, 36)	280 (2.8, 41)		
	160 km/h (100 mph) or less	220 (2.2, 32)	220 (2.2, 32)		
Wheel size	19 × 7 1/2J				
Wheel nut torque	103 N•m (10.5 kgf•m, 70 tt=bf)				
Not	of Rept	00-			

Tires and wheels (RX450h)

► Type A

Tire size	235/60R18 103V, T165/90D18 107M (spare)					
T . 0 //	Vehicle spee	d Front wheel kPa (kgf/cm ² or bar, psi)	Rear wheel kPa (kgf/cm ² or bar, psi)			
Tire inflation pressure (fror and rear) (recommended cold tire ir tion pressure)	I ^v lore than IC		270 (2.7, 39)			
	160 km/h (100 mph) o less	r 280 (2.3, 33)	230 (2.3, 33)			
Tire inflation pressure (spa (recommended cold tire ir tion pressure)		420 k Pa 4 .2 kgf/cm ² or bar, 60 psi)				
Wheel size	18×71/2 J,	(18 × 7 1/2 J, 18 × 4T (spare)				
Wheel nut torque	103 N•m (10	103 N•m (10.5 kgf•m, 76 ft•lbf)				
► Туре B	•					
Tire size	235/60R18103	V				
Tire inflation pressure	Vehicle speed	Front wheel kPa (kgf/cm ² or bar, psi)	Rear wheel kPa (kgf/cm ² or bar, psi)			
(recommended cold tire inflation pressure)	More than 160 km/h (100 mph)	250 (2.5, 36)	270 (2.7, 39)			
	160 km/h (100 mph) or less	230 (2.3, 33)	230 (2.3, 33)			
Wheel size	18 × 7 1/2 J					
Wheel nut torque	103 N•m (10.5 kgf•m, 76 ft•lbf)					

► Type C

Tire size	235/55R19 101V, T165/90D18 107M (spare)					
T 0	Vehicle spee	d Front wheel kPa (kgf/cm ² or bar, psi)	Rear wheel kPa (kgf/cm ² or bar, psi)			
Tire inflation pressure (fror and rear) (recommended cold tire ir tion pressure)	More than IC	260 (2.6, 38)	290 (2.9, 42)			
	160 km/h (100 mph) o less	r 230 (2 3 9)	230 (2.3, 33)			
Tire inflation pressure (spa (recommended cold tire ir tion pressure)		420 kPa (4.2 kot/cm ² or bar, 60 psi)				
Wheel size	19 × 71/X J,	19 × 71 X J, 18 × 4T (spare)				
Wheel nut torque	103 N•m (10	103 N•m (10.5 kgf•m, 76 ft•lbf)				
► Туре D	0					
Tire size	235/55R19101\	5/55R19101V				
Tire inflation pressure	Vehicle speed	Front wheel kPa (kgf/cm ² or bar, psi)	Rear wheel kPa (kgf/cm ² or bar, psi)			
(recommended cold tire inflation pressure)	More than 160 km/h (100 mph)	260 (2.6, 38)	290 (2.9, 42)			
	160 km/h (100 mph) or less	230 (2.3, 33)	230 (2.3, 33)			
Wheel size	19 × 7 1/2 J					
Wheel nut torque	103 N•m (10.5 kgf•m, 76 ft•lbf)					

Light bulbs

	Light bulbs	W	Туре
	Headlights High beam Low beam (discharge bulbs)	65 35	A B
	Front turn signal lights	21	С
	Front fog lights	55	D
Exterior	Tail lights		E
	Tail lights Rear turn signal lights Back-up lights Rear fog lights Outer foot lights Vanity lights Front interior lights	21	С
	Back-up lights	16	E
	Rear fog lights	21	E
	Outer foot lights	5	E
	Vanity lights	8	E
	Front interior lights	5	E
Interior	Rear interior lights	8	E
interior	Luggage compartment lights	5	E
	Door courtesy lights	5	E
	Footwell lights	3.8	E

A: H9 halogen bulbs

C: Wedge base bulbs (amber)

E: Wedge base bulbs (clear)

- B: D4S discharge bulbs
- D: H11 halogen bulbs

6-1. Specifications **Fuel information**

▶ RX270

Your vehicle must use only unleaded gasoline.

For optimum engine performance, select premium unleaded gasoline with a Research Octane Number of 91 or higher.

▶ RX350/RX450h

Your vehicle must use only unleaded gasoline.

Select premium unleaded gasoline with a Research Octane Number of 95 ction or higher for optimum engine performance.

Fuel tank opening for unleaded gasoline

To help prevent incorrect fueling, your Lexus has a fuel tank opening that only accommodates the special nozzle on unleaded the pumps.

■ If premium gasoline is not available (RX350/RX450h)

If this premium type cannot be obtained out and the unleaded gasoline with a Research Octane Number as low as 9

The use of such gasoline may dause the engine to knock or drastically reduce output to protect itself while driving with a heavy load. To avoid this, refill the tank with premium unleaded gasoline as soon as possible.

If your engine knocks

- Consult your Lexus dealer.
- You may occasionally notice light knocking for a short time while accelerating or driving uphill. This is normal and there is no need for concern.

▲ NOTICE

Notice on fuel quality

- Do not use improper fuels. If improper fuels are used, the engine will be damaged.
- Do not use leaded gasoline.

Leaded gasoline will cause the three-way catalytic converter to lose its effectiveness and emission control system to function improperly.

6-2. Customization Customizable features

Your vehicle includes a variety of electronic features that can be personalized to suit your preferences. Programming of these preferences can be performed by your Lexus dealer.

It is also possible to customize certain vehicle features yourself using the multi-information switches and the navigation system screen.


Some function settings are changed simultaneously with other functions being customized. Contact your Lexus dealer for further details.

Customizing vehicle features

It is possible to customize certain vehicle features using the multi-information switches.*

*: For instructions on customizing vehicle features using the navigation system screen, refer to the "Navigation System Owner's Manual".

When customizing vehicle features, ensure that the vehicle is parked in a safe place with the shift lever in P and the parking brake set.

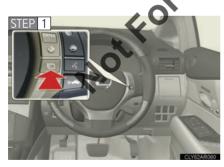

Press and hold the menu switch of the multi-information switches to display customize mode.



- Press the "∧" or "∨" switch to select the item to be customized.
- Press the "ENTER" switch to confirm.



- Press the "∧" or "∨" switch to select the desired setting for the item being customized.
- Press the ENTER" switch to

When customization is completed press the menu switch to clear the customization screen.

Customizable Features

- Vehicles with a navigation system: Settings that can be changed using the screen of the navigation system
- Vehicles with a navigation system: Settings that can be changed using the multi-information switches
- Settings that can be changed using the multi-information switches

Settings that can be changed by your Lexus dealer

Definition of symbols: O = Available, - = Not available

			Custom	9			
ltem	Function	Default setting	ize c setting	1	2	3	4
Door lock	Unlocking using a key	Driver's door unlooked in one step, all doors unlocked in two steps	All doors unlocked in one step	0	_	_	0
(→P.65, 646)	Speed-detect- ing automatic door lock func- tion	On	Off	0	_	0	0
	Shifting gears to position other than P locks all doors	Off	On	0	-	0	0

ltem	Function	Default setting	Custom- ized setting	1	2	3	4
Door lock (→P. 65, 646)	Shifting gears to P unlocks all doors	Off	On	0	_	0	0
	Opening driver's door unlocks all doors	On	Off	0	-	0	0
Smart entry & start sys- tem and wireless	Operation sig- nal (buzzer)	On	Off	8.	-	0	0
	Operation signal (emergency flashers)	On		0	_	0	0
	Operation buzzer volume	Les X	Off to level 6	0	-	0	0
remote con- trol	Time elapsed before the auto		60 sec- onds				
(→P. 49, 61)	matic door lock function is acti- vated if a door is not opened after being unlocked	30 sec- onds	120 sec- onds	0	-	0	0
Smart entry & start sys- tem	Smart door unlocking	Driver's door	All the doors	0	-	0	0
	Smart entry & start system	On	Off	0	-	0	0
(→P. 49)	Open door warning buzzer	On	Off	-	-	-	0

ltem	Function	Default setting	Custom- ized setting	1	2	3	4
Power back door (→P. 68)	Power back door opening operation using the back door opener button	Off	On	-	-	-	0
Wireless remote con- trol (→P. 61)	Unlocking oper- ation	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked it one step	0	-	0	0
	Panic function	On	Off	-	-	-	0
	Light sensor sensitivity	Standard	-2 to 2	0	-	0	0
Automatic light control system (→P. 254)	Time elapsed before the head- honts automati- cally come on	Standard	Longer	0	_	0	0
	Light reminder buzzer	On	Off	-	-	-	0
	Daytime run- ning light system	On	Off	0	-	0	0

ltem	Function	Default setting	Custom- ized setting	1	2	3	4
Illumination (→P. 446)	Time elapsed before the inte- rior lights turn off	15 seconds	7.5 sec- onds 30 sec- onds	0	_	0	0
	rior lights turn off	15 seconds	7.5 sec- onds 30 sec onds	or	_	0	0
	Operation when the doors are unlocked	On Rept	20 0#	-	-	-	0
	Operation after the "ENGINE START STOP" switch (RX210) RX350) or "POWNR" switch (RX450h) turned off	On	Off	_	_	_	0
	Operation when you approach the vehicle with the electronic key on your per- son	On	Off	_	_	_	0

ltem	Function	Default setting	Custom- ized setting	1	2	3	4
	Wireless remote control linked exterior lights when the sur- rounding area is dark	On	Off	-	-	_	0
Illumination	Sensitivity of the ambient light sensor used for dimming the meter lights etc.	Standard	oducit	0	-	_	0
(→P. 446)	Sensitivity of the ambient light sensor used for brightening the meter lights etc	Randard	-2 to 2	0	_	_	0
	Interior light contro	On	Off	0	-	0	0
	Exterior light control	On	Off	0	-	0	0
	Shift lever lights	On	Off	-	-	-	0
Seat belt reminder (→P. 599)	Vehicle speed linked seat belt reminder buzzer	On	Off	_	-	-	0

ltem	Function	Default setting	Custom- ized setting	1	2	3	4
Automatic air condi- tioning sys- tem (→P. 344)	Switching between outside air and recircu- lated air mode linked to "AUTO" switch operation	Auto	Manual	ঁ	-	-	0
	A/C auto switch operation	Auto	Manual	0	_	_	0
	Exhaust gas sen- sor sensitivity	Standard	to 3	0	-	-	0
	Driver's seat	Off					
Driving	movement when exiting the vehi- cle (on some models)	Full	Full O Partial	0	-	0	0
position memory (→P. 344)	Selecting whether the driver's door or all doors are linked to the power easy access system	Driver's door	All the doors	-	-	-	0

ltem	Function	Default setting	Custom- ized setting	11	2	3	4
	Eco Driving Indi- cator Light (RX270/ RX350)	On	Off	-	0	0	0
Meter (→P.183, 225)		On (Turns on/ off accord-	On (Stays on)	ۍ	0	0	0
223)	(RX450h)	ing to driv- ing conditions)	Off (Stavsoff)				
	SPORT lamp (RX450h)	On	Off	-	0	0	0
Multi-infor- mation dis- play (→P. 244)	Window close suggestion mode	P On	Off	-	0	0	0
	Not						

ltem	Function	Default setting	Custom- ized setting	1	2	3	4
	Mechanical key linked operation	On	Off	-	-	-	0
Power win- dows (→P. 114)	Wireless remote control linked operation	Off	On	-	-	-	0
(Wireless remote control linked opening buzzer	On	Off	, or	-	-	0
	Mechanical key linked operation	On	O CH	-	-	-	0
	Wireless remote control linked operation*	2 ⁸⁰¹	Off	-	-	-	0
Moon roof (→P. 119)	Linked operation of components when doorkey is used	Slide only	Tilt only	_	_	_	0
	Uniked operation of components when wireless remote control is used	Slide only	Tilt only	_	_	_	0

ltem	Function	Default setting	Custom- ized setting	1	2	3	4
	Buzzer volume	3	1 to 5	0	-	-	0
	Detection dis- tance of the front center sensors	Far	Near	0	_	_	0
Lexus park- ing assist- sensor	Detection dis- tance of the rear center sensors	Far	Near	ő	-	_	0
(→P. 285)	Display setting (when Lexus parking assist- sensor is operat- ing)	All sensors displayed		0	_	_	0

- *: This function cannot be customized unless power window operation using the wireless remote control is enabled:

Multi-information display (\rightarrow P. 236)

Settings that can be changed using the multi-information switches

Available languages	English, French and Chinese
Available units	km•km/L, km•L/100km

In the following situations, customize mode will automatically be turned off.

- A warning message appears after the customize mode screen is displayed.
- RX270/RX350: The "ENGINE START STOP" switch is turned off.
- RX450h: The "POWER" switch is turned off.
- The vehicle begins to move while the customize mode screen is displayed. 2et

CAUTION

- Cautions during customizatio
 - ▶ RX270/RX350

As the engine needs to be running during customization, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

▶ RX450h

As the hybrid system needs to be operating during customization, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

NOTICE


During customization

▶ RX270/RX350

To prevent 12-volt battery discharge, ensure that the engine is running while customizing features.

▶ RX450h

To prevent 12-volt battery discharge, ensure that the hybrid system is operating while customizing features.

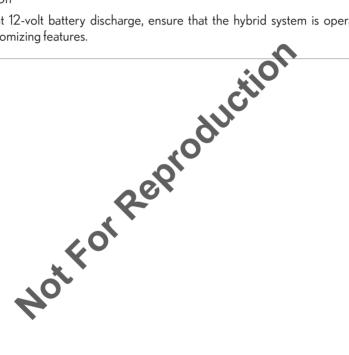

6-2. Customization Items to initialize

The following item must be initialized for normal system operation after such cases as the 12-volt battery being reconnected, or maintenance being performed on the vehicle:

ltem	When to initialize	Reference
Power back door (If equipped)	 After reconnecting or changing the 12-volt battery After changing a fuse 	P.68
Not	12-volt battery • After changing a fuse other changing a fuse oth	

Index

Ab	breviation	n list	710

- Alphabetical index.....711

For vehicles with a navigation system, refer to the "Navigation System Owner's Manual" for in ornation regarding the equipment listed below.

- Navigation system
- Air conditioning controls
- Windshield wiper de-ice
- Lexus parking assist monitor
- Audio/video system
- Rear window and utside rear view mirror defogging



Abbreviation list Abbreviation/Acronym list

ABBREVIATIONS	MEANING
2WD	2 Wheel Drive
4WD	4 Wheel Drive
A/C	Air Conditioner
ABS	Anti-lock Brake System
AFS	Adaptive Front-lighting System
AI-SHIFT	Artificial Intelligence Shift control
ALR	Artificial Intelligence Shift control Automatic Locking Retractor All Wheel Drive Child Restraint System Display
AWD	All Wheel Drive
CRS	Child Restraint System
DISP	Display
ECO	Economy/Ecology
ECT	Electronic Controlled Transmission
EDR	Event Data Recorder
ELR	Emergency Locking Retractor
EPS	Electric Power Steering
LED V	Light Emitting Diode
PCS	Pre-Crash Safety system
PWR	Power
SRS	Supplemental Restraint System
TRC	Traction Control
VDIM	Vehicle Dynamics Integrated Management
VIN	Vehicle Identification Number
VSC	Vehicle Stability Control

Alphabetical index Alphabetical index

A A/C*

Air conditioning filter533	A
Automatic air conditioning	A
system*	A
ABS	A
ACCESSORY mode 193, 199	A
Active torque control AWD	A
mode	A
Adaptive front lighting system255	
AFS255	
Air conditioning filter533	
Air conditioning system*	
Air conditioning filter533	
system*	D
Automatic air conditioning system*	
Airbag operating conditions	
Airbag precautions for your	
child153	
Airbag warning light	
Curtain shield airbag	
operating constitions150	
Curtain shield airbag	
precautions	
General airbag precautions 153	
Locations of airbags147	
Modification and disposal of	
airbags157	
Proper driving posture145, 153	
Side airbag operating	
conditions	
Side airbag precautions	
SRS airbags	
- 5-	

Alarm	137
All-wheel drive lock system	
Antenna	
Anti-lock brake system	
Armrest	
Assist grips	472
Audio input	410
Audio system*	
Antenna	
Antenna Audio inputa AUXuot	
AUX port	
Bluetooth [®] audio system.	
CD player/changer	
Hands-free system for	
mobile phone	
iPod	
MP3/WMA disc	
Optimal use	
Portable audio device	
Radio	
Steering wheel audio swite	ch 412
USB memory	
USB port	.376, 385

	Automatic air conditioning system*	
	Air conditioning filter533	
	Automatic air conditioning	
	system*	
	Automatic headlight leveling	
	system	
	Automatic light control system254	
	Automatic transmission	
	Automatic transmission	
	If the shift lever cannot	
	be shifted from P644	
	S mode211	
	AUX port	
	Auxiliary boxes	
		•
В	Back door	
	Back door	
	Wireless remote control	
	Back-up lights	
	Replacing light bulks, 9.567	
	Wattage	
	Battery	
	Checking	
	Hybrid battery	
	(traction battery)	

If the vehicle has discharged

Preparing and checking

12-volt battery......650, 655

	Bluetooth [®] audio*	
	Bluetooth [®] phone*	415
	Bottle holders	
	Brake	
	Emergency brake signal	303
	Parking brake	
	Brake assist	
	Break-in tips	
	$\mathbf{\Lambda}$	
С	Card key	
	Care	
	Exterio	
	Interior	
	Seat belts	
3	Cargo hooks	475
	CD changer	
	CD	
	MP3 disc	
	WMA disc	
	CD player	
	Chains	

Child restraint system

Baby (Infant) seats, definition	158
Baby (Infant) seats, installation	166
Child (Convertible) seats,	
definition	158
Child (Convertible) seats,	
installation	166
Installing CRS with anchor	
fitting	172
Installing CRS with ISOFIX	
rigid anchor	171
Installing CRS with seat belts	167
Junior (Booster) seats,	
definition	158
Junior (Booster) seats,	
installation	166
Child safety	- C
Airbag precautions	
Back door precautions	75
Child restraint system	
Child-protectors	66
How your child should wear	
the seat belt	100
Installing child restraints	166
Moon roof precautions	122 D
Power window lock switch	114
Power window precautions	118
Removed electronic key battery	
precautions	537
Seat belt comfort guide	98
Seat belt precautions	101
Seat heater precautions	469
12-volt battery	
precautions	, 524

	Child-protectors	66
	Cleaning	
	Exterior	
	Interior	485
	Seat belts	486
	Clock*	461
	Coat hooks	471
	Coin holder	457
	Condenser	514
	Console box	455
	Coolant	
	Enginercoolant50)9, 511
	Rower control unit coolant	511
	Cooling system	
2	Engine overheating	660
	Hybrid system overheating	663
	Cornering assist sensors	285
	Cruise control	
	Cruise control	266
	Dynamic radar cruise control	271
	Cup holders	452
	Curtain shield airbags	147
	Customizable features	695
D	Daytime running light system	256
	Defogger*	
	Rear window	352
	Side mirrors	352
	Dimensions	674
	Display	
	Energy flow	
	Multi-information display	
	Trip information	
	Warning message	

Do-it-yourself maintenance	
Door courtesy lights	
Door courtesy lights446	
Wattage693	
Door lock	
Back door68	
Side door65	
Wireless remote control61	
Door pockets	
Doors	
Back door68	
Door lock	
Door windows114	
Double locking system135	
Power back door68	
Side door	
Side mirrors	
Driver's seat belt reminder light	
Driving	
Break-in tips	
Correct posture	
Procedures	
Utility vehicle precautions319, 324	
Winter driving tips	
Driving position memory	

Electric power steering	303
Electric sunshade	123
Electronic features control	236
Electronic key	
If the electronic key does not	
operate properly	.646
Emergency brake signal	303
Emergency flashers	
Switch	586
Emergency, in case of	
If a warning buzzer sounds	.596
If a warning light turns on	596
ta warning message is	
displayed	.602
If the back door opener is	
inoperative	74
If the electronic key does not	
operate properly	.646
If the engine will not start	640
If the hybrid system will not	
start	.642
If the shift lever cannot	
be shifted from P	.644
If the vehicle has discharged	
12-volt battery650,	655
If you have a flat tire	627
lf you lose your keys	.645
If you think something is	
wrong	594

If your vehicle becomes
stuck
If your vehicle has to be
stopped in an emergency670
If your vehicle needs to be
towed
lf your vehicle overheats660, 663
Engine
Accessory mode193, 199
Compartment
Engine switch193
Hood
How to start the engine193
How to start the hybrid system 199
Identification number
If the engine will not start
If the hybrid system will not
start
Ignition switch
Overheating
"POWER" switch
Engine compartment cover
Engine coolant
Capacity
Checking
Preparing and checking
before winter
Engine coolant temperature
gauge225
Engine immobilizer system131
Engine oil
Capacity
Checking
Preparing and checking
before winter

	EPS	
	EV drive mode	
	Event data recorder	
F	Floor mat	473
	Fluid	
	Washer	
	Fog lights	
	Replacing light bulbs	
	Switch	258
	Wattage.	693
	Footwell light	
	Fronthog lights	
	Replacing light bulbs	
$\boldsymbol{\mathcal{C}}$	Switch	258
	Wattage	
	Front passenger's seat belt	
	reminder light	
	Front position lights	
	Replacing light bulbs	
	Switch	
	Front seats	
	Adjustment	
	Driving position memory	
	Flatting seatbacks	
	Front turn signal lights	
	Replacing light bulbs	
	Wattage	693
	1	

	Fuel	ŀ
	Capacity677	
	Fuel gauge225	
	Fuel pump shut off system	
	Information694	
	Refueling125	
	Туре694	H
	Fuel consumption*	
	Fuel door	
	Fuel filler door	
	Fuel pump shut off system595	H
	Fuses	H
		ł
G	Gas station information	
	Gauges	2
	Glove box	H
		ŀ
Н	Hands-free system for	
	mobile phone*	
	Hazard lights	
	Switch	
	Head restraints	
	Adjustment	H
	Headlight cleaner	
	Headlights	
	Discharge headlight	
	precautions	
	Replacing light bulbs	
	Switch	
	Wattage	ŀ
	••• dildge	

Head-up display	
Display contrast adjustment	
switch	249
Display position adjustment	
switch	249
Head-up display main switch	.249
Heaters	
Seat heaters	.468
Side mirrors*	352
Steering wheels	466
Hill-startassist control	303
Hood	
Hooks	
Cargo	475
Coat	471
Horn	224
HUD	
Display contrast adjustment	
switch	249
Display position adjustment	
switch	249
Head-up display main switch	.249
Hybrid system	
Emergency shut off system	32
Energy monitor/consumption	
screen	37
High voltage components	31
Hybrid system indicator	228
"POWER" switch	199
Hybrid transmission	
Hybrid transmission	215
If the shift lever cannot	
be shifted from P	.644
S mode	219

Identification	J
Engine676	
Vehicle675	
Ignition switch193, 199	
Illuminated entry system	
Immobilizer system131, 133	К
Indicator lights230	
Initialization	
Item to initialize708	
Inside rear view mirror108	
Instrument panel light control	
buttons	
Interior lights	
Interior lights446	
Switch	_ _
Wattage693	0
iPod*	
~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	-
lotfort	
20	

495
.627
.627
61
44
193
646
645
44
61
44
44
199
61

*: For vehicles with a navigation system, refer to the "Navigation System Owner's Manual"

L	Lexus parking assist monitor*		Μ
	Light bulbs		
	Replacing	567	
	Wattage	693	
	Lights		
	Door courtesy lights	446	
	Emergency flasher switch	586	
	Fog light switch	258	
	Hazard light switch	586	
	Headlight switch	254	
	Interior light switch	447	
	Luggage compartment light	72	
	Outer foot lights	446	
	Overhead courtesy light	446	
	Personal light switch	447	
	Replacing light bulbs	567	$\mathbf{O}$
	Scuff lights		X
	Shift lever lighting		
	Turn signal lever		
	Vanity lights		
		693	
	Lock steering column	202	
	Luggage compartment lights		
	Switch	72	
	Wattage	693	
	Luggage cover	475	

Μ	Maintenance	
	Do-it-yourself maintenance.	
	Maintenance data	674
	Maintenance requirements	488
	Meter	
	Instrument panel light contro	ol227
	Meters	225
	Mirrors	
	Inside rear view mirror	108
	Side mirror heaters*	
	Side mirrors	111
	Vanity mirrors	460
	Moon roof	119
	MP3 disc*	
3	Multi-display light control	463
	Multi-information display	
	Switches	
	Trip information	242
	Window close suggestion	
	mode	244

0	Odometer	225	Ρ
	Oil		
	Engine oil	503	
	Opener		
	Back door		
	Fuel filler door	125	
	Hood	494	
	Outer foot lights		
	Outer foot lights	446	
	Wattage	693	
	Outside rear view mirrors		
	Adjusting and folding		
	Mirror position memory		
	Outside temperature display*	462	
	Overhead courtesy lights		20
	Overhead courtesy lights	446	
	Wattage		5
	Overheating, Engine		
	Overheating, Hybrid system		
	X		
	20		

Ρ	Paddle shift switches	
	Parking assist sensors*	
	Parking brake	
	PCS	
	Personal lights	
	Switch	
	Phone*	415
	Power back door	
	Power control unit coolant	
	Capacity	
	Checking	
	Preparing and checking	
	before winter	
	Power easy access system	
20	Power outlet	
	"POWER" switch	
	Power windows	114
	Pre-crash safety system	

Radar cruise control	271	S
Radiator	514	
Radio*	357	
Rear fog lights		
Replacing light bulbs	567	
Switch	258	
Wattage	693	
Rear seat		
Folding down		
Seat adjustment		
Rear turn signal lights		
Replacing light bulbs	567	
Wattage	693	
Rear window defogger*	352	
Rear window wiper		3
Remote touch*		$\mathbf{S}$
Replacing	~0	5
Electronic key battery		
Fuses	38, 550	
Light bulbs		
	627	
Wireless remote control		
	536	
Roof luggage carrier		

Scuff light
Seat belts
Adjusting the seat belt97
Automatic locking retractor 100
Child restraint system
installation166
Cleaning and maintaining
the seat belts486
Emergency locking retractor 100
How to wear your seat belt97
How your child should wear
the seat belt 100
Pregnant women,
proper seat belt use 101
Reminder light599
Seat belt pretensioners
Seat heaters
Seat position memory89
Seat ventilators

S

Seats		
Adjustment	81, 85	
Adjustment precautions	84, 87	
Child seats/child restraint		
system installation		
Cleaning		
Flatting seat backs		
Head restraint	95	
Power easy access system		
Properly sitting in the seat	145	
Seat heaters	468	
Seat position memory		
Seat ventilators	468	
Service reminder indicators	230	
Shift lever		9
Automatic transmission		
Hybrid transmission		
If the shift lever cannot		
be shifted from P	644	
Shift lever light		
Shift lock system	644	
Side airbags	147	


Side mirror
Adjusting and folding111
Mirror position memory
Side monitor*
Smart entry & start system
Entry function49
Starting the hybrid system199
Spare tire
Inflation pressure
Storage location627
Spark plug
Specifications674
Speedometer
Steering
Column lock release
Steering wheel
Adjustment104
Audio switches*
Heated steering wheel
Power easy access system92
Steering wheel position
memory
Storage feature
Stuck vehicle
If your vehicle becomes
stuck668

Sun visors	459	Τ
Sunshades	120	
Switch		
Display contrast adjustment		
switch	249	
Display position adjustment		
switch	249	
Driving mode selector switch	217	
ECT switch	210	
Emergency flasher switch	586	
Engine switch	193	
ENTER switch	236	
Fog light switch	258	
Hazard light switch	586	
Head-up display main switch	249	3
Heated steering wheel switch	466	
Ignition switch193	3,190	
Light switches	254	
Menu switch	236	
Paddle shift switches	208	
Power back door switch	68	
Power door lock switch		
"POWER" switch	199	
Power window switch	114	
Rear window wiper and		
washer switch	263	
Window lock switch	114	
Wiper and washer switch	259	

l ail lights	
Replacing light bulbs	
Switch	
Wattage	
Talk switch*	
Telephone*	415
Telephone switch*	
Theft deterrent system	
Alarm	
Double looking system	135
Immobilizer system	131, 133
Tire inflation pressure	
Tires	
Chains	
Checking	
If you have a flat tire	627
Inflation pressure	
Replacing	
Rotating tires	
Size	688, 691
Snow tires	
Spare tire	
Tools	627
Towing	
Emergency towing	
Trailer towing	
Traction control	
Trailer towing	

	TRC	3	W
	Trip information display236	Ś	
	Trip meter225	5	
	Turn signal lights		
	Replacing light bulbs	7	
	Switch	2	
	Wattage693	3	
		-	
0	Under tray458		
	USB port	)	
V	Vanity lights		
	Vanity lights	)	
	Wattage693	3	
	Vanity mirrors460		$\mathbf{C}$
	VDIM	3	
	Vehicle data recordings2	0	
	Vehicle dynamics integrated	•	
	management	3	
	Vehicle identification number 675	5	
	Vehicle stability control	3	
	VSC		

Warning buzzers
Brake system596
Open door599
Seat belt reminder599
Warning lights
Anti-lock brake system597
Brake assist system
Brake system596
Charging system
Electric power steering
Low fue Nevel
Malunction indicator lamp
Master warning light
Open door
Pre-crash safety system
Pretensioners
Seat belt reminder light599
Slip indicator
SRS airbags
Warning messages
Adaptive front lighting system 604
Anti-lock brake system604
Automatic transmission fluid604
AWD system
Brake lamp system604
Brake system602
Dynamic radar cruise control
system604, 608
Electric power steering604
Engine oil level608
Engine oil pressure603
Engine overheat608
Headlight leveling604
Hood608

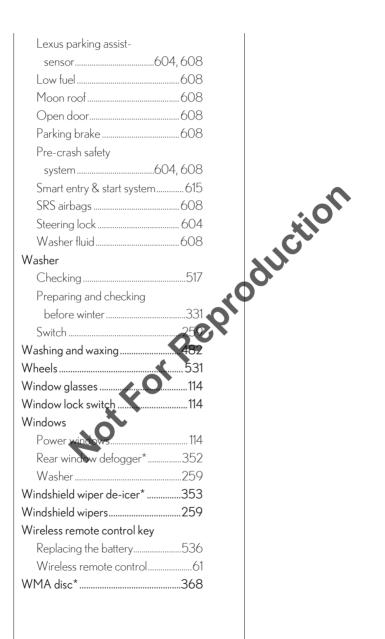

## What to do if... What to do if...





The vehicle is stuck in mud or sand



A warning light or indicator light comes on


96 If a warning light turns on





#### ■Warning lights



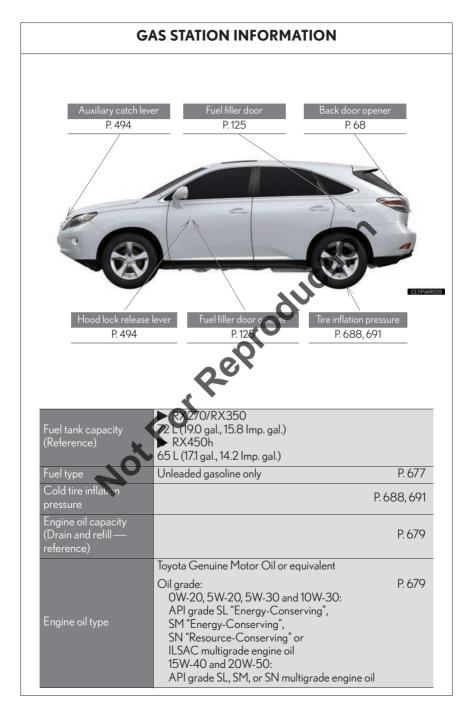

# スQ-4

NotforReproduction

Publication No, OM48C08E Part No, 01999-48C08 Printed in Japan 01-1203-00 ( RX 450h / RX 350 / RX 270 (豪州E)